

2007 Service Manual



9.9, 15 HP

Johnson® 2 Stroke

Johnson®



BRP US Inc.
Technical Publications
250 Sea Horse Drive
Waukegan, Illinois 60085 United States

EVINRUDE
Johnson



- † AMP, Superseal 1.5, Super Seal, Power Timer, and Pro-Crimper II are registered trademarks of Tyco International, Ltd.
- † Amphenol is a registered trademark of The Amphenol Corporation.
- † Champion is a registered trademark of Federal-Mogul Corporation.
- † Deutsch is a registered trademark of The Deutsch Company.
- † Dexron is a registered trademark of The General Motors Corporation.
- † Fluke is a registered trademark of The Fluke Corporation
- † Frahm is a registered trademark of James G. Biddle Co.
- † Gasoila is a registered trademark of The Federal Process Corporation.
- † GE is a registered trademark of The General Electric Company.
- † GM is a registered trademark of The General Motors Corporation.
- † Loctite and Locquic are registered trademarks of The Henkel Group.
- † Lubriplate is a registered trademark of Fiske Brothers Refining Company.
- † NGK is a registered trademark of NGK Spark Plugs (U.S.A.) Inc.
- † NMEA is a registered trademark of the National Marine Electronics Association.
- † Oetiker is a registered trademark of Hans Oetiker AG Maschinen.
- † Packard is a registered trademark of Delphi Automotive Systems.
- † Permatex is a registered trademark of Permatex.
- † Plastigage is a registered trademark of The Dana Corporation.
- † STP is a registered trademark of STP Products Company.
- † Snap-on is a registered trademark of Snap-on Technologies, Inc.
- † ThreeBond is a registered trademark of Three Bond Co., Ltd.



Bombardier logo is a registered trademark of Bombardier, Inc., used under license.

The following trademarks are the property of BRP US Inc. or its affiliates:

Carbon Guard™

DPL™ Lubricant

Evinrude®

Evinrude® *E-TEC*™

Evinrude® / *Johnson*® *XD30*™ Outboard Oil

Evinrude® / *Johnson*® *XD50*™ Outboard Oil

Evinrude® / *Johnson*® *XD100*™ Outboard Oil

Extreme Pressure Grease™

FasTrak™

Gel-Seal II™

Hi-Vis™ Gearcase Lubricant

Johnson®

Moly Lube™

Nut Lock™

QuikStart™

S.A.F.E.™

S.L.O.W.™

Screw Lock™

SystemCheck™

Triple-Guard® Grease

Twist-Grip™

2+4® *Fuel Conditioner*

Ultra™ *4-Stroke* Outboard Oil

HPF XR™ Gearcase Lubricant

Ultra Lock™

SAFETY INFORMATION

Before working on any part of the outboard, read the SAFETY section at the end of this manual.

This manual is written for qualified, factory-trained technicians who are already familiar with the use of *Evinrude®/Johnson®* Special Tools. This manual is not a substitute for work experience. It is an organized guide for reference, repair, and maintenance of the outboard(s).

This manual uses the following signal words identifying important safety messages.

	DANGER	
Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.		

	WARNING	
Indicates a potentially hazardous situation which, if not avoided, CAN result in severe injury or death.		

	CAUTION	
Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate personal injury or property damage. It also may be used to alert against unsafe practices.		

IMPORTANT: Identifies information that will help prevent damage to machinery and appears next to information that controls correct assembly and operation of the product.

These safety alert signal words mean:

ATTENTION!
BECOME ALERT!
YOUR SAFETY IS INVOLVED!

Always follow common shop safety practices. If you have not had training related to common shop safety practices, you should do so to protect yourself, as well as the people around you.

It is understood that this manual may be translated into other languages. In the event of any discrepancy, the English version shall prevail.

To reduce the risk of personal injury, safety warnings are provided at appropriate times throughout the manual.

DO NOT make any repairs until you have read the instructions and checked the pictures relating to the repairs.

Be careful, and never rush or guess a service procedure. Human error is caused by many factors: carelessness, fatigue, overload, preoccupation, unfamiliarity with the product, and drugs and alcohol use, to name a few. Damage to a boat and outboard can be fixed in a short period of time, but injury or death has a lasting effect.

When replacement parts are required, use *Evinrude/Johnson Genuine Parts* or parts with equivalent characteristics, including type, strength and material. Using substandard parts could result in injury or product malfunction.

Torque wrench tightening specifications must be strictly followed. Replace any locking fastener (locknut or patch screw) if its locking feature becomes weak. Definite resistance to turning must be felt when reusing a locking fastener. If replacement is specified or required because the locking fastener has become weak, use only authorized *Evinrude/Johnson Genuine Parts*.

If you use procedures or service tools that are not recommended in this manual, YOU ALONE must decide if your actions might injure people or damage the outboard.



DANGER



Contact with a rotating propeller is likely to result in serious injury or death. Assure the engine and prop area is clear of people and objects before starting engine or operating boat. Do not allow anyone near a propeller, even when the engine is off. Blades can be sharp and the propeller can continue to turn even after the engine is off. Remove propeller before servicing and when running the outboard on a flushing device.

DO NOT run the engine indoors or without adequate ventilation or permit exhaust fumes to accumulate in confined areas. Engine exhaust contains carbon monoxide which, if inhaled, can cause serious brain damage or death.



WARNING



Wear safety glasses to avoid personal injury, and set compressed air to less than 25 psi (172 kPa).

The motor cover and flywheel cover are machinery guards. Use caution when conducting tests on running outboards. **DO NOT** wear jewelry or loose clothing. Keep hair, hands, and clothing away from rotating parts.

During service, the outboard may drop unexpectedly. Avoid personal injury; always support the outboard's weight with a suitable hoist or the tilt support bracket during service.

To prevent accidental starting while servicing, disconnect the battery cables at the battery. Twist and remove all spark plug leads.

The electrical system presents a serious shock hazard. **DO NOT** handle primary or secondary ignition components while outboard is running or flywheel is turning.

Gasoline is extremely flammable and highly explosive under certain conditions. Use caution when working on any part of the fuel system.

Protect against hazardous fuel spray. Before starting any fuel system service, carefully relieve fuel system pressure.

Do not smoke, or allow open flames or sparks, or use electrical devices such as cellular phones in the vicinity of a fuel leak or while fueling.

Keep all electrical connections clean, tight, and insulated to prevent shorting or arcing and causing an explosion.

Always work in a well ventilated area.

Replace any locking fastener (locknut or patch screw) if its locking feature becomes weak. Definite resistance to tightening must be felt when reusing a locking fastener. If replacement is indicated, use only authorized replacement or equivalent.

TABLE OF CONTENTS

SECTION	PAGE
INTRODUCTION	5
1 SERVICE SPECIFICATIONS AND SPECIAL TOOLS ..	17
2 INSTALLATION AND PREDELIVERY	31
3 MAINTENANCE	49
4 ELECTRICAL	67
5 IGNITION	85
6 FUEL SYSTEM	103
7 POWERHEAD	119
8 MIDSECTION	147
9 GEARCASE	163
10 MANUAL STARTER	183
SAFETY	S-1
INDEX	Index-1
DIAGRAMS	

INTRODUCTION

CONTENTS

MODELS COVERED IN THIS MANUAL	6
IDENTIFYING MODEL AND SERIAL NUMBERS	6
MODEL DESIGNATION	7
TYPICAL PAGE – A	8
TYPICAL PAGE – B	9
TYPICAL PAGE – C	10
TYPICAL PAGE – D	11
ABBREVIATIONS USED IN THIS MANUAL	12
UNITS OF MEASUREMENT	12
LIST OF ABBREVIATIONS	12
ENGINE EMISSIONS INFORMATION	13
MANUFACTURER'S RESPONSIBILITY	13
DEALER'S RESPONSIBILITY	13
OWNER'S RESPONSIBILITY	13
EPA EMISSION REGULATIONS	13
PRODUCT REFERENCE AND ILLUSTRATIONS	14
SYMBOLS	14
ELECTRICAL	14
VALUES	15
NOTES	16

INTRODUCTION

MODELS COVERED IN THIS MANUAL


MODELS COVERED IN THIS MANUAL

This manual covers service information on *Johnson* 9.9 and 15 HP 2-Stroke models.

Model Number	Start	Shaft	Steer
J10RSUR	Rope	15"	Tiller
J10RLSUR	Rope	20"	Tiller
J15RSUA	Rope	15"	Tiller
J15RLSUA	Rope	20"	Tiller
J15RTSUR	Rope	15"	Tiller


Identifying Model and Serial Numbers

Outboard model and serial numbers are located on the swivel bracket and on the powerhead.

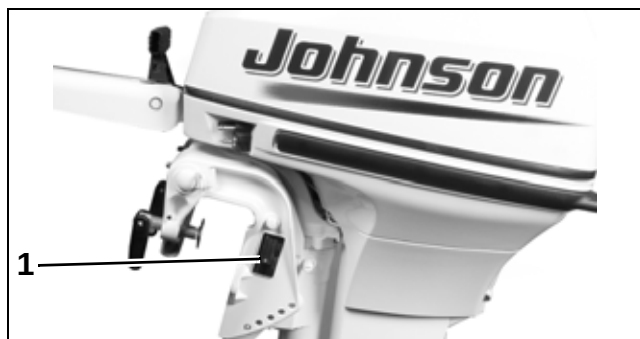

9.9/15 HP Swivel Bracket
1. Model and serial number


000820

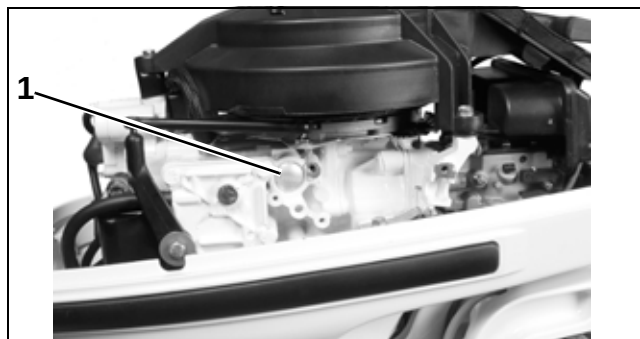

9.9/15 HP Powerhead
1. Serial number

000821

MODEL DESIGNATION

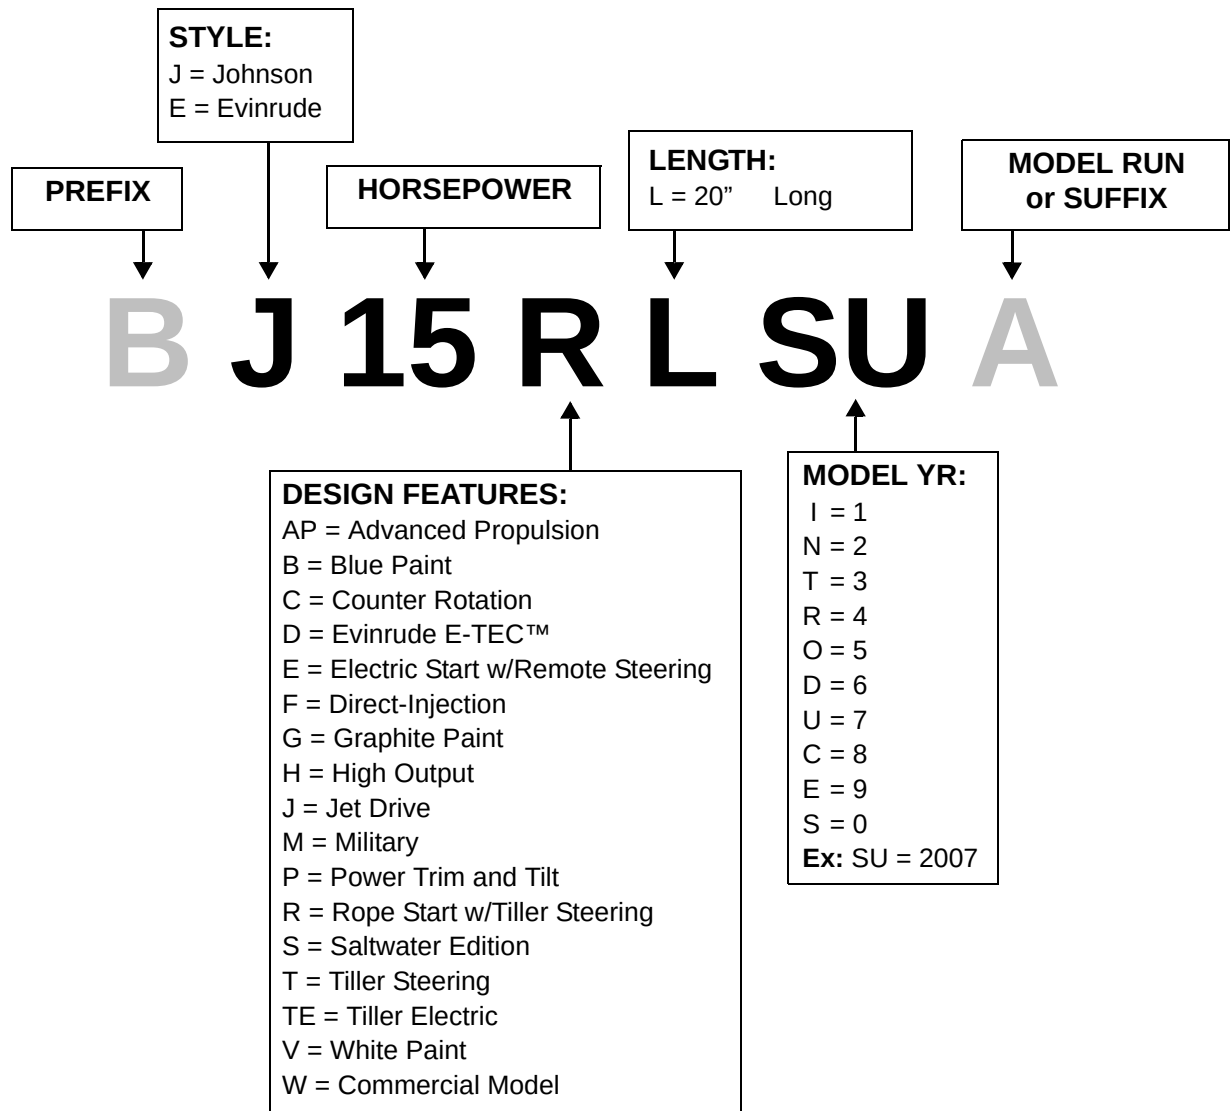

TYPICAL PAGE – A



TYPICAL PAGE – B

Section Title


INSTALLATION AND PREDELIVERY
OUTBOARD RIGGING PROCEDURE

Subsection Title

Cable, Hose, and Wire Routing

Route all hoses, control cables, and wiring through a protective sleeve or conduit into the boat and through the grommet.

Refer to the following diagram to ensure proper positioning of rigging components in grommet.

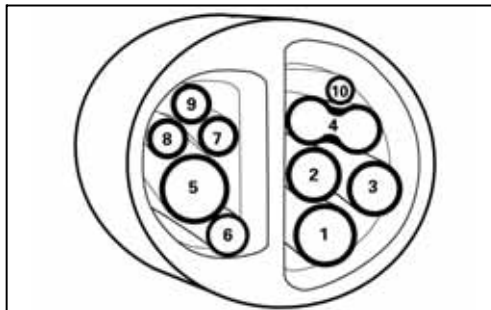

000084


1. Fuel supply hose
2. Oil return hose
3. Oil supply hose
4. Battery cables
5. Main wire harness (MWS)
6. Throttle cable
7. Shift cable
8. Oil tank sending unit harness
9. Water pressure hose
10. Accessory charge wire

Model specific
illustrations
designated with
image captions

Connect outboard main wire harness to boat main wire harness.

Before installing electrical connectors, check that the seal is in place. Clean off any dirt from connectors. Apply a light coat of *Electrical Grease™* to the seal. Push connectors together until latched.

Products and
lubricants italicized

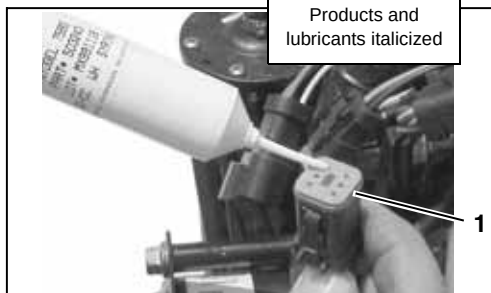


1. Seal

DP0824

If a water pressure gauge is to be used, install the water pressure hose fitting in the cylinder block. Use *Pipe Sealant with Teflon* (P/N 910048) on the threads of the hose fitting. Refer to installation instructions supplied with gauge.


Route the water pressure hose through cover grommet with oil tank sending unit harness. Route hose along battery cables toward the back of the powerhead. Use tie straps to fasten in place.

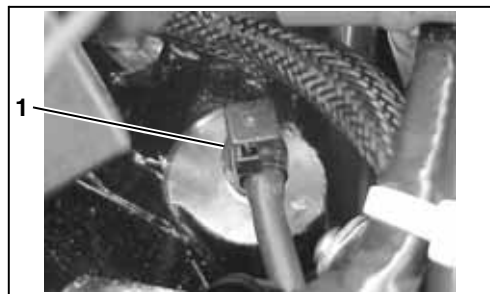

V4 Models

1. Water pressure fitting location: top, starboard side of cylinder/crankcase assembly, below throttle position sensor.

DP0827

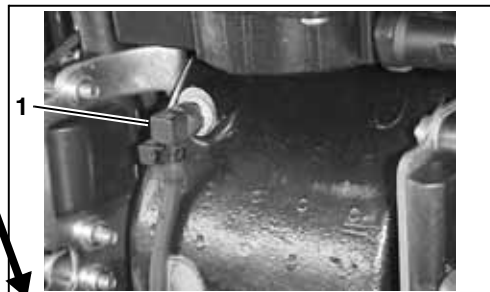

V6 Models

1. Water pressure fitting location: rear of cylinder/crankcase assembly

DP0828

If temperature gauge is to be used, route sending unit wire through grommet with hose for water pressure gauge. Follow the path of battery cables. Provide adequate length to reach cylinder head. Refer to installation instructions supplied with gauge.

2

TYPICAL PAGE – C

POWERHEAD
INSTALLATION

IMPORTANT: The motor mount, washer, and screw are serviced as an assembly. Do not disassemble.

Denotes necessary step or information to prevent damage or control correct procedure



39820

Installation


Place mount assemblies in position, with flats facing away from each other.



49557

Apply *Extreme Pressure Grease* to all sides of retainer and install between mounts.

Apply *Nut Lock* to retainer screw, install the screw, and torque to 15 to 20 ft. lbs. (20 to 27 N·m).

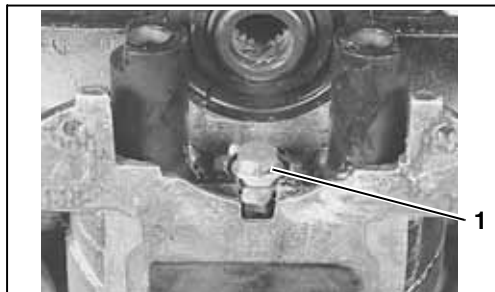

1. Mount retainer screw

49556

INSTALLATION

V4 MODELS

Install base gasket d
No. 2 or Gasket Sealin

Title in italics indicates a procedure concerning a particular model


Permatex

V6 MODELS

Apply *Permatex No. 2* exhaust housing flange base gasket with *Gasket*

Title indicates the procedure specific to V4 Models is finished. From this point, this particular procedure concerns V6 Models.

inner a new d.

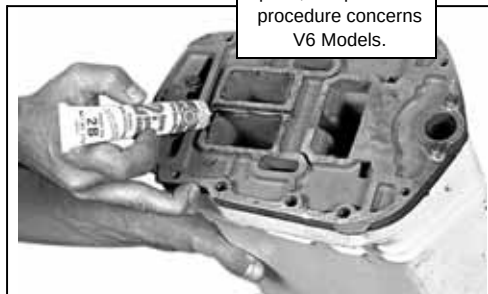

23079

ALL MODELS

Install a new base ga

Title indicates from this point, All Models are concerned

ensure proper sealing, mating surfaces must be clean and free of oil, grease, and foreign matter.



23497


Coat the driveshaft splines with *Moly Lube*. Do not apply lubricant to end of driveshaft.

TYPICAL PAGE – D

OILING SYSTEM
COMPONENTS

Two pulse hoses connect the pump to pulse fittings on the front of the cylinder/crankcase.

- **V4 Models** – cylinders 1 and 3
- **V6 Models** – cylinders 1 and 4

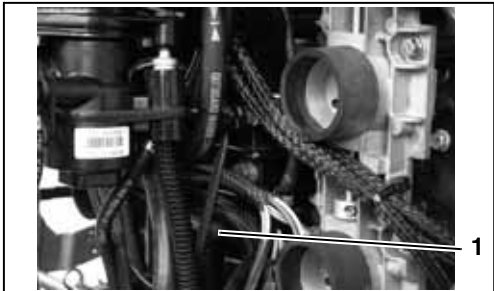

TYPICAL
1. Lower pulse hose

000721


Typical illustration for lower pulse hose of V4 or V6 Models

Oil injector-manifold distributes the oil supplied by the oil lift pump. A pressure-sensing switch monitors oil injection pressure.

Oil Injector-Manifold Components

- 40 V oil injector
- Oil distribution manifold
- Oil pressure switch
- Pressure regulator (oil return hose)
- Oil distribution hoses
- Oil to fuel check valve

Cross references direct readers to related topics

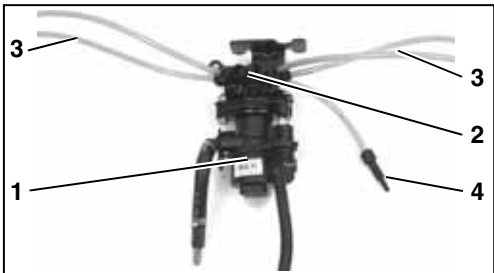


TYPICAL
1. Oil injector
2. Oil distribution manifold
3. Oil distribution hoses
4. Oil to fuel check valve

000722

Oil Pressure Switch

The oil pressure switch is located in the oil injector-manifold and reacts to changes in oil manifold pressure. The *EMM* supplies and monitors electrical current to the switch.

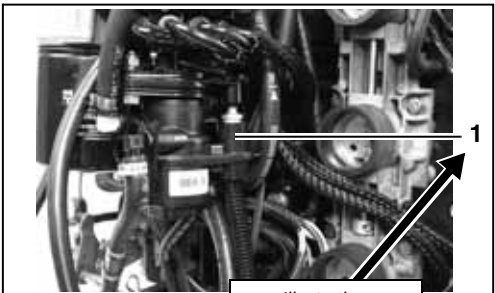

TYPICAL
1. Oil pressure switch

000723

The switch opens or closes in response to oil manifold pressures:

53 psi (365 kPa) (nominal) to close
43 psi (296 kPa) (nominal) to reopen

Refer to **Oil Pressure Switch Test** on p. 224.

Service Code 38

A faulty electrical circuit or an inoperative pressure switch activates service code 38 (no oil sensor feedback or lack of oil pressure) and the *EMM*:

Activates the <i>System Check</i> "NO OIL" light
Stores a service code
Initiates <i>S.L.O.W.</i>

Service Code 39

If no oil pressure is detected during startup, the *EMM* initiates an oil injector "recovery mode" to pressurize the system. If inadequate oil pressure is still detected after the recovery mode is completed, the *EMM*:

Activates the <i>System Check</i> "NO OIL" light
Stores a service code
Initiates <i>S.L.O.W.</i>

Illustration components numbered to correspond to image

8

Section tabs allow for quicker reference when thumbing through manual

INTRODUCTION

ABBREVIATIONS USED IN THIS MANUAL

ABBREVIATIONS USED IN THIS MANUAL

Units of Measurement

A	Amperes
amp-hr	Ampere hour
fl. oz.	fluid ounce
ft. lbs.	foot pounds
HP	horsepower
in.	inch
in. Hg	inches of mercury
in. lbs.	inch pounds
kPa	kilopascals
ml	milliliter
mm	millimeter
N·m	Newton meter
P/N	part number
psi	pounds per square inch
RPM	revolutions per minute
°C	degrees Celsius
°F	degrees Fahrenheit
ms	milliseconds
μs	microseconds
Ω	Ohms
V	Volts
VAC	Volts Alternating Current
VDC	Volts Direct Current

List of Abbreviations

ABYC	American Boat & Yacht Council
ATDC	after top dead center
AT	air temperature sensor
BPS	barometric pressure sensor
BTDC	before top dead center
CCA	cold cranking amps
CPS	crankshaft position sensor
DI	Direct-Injection
ECU	electronic control unit
EMM	engine management module
ICOMIA	International Council of Marine Industry Associations
MCA	marine cranking amps
MWS	modular wiring system
NMEA	National Marine Electronics Assoc.
NTC	negative temperature coefficient
PDP	power distribution panel
PTC	positive temperature coefficient
ROM	read only memory
S.A.F.E.™	speed adjusting failsafe electronics
SAC	start assist circuit
SAE	Society of Automotive Engineers
S.L.O.W.™	speed limiting operational warning
SYNC	synchronization
TDC	top dead center
TPS	throttle position sensor
WOT	wide open throttle
WTS	water temperature sensor

ENGINE EMISSIONS INFORMATION

Maintenance, replacement, or repair of the emission control devices and systems may be performed by any marine SI (spark ignition) engine repair establishment or individual.

Manufacturer's Responsibility

Beginning with 1999 model year outboards, manufacturers of marine outboards must determine the exhaust emission levels for each outboard horsepower family and certify these outboards with the United States of America Environmental Protection Agency (EPA). An emissions control information label, showing emission levels and outboard specifications, must be placed on each outboard at the time of manufacture.

Dealer's Responsibility

When performing service on all 1999 and more recent *Evinrude/Johnson* outboards that carry an emissions control information label, adjustments must be kept within published factory specifications.

Replacement or repair of any emission related component must be executed in a manner that maintains emission levels within the prescribed certification standards.

Dealers are not to modify the outboard in any manner that would alter the horsepower or allow emission levels to exceed their predetermined factory specifications.

Exceptions include manufacturer's prescribed changes, such as altitude adjustments, for example.

Owner's Responsibility

The owner/operator is required to have outboard maintenance performed to maintain emission levels within prescribed certification standards.

The owner/operator is not to, and should not allow anyone to, modify the outboard in any manner that would alter the horsepower or allow emissions levels to exceed their predetermined factory specifications.

Tampering with the fuel system to change horsepower or modify emission levels beyond factory settings or specifications will void the product warranty.

EPA Emission Regulations

All new 1999 and more recent *Evinrude/Johnson* outboards are certified to the EPA as conforming to the requirements of the regulations for the control of air pollution from new watercraft marine spark ignition outboards. This certification is contingent on certain adjustments being set to factory standards. For this reason, the factory procedure for servicing the product must be strictly followed and, whenever practical, returned to the original intent of the design. The responsibilities listed above are general and in no way a complete listing of the rules and regulations pertaining to the EPA requirements on exhaust emissions for marine products. For more detailed information on this subject, you may contact the following locations:

VIA U.S. POSTAL SERVICE:

Office of Mobile Sources
Engine Programs and Compliance Division
Engine Compliance Programs Group (6403J)
401 M St. NW
Washington, DC 20460

VIA EXPRESS or COURIER MAIL:

Office of Mobile Sources
Engine Programs and Compliance Division
Engine Compliance Programs Group (6403J)
501 3rd St. NW
Washington, DC 20001

EPA INTERNET WEB SITE:

www.epa.gov

INTRODUCTION

PRODUCT REFERENCE AND ILLUSTRATIONS

PRODUCT REFERENCE AND ILLUSTRATIONS


BRP US Inc. reserves the right to make changes at any time, without notice, in specifications and models and also to discontinue models. The right is also reserved to change any specifications or parts, at any time, without incurring any obligation to equip same on models manufactured prior to date of such change. Specifications used are based on the latest product information available at the time of publication.

The continuing accuracy of this manual cannot be guaranteed.

All photographs and illustrations used in this manual may not depict actual models or equipment, but are intended as representative views for reference only.

Certain features or systems discussed in this manual might not be found on all models in all marketing areas.

All service technicians must be familiar with nautical orientation. This manual often identifies parts and procedures using these terms.

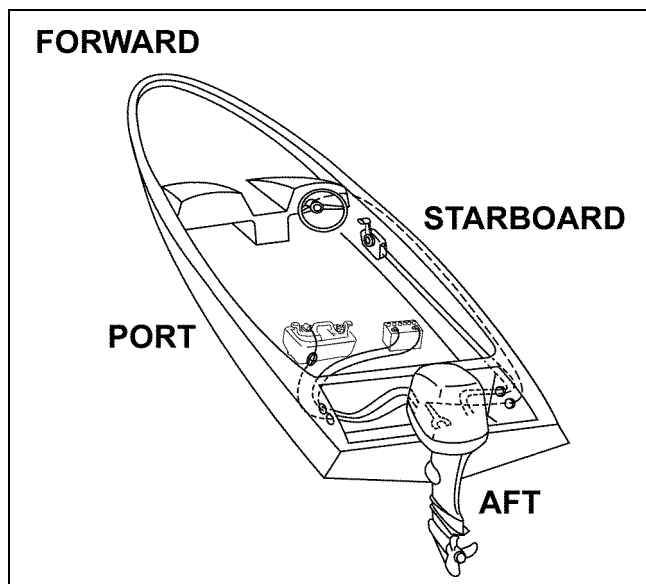


Nautical Orientation

SYMBOLS

Throughout this service manual, symbols are used to interpret electrical troubleshooting results or to assign values in drawings.


Electrical

When "∞" shows on the meter face, no continuity, or very high resistance, is indicated. The symbol is referred to as infinity.

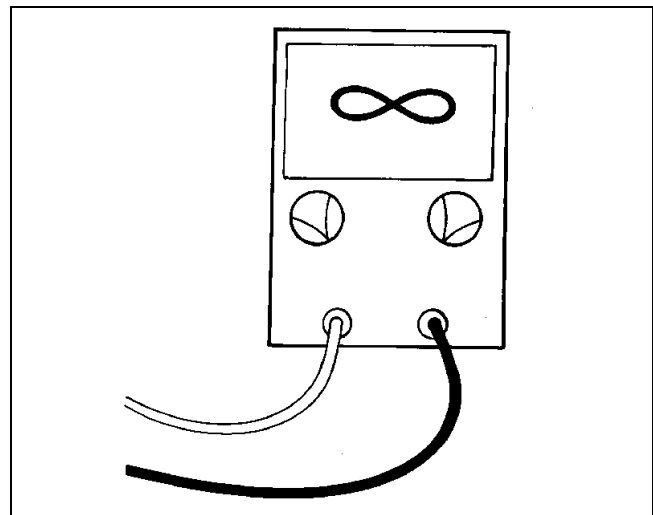


DR4203

When "V" follows a value on the meter face, the procedure is measuring voltage.

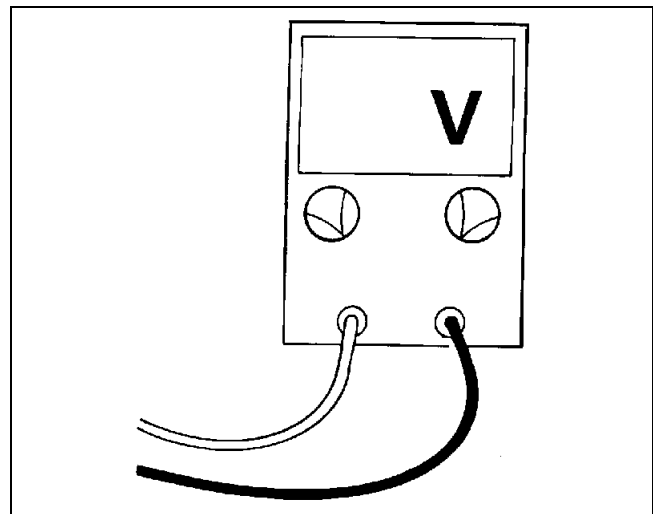


DR4204

When “ Ω ” follows a value on the meter face, the procedure is measuring resistance. Ω is the symbol for ohm, the unit of measurement for resistance.

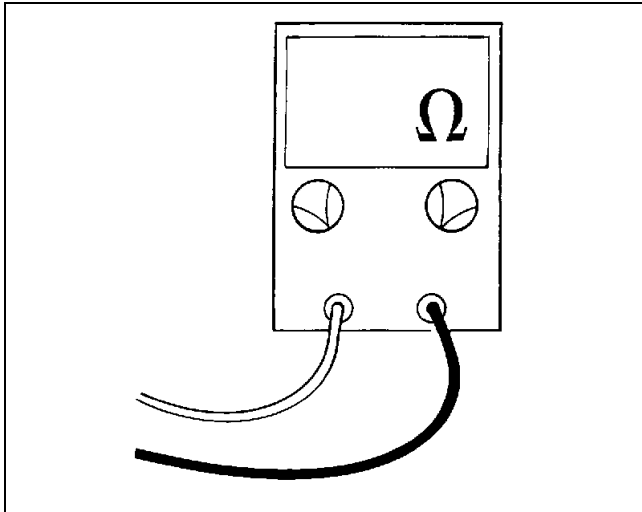

DR4205


When “ $\geq$ ” precedes a value on the meter face, it indicates your reading must be greater than, or equal to, the value shown.

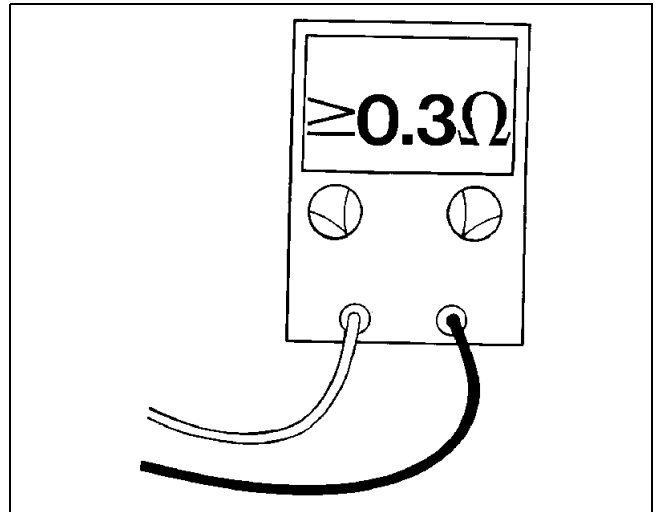

DR4207

Values

When “ $\leq$ ” precedes a value on the meter face, it indicates your reading must be less than, or equal to, the value shown.

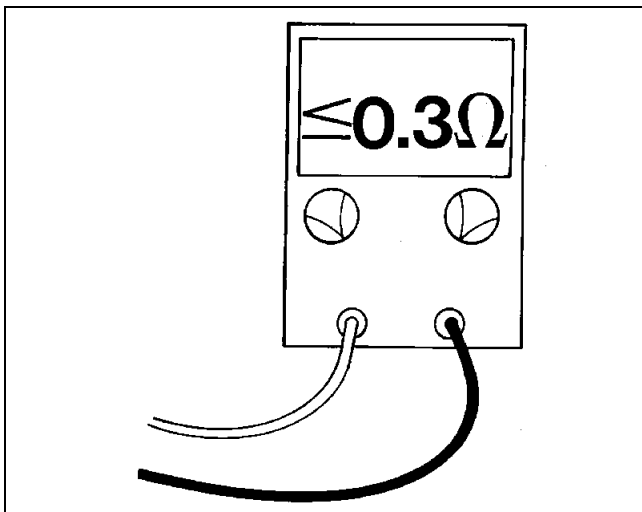

DR4206

Technician's Notes

[illegible]

Bulletins

[illegible][illegible][illegible]

SERVICE SPECIFICATIONS AND SPECIAL TOOLS

1

TABLE OF CONTENTS

TECHNICAL DATA	18
STANDARD TORQUE SPECIFICATIONS	20
SPECIAL TOOLS	21
ELECTRICAL / IGNITION	21
FUEL	22
GEARCASE	23
POWERHEAD	24
STARTER	25
UNIVERSAL	25
SHOP AIDS	27
NOTES	30

SERVICE SPECIFICATIONS AND SPECIAL TOOLS

TECHNICAL DATA

TECHNICAL DATA

	HP	9.9, 15
	Full Throttle Operating Range RPM	9.9 HP: 5000-6000 15 HP: 5500-6500
ENGINE	Power	9.9 HP (7.5 kw) @ 5500 RPM 15 HP (11.2 kw) @ 6000 RPM
	Idle RPM in Gear	700 ± 50
	Weight	R Models: 74 lbs. (34 kg) RL Models: 77 lbs. (35 kg)
	Lubrication	Evinrude/Johnson XD30 formula outboard oil Refer to Oil Requirements on p. 44.
	Engine Type	In-line 2 cylinder
	Displacement	15.6 cu. in. (255 cm ³)
	Bore	2.375 in. (60.33 mm)
	Stroke	1.760 in. (44.70 mm)
	Standard Bore	2.3745 to 2.3750 in. (60.31 to 60.33 mm)
		To bore oversize, add piston oversize dimension to standard bore
	Top Crankshaft Journal	0.8757 to 0.8762 in. (22.24 to 22.26 mm)
	Center Crankshaft Journals	0.8120 to 0.8125 in. (20.63 to 20.64 mm)
	Bottom Crankshaft Journal	0.7870 to 0.7874 in. (19.98 to 19.99 mm)
	Rod Crankpin	0.8120 to 0.8125 in. (20.63 to 20.64 mm)
	Piston Ring End Gap, Both	0.005 to 0.015 in. (0.13 to 0.38 mm)
	Lower Piston Ring Groove Side Clearance	0.004 in (0.10 mm) maximum
	Test Propeller	340177
	Minimum Test RPM	9.9 HP: 4900 15 HP: 5700
FUEL	Fuel/Oil Ratio	50:1
	Carburetion	One single-throat carburetor, float feed
	Calibration	Adjustable low speed; Fixed high speed
	Low-Speed Setting	Refer to FUEL SYSTEM section.
	Starting Enrichment	Manual choke
	Carburetor Float Level Setting	Float gauge, P/N 324891
	Carburetor Float Drop Setting	1 to 1 3/8 in. (25 to 35 mm)
	Preferred Fuel	Regular unleaded, plus grade unleaded, premium unleaded gasolines
	Acceptable Fuel	Any of the above gasolines with 10% Ethanol or 5% Methanol with 5% co-solvents
	Minimum Octane	87 AKI (R+M)/2 or 90 RON
	Additives	2+4 [®] Fuel Conditioner, Fuel System Cleaner, Carbon Guard Use only Evinrude/Johnson recommended fuel additives. The use of other additives may result in engine damage.
		See Fuel Requirements on p. 43 for additional information.

SERVICE SPECIFICATIONS AND SPECIAL TOOLS

TECHNICAL DATA

1

	HP	9.9, 15
ELECTRICAL	Battery, Minimum Requirements	12-Volt, 360 CCA (465 MCA) with 90 Minutes Reserve Capacity or 50 Ampere-Hour
	Alternator	5 A, Non-regulated (accessory)
	Tachometer Setting	5 Pulse / 10 pole (with alternator)
	A/C lighting	Accessory
	Engine Fuse (20 Amp)	P/N 514021
COOLING	Type	Auto Pressure-Temperature Controlled
	Thermostat	143°F (62°C)
IGNITION	Type	Magneto Powered Capacitor Discharge
	Spark Plugs	<i>Champion</i> [†] QL82C @ 0.030 in. (0.8 mm)
	Ignition Coil	P/N 583740
	Gear Ratio	12:29 (.414)
GEARCASE	Lubricant	<i>HPF XR</i> Gearcase Lubricant
	Capacity	9 fl. oz. (260 ml)

STANDARD TORQUE SPECIFICATIONS


Standard Torque Chart

Size	In. Lbs.	Ft. Lbs.	N·m
No. 6	7–10	0.58–0.83	0.8–1.1
No. 8	15–22	1.25–1.83	1.7–2.5
No. 10	24–36	2–3	2.7–4.0
No. 12	36–48	3–4	4.0–5.4
1/4 in.	60–84	5–7	6.7–9.4
5/16 in.	120–144	10–12	13.5–16.2
3/8 in.	216–240	18–20	24.4–27.1
7/16 in.	336–384	28–32	37.9–43.4
IMPORTANT: These values apply only when a specific torque for a specific fastener is not listed in the appropriate section. When tightening two or more screws on the same part, DO NOT tighten screws completely, one at a time.			

	WARNING	
Torque wrench tightening specifications must be strictly adhered to. Replace any locking fastener (locknut or patch screw) if its locking feature becomes weak. Definite resistance to turning must be felt when reusing a locking fastener. If replacement is specified or required because the locking fastener has become weak, use only authorized <i>Evinrude/Johnson Genuine Parts</i>.		

SPECIAL TOOLS

Electrical / Ignition

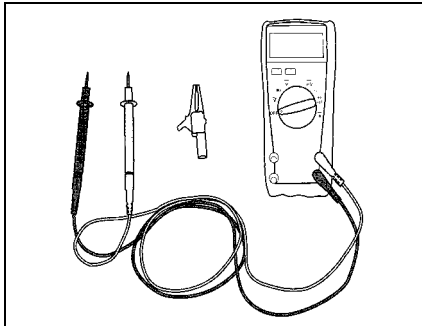

Digital multimeter DRC7265
Ohms resolution 0.01
Purchase through local supplier



CD Peak reading voltmeter 49799
P/N 507972



Analog multimeter P/N 501873 49793




Adapter, power pack load resistor 49797
P/N 507983



Amphenol crimping pliers 30387
P/N 322696



Coil locating ring P/N 334994 32211

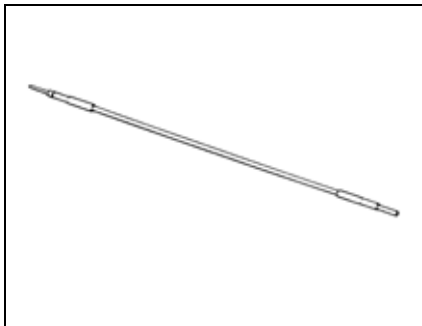

Amphenol connectors, jumper wire 73158
1. No. 16 wire, 8 in. (200 mm)
2. Pin, P/N 511469
3. Socket, P/N 581656
4. Shrink tube, 510628



000798
1. Amphenol[®] insert tool P/N 322697
2. Amphenol pin removal tool P/N 322698
3. Amphenol socket removal tool P/N 322699




Flywheel holder P/N 771311 42938

SERVICE SPECIFICATIONS AND SPECIAL TOOLS


SPECIAL TOOLS



Ignition analyzer P/N 501890 49791

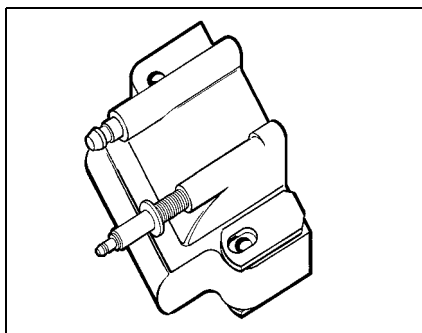

Ignition coil terminal extender
P/N 502054 CO3010

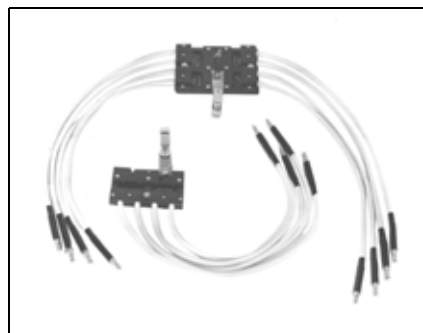


Spark checker P/N 508118 49798




Tachometer/timing light P/N 507980 49789

Fuel

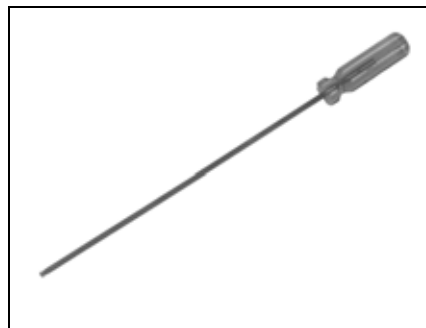


Ball hex screwdriver P/N 327622 23664

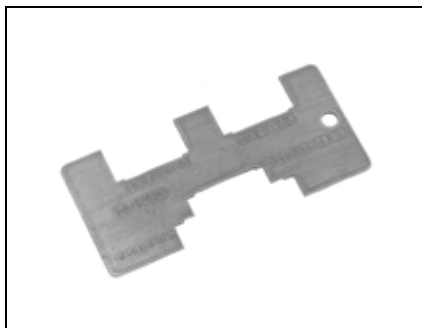

Float gauge P/N 324891 23678




Nipple cleaning tool P/N 326623 23655

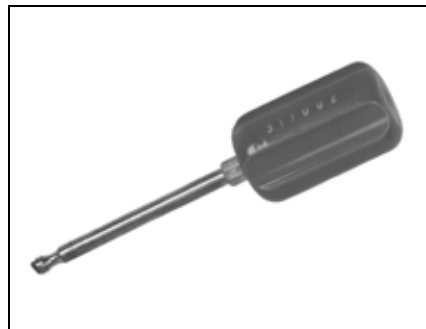

Orifice plug screwdriver P/N 317002 23611



Fuel vacuum tester
P/N 390954 23286

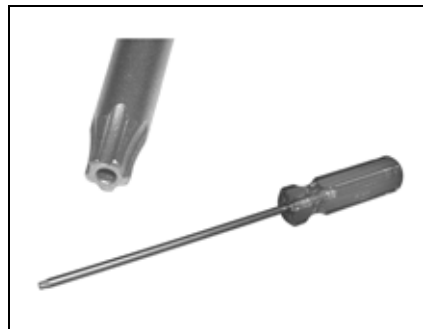

Torx screwdriver P/N 351204 002561

Gearcase



Forward gear bearing cup installer 23218
P/N 319929 (9.9-15 HP)



Driveshaft seal installer 32883
P/N 326554 (9.9-15 HP)




Prop shaft bearing housing bearing installer P/N 339751 (9.9-15 HP) 32881




Gearcase filler P/N 501882 49790



Pinion bearing spacer P/N 339753 32638
(9.9-15 HP)

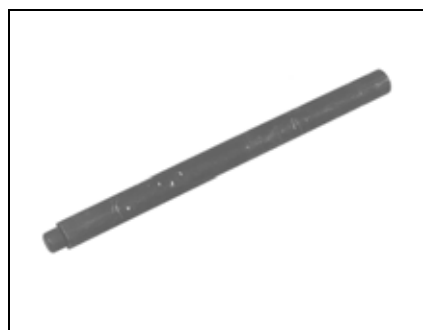


Prop shaft bearing housing bearing remover P/N 319880 (9.9-15 HP) 23699

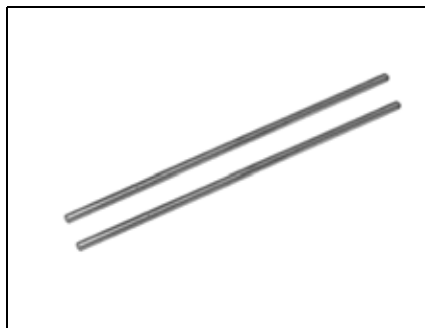

Guide pin set P/N 383175 2050



Prop shaft bearing housing puller kit 32627
P/N 386631 (9.9-15 HP)

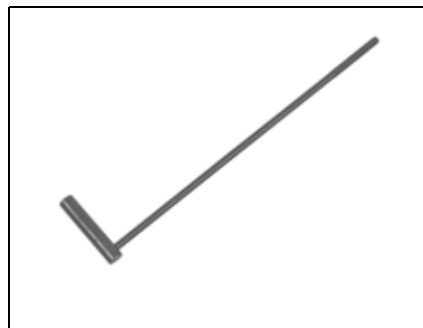


Shift rod bushing remover 23542
P/N 327693



Driveshaft bearing installer, upper 32639
P/N 319931 (9.9-15 HP)




Prop shaft bearing housing seal installer P/N 342663 (9.9-15 HP) 40993
22429

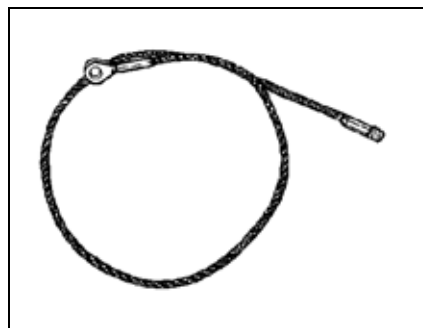


Yoke locator P/N 319991 DR4845

SERVICE SPECIFICATIONS AND SPECIAL TOOLS

SPECIAL TOOLS

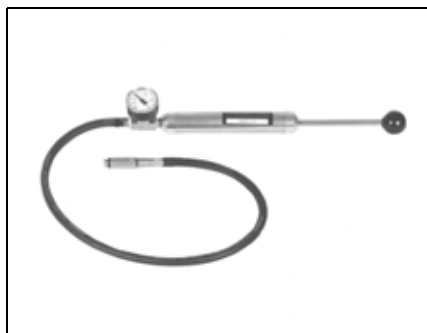

TYPICAL 49794
Gearcase pressure tester
P/N 507977 (Stevens P/N S-34)
Gearcase vacuum tester
P/N 507982 (Stevens P/N V-34)

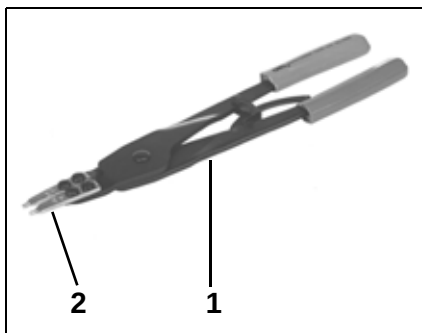

1. Retaining ring pliers
P/N 331045 2036
2. Replacement tip set
P/N 395967

Powerhead




Crankshaft lower seal installer 23660
P/N 433391(9.9-15 HP)



Cylinder bore gauge P/N 771310 45303



Ring compressor CO3768
9.9-15 HP standard: P/N 339754
9.9-15 HP oversize: P/N 339755

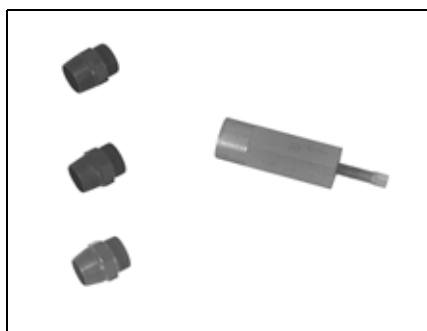

Crankshaft upper seal remover/
installer kit P/N 391060 (9.9-15 HP) 23102




Rod screw torque socket 000797
P/N 331638



Wrist pin bearing installer 41029
P/N 336660




Wrist pin pressing pin
 9.9-15 HP: P/N 392511 23668

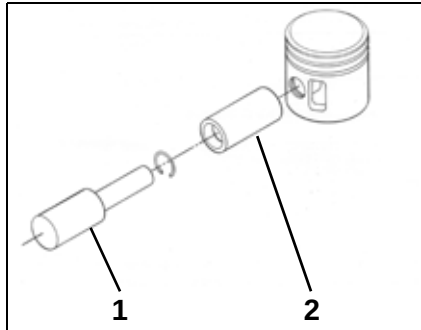

Wrist pin retaining ring driver
 P/N 392511 (driver and cone) DR1641

Starter

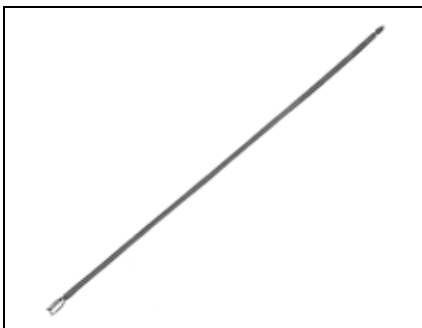

Starter rope threading tool
 P/N 378774 23682




Starter spring winder/installer
 P/N 342682 50068


Universal




Drive handle P/N 311880 31932

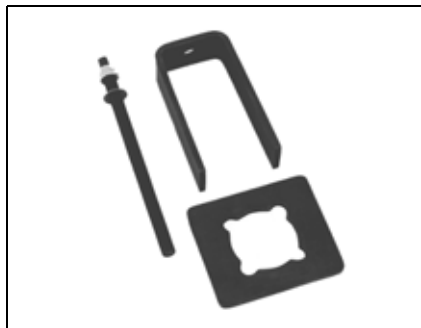

Puller Bridge P/N 432127 23146

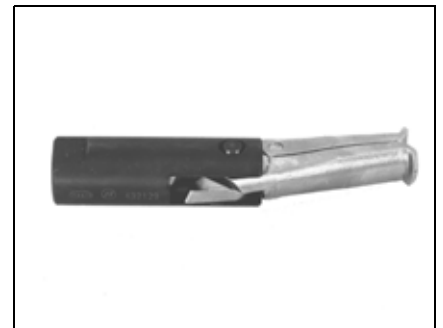

Large puller jaws P/N 432129
 (replacement jaws P/N 437954) 23148

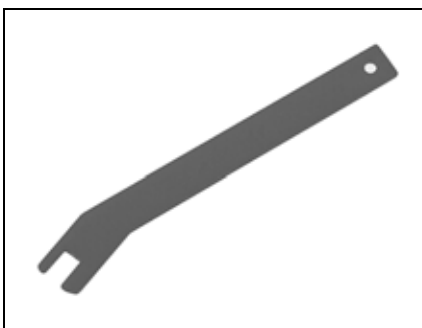

Hose clamp wrench P/N 325043 23674



Small puller jaws P/N 432131
 (replacement jaws P/N 437952) 23150



Bearing puller jaws P/N 432130
 (replacement jaws P/N 437953) 23149

SERVICE SPECIFICATIONS AND SPECIAL TOOLS

SPECIAL TOOLS




Puller wrench P/N 334359 23147
(use with puller jaws)



Tie strap installation tool 18105
P/N 323716



Twist-Grip™ remover P/N COA6017
390767

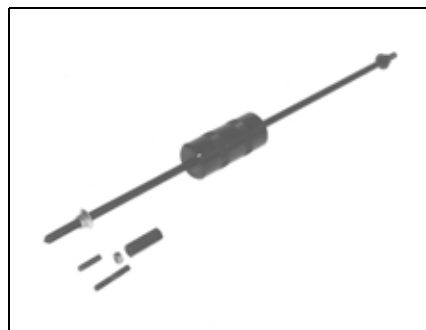

Slide hammer P/N 391008 CO1577




Temperature gun P/N 772018 45240



Universal pinion bearing remover 33974
and installer kit P/N 391257



Slide hammer P/N 432128 15345

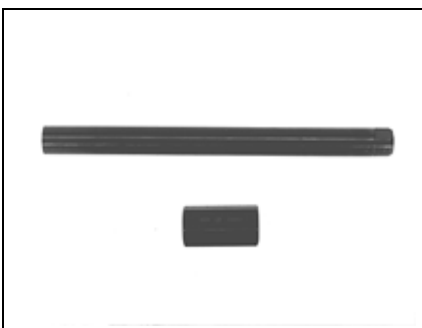

Tilt tube service kit P/N 434523 33249



Universal Puller Set P/N 378103 32885



Syringe P/N 346936 50243



Torque wrench extension 23656
P/N 912031

SHOP AIDS



Cleaning Solvent P/N 771087



Engine Tuner P/N 777185



Anti-Corrosion Spray P/N 777193



"6 in 1" Multi-Purpose Lubricant P/N 777192



D.P.L. Spray P/N 777183



Silicone spray P/N 775630



Oil - XD100™ P/N 777118



Oil - XD50™ P/N 777225



Oil - XD30™ P/N 777219



HI-VIS™ Gearcase Lube P/N 775605



HPF XR™ Gear Lube P/N 778747



Storage Fogging Oil
P/N 777186

SERVICE SPECIFICATIONS AND SPECIAL TOOLS

SHOP AIDS



Moly Lube P/N 175356



Triple-Guard® Grease P/N 508298



Extreme Pressure Grease™
P/N 508303



Lubriplate† 777 P/N 317619



Needle Bearing Grease, P/N 378642



Starter Bendix Lube P/N 337016



Electrical Grease P/N 504824



Power Trim/Tilt and Power Steering Fluid
P/N 775612



GE† RTV Silicone Sealant P/N 263753



Black Neoprene Dip P/N 909570



Thermal Joint Compound P/N 322170



Adhesive 847 P/N 776964

SERVICE SPECIFICATIONS AND SPECIAL TOOLS

SHOP AIDS

1



2 + 4™ Fuel conditioner P/N 775613



Fuel System Cleaner P/N 777184



Carbon Guard™ P/N 775629



Gel-Seal and Gasket Remover P/N 771050




Gel-Seal II P/N 327361



Gasket Sealing Compound P/N 317201



Permatex† No. 2, P/N 910032

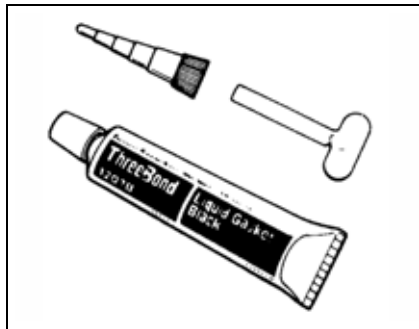

ThreeBond† 1104, P/N 351052
ThreeBond 1207B, P/N 351053



Pipe Sealant with Teflon P/N 910048



Locquic Primer P/N 772032



1. Screw Lock P/N 500417
(Loctite† Purple 222 equivalent)
2. Nut Lock P/N 500421
(Loctite Blue 242 Equivalent)
3. Ultra Lock P/N 500423
(Loctite Red 271 Equivalent)

Technician's Notes

[illegible][illegible]

INSTALLATION AND PREDELIVERY

TABLE OF CONTENTS

2

BOAT RIGGING	32
REMOTE CONTROLS	32
BATTERY INSTALLATION	33
FUEL SYSTEM REQUIREMENTS	34
OUTBOARD INSTALLATION	36
HULL PREPARATION	36
TRANSOM MEASURING AND DRILLING	37
LIFTING THE OUTBOARD	38
STEERING SYSTEMS	38
OUTBOARD MOUNTING	39
OUTBOARD RIGGING	40
CONTROL CABLE INSTALLATION	40
CABLE, HOSE, AND WIRE ROUTING	42
FUEL AND OIL PRIMING	43
FUEL REQUIREMENTS	43
FUEL SYSTEM PRIMING	44
OIL REQUIREMENTS	44
BREAK-IN OILING	44
BEFORE START-UP	45
GEARCASE LUBRICANT	45
RUNNING CHECKS	45
FUEL SYSTEM	45
EMERGENCY STOP / KEY SWITCH	45
START-IN-GEAR PREVENTION	46
TACHOMETER PULSE SETTING	46
WATER PUMP OVERBOARD INDICATOR	46
OPERATING TEMPERATURE	46
BREAK-IN	46
PROPELLERS	47
PROPELLER SELECTION	47
PROPELLER HARDWARE INSTALLATION	47

BOAT RIGGING

Remote Controls

Control Selection



WARNING




The remote control used must have start-in-gear prevention. This feature can prevent injuries resulting from unexpected boat movement when the outboard starts.

Remote control styles and applications are described in the *Evinrude/Johnson Genuine Parts and Accessories Catalog*. Plan the installation of all remote controls carefully. Read the outboard's Operator's Guide and the remote control's installation instructions prior to installation.

The remote control and wiring harness used must have the following features:

- Start-in-gear prevention
- Emergency stop / key switch
- Shift stroke must measure 1.125 to 1.330 in. (28.6 to 33.8 mm) between NEUTRAL and FORWARD
- Throttle stroke must PUSH for open
- All wiring must be compatible with Modular Wiring System (MWS) components

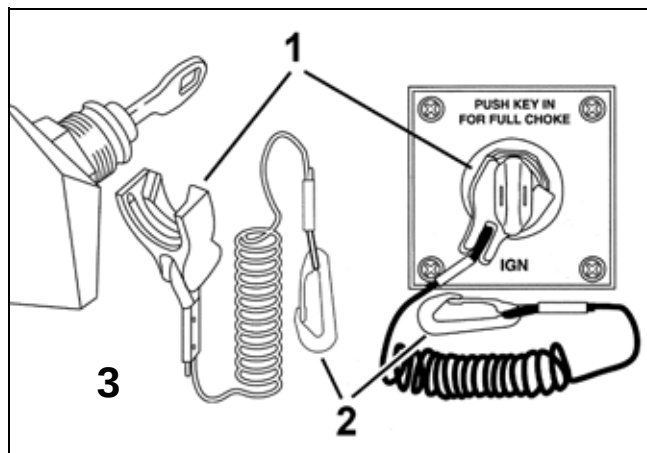

1. Emergency stop clip
2. Safety lanyard
3. Key switch with emergency stop feature

002817

Additional remote control information:

- Side-mount controls require a neutral lock feature.
- Single-outboard binnacle remote controls are offered with or without an integrated key switch.



WARNING



Always install and recommend use of an emergency stop/key switch. Doing so will reduce the risk of personal injury or death should the operator fall away from the controls or out of the boat.


Installation Guidelines

Install the appropriate remote control following all instructions provided with the remote control.

Make sure the following items are checked:

- Correct length control cables and wiring harnesses
- Proper type and quality of cables and wiring harnesses
- Correct routing of cables and harnesses
- Appropriate slack in front of the outboard for remote control cables
- Proper routing of cables to prevent kinking
- Positioning and securing of cables and harnesses along their lengths to prevent movement or damage

Typical transom-mounted outboard installations require a 12 in. (30 cm) cable loop at the front of the outboard when the cables are routed from the side of the splash well.

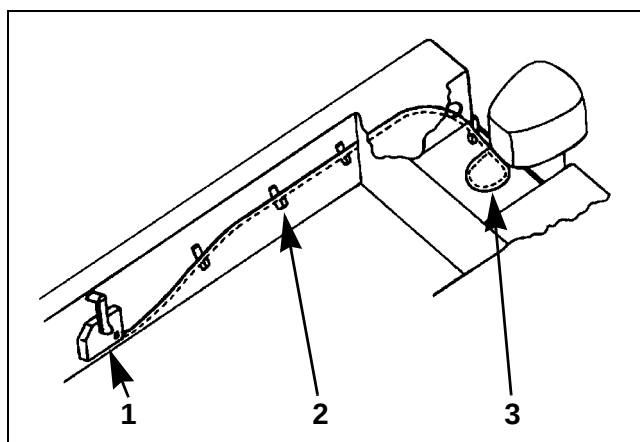

1. Surface side-mount remote control
2. Cable support
3. 12 in. (30 cm) cable loop at front of outboard

DR4277

Battery Installation

Each outboard requires its own starting battery. Select a battery that meets or exceeds the minimum requirements.

Minimum 12 Volt Battery Recommendations

- 360 CCA (465 MCA), 50 amp-hr minimum

Location and Preparation

Proper installation will prevent battery movement while underway.

- Secure all batteries in protected locations.
- Position battery as close to the outboard as possible.
- Battery location must provide access for periodic maintenance.
- Use battery mounting trays or battery boxes on all battery installations.
- Connections and terminals must be covered with an insulator.
- Battery connections must be clean and free from corrosion.
- Read and understand the safety information supplied with the battery before installation.



WARNING




Keep the battery connections clean, tight, and insulated to prevent their shorting or arcing and causing an explosion. If the battery mounting system does not cover the connections, install protective covers. Check often to see that connections stay clean and tight.

Connections

IMPORTANT: Connect the battery positive (+) cable to the battery positive (+) post FIRST. Connect the battery negative (–) cable to the battery negative (–) post LAST.

Install a starwasher on the threaded battery post. Stack cables from the outboard, then cables from accessories. Finish this connection with a hex nut.

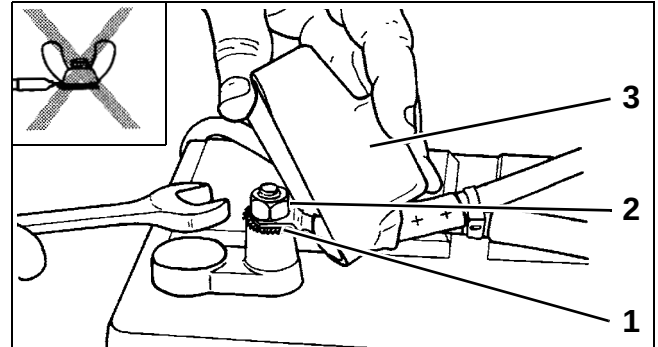

Marine Style Battery Post

1. Starwasher
2. Hex nut
3. Terminal Insulator

DR5103

IMPORTANT: Do not use wing nuts to fasten ANY battery cables. Wing nuts can loosen and cause electrical system damage not covered under warranty.

Tighten all connections securely. Apply *Triple-Guard* grease to prevent corrosion.

Battery Cable Requirements

Evinrude/Johnson outboards are shipped with stranded copper battery cables for typical installations in which the starting battery is positioned close to the transom.

Specialized outboard installations with extended length battery cables require an increased wire size. Refer to the table below.

IMPORTANT: Inadequate battery cables can affect the performance of an outboard's high amperage start circuit and the cranking speed of the outboard. **DO NOT** use aluminum wire cables. Use **ONLY** AWG stranded copper wire cables.

Models	1 to 10 Ft. (.3 to 3 m)	11 to 15 Ft. (3.4 to 4.6 m)	16 to 20 Ft. (4.9 to 6.1 m)
9.9/15 HP	10 Gauge	8 Gauge	6 Gauge

Fuel System Requirements

Overview

Fuel systems must meet minimum specifications to insure the proper delivery of fuel to the outboard.

The guidelines established by the ABYC and U.S. Coast Guard should always be followed.

- Permanent fuel tanks must be properly vented outside of the hull.
- Remote fuel tank gas fills must be grounded.
- Permanent fuel tank pickups should have the correct anti-siphon valve installed to prevent fuel flow if a leak occurs in the fuel distribution system. Refer to ABYC Standard H-24.

Fuel Hose

All fuel hoses must be designated as fuel hose and approved for marine use.

- Use only fuel lines (or copper tubing) that meet the outboard minimum I.D. requirement.
- "USCG Type A1" fuel hose must be used between permanent fuel tanks and motor well fittings on inaccessible routings.
- Use "USCG Type B1" for fuel hose routings in motor well areas.
- Permanently installed fuel hoses should be as short and horizontal as possible.
- Use corrosion-resistant metal clamps on permanently installed fuel hoses.
- Multi-outboard applications require separate fuel tank pickups and hoses. (A fuel selector switch may be used for "kicker" motors as long as it has enough flow capacity for the larger outboard.)

Fuel System Primer


Outboards require a priming system capable of refilling the fuel system after periods of non-use.

Primer Bulbs

Primer bulbs that meet the outboard's minimum inside diameter fuel line requirements are used on most outboards.

Install the primer bulb in the fuel supply hose as follows:

- The primer bulb should be installed in an accessible location.
- The arrow on the primer bulb must point in the direction of fuel flow.
- The fuel primer bulb must be positioned in the fuel supply hose so the primer bulb can be held with the arrow pointing "up" during priming.

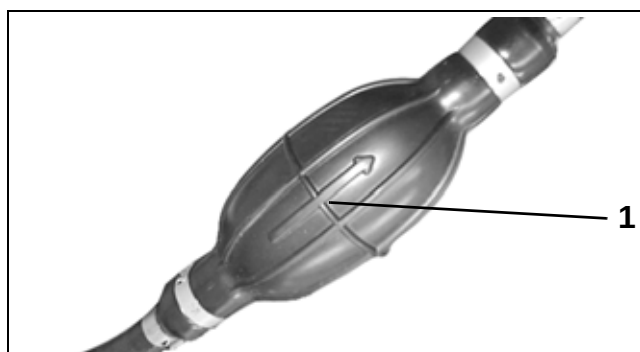

1. Arrow indicates direction of fuel flow

000124

Marine Primer Pump

The alternative to a primer bulb is a U.S. Coast Guard approved marine primer pump. Electric primer pumps offer the convenience of outboard priming from a dash-mounted momentary switch.


Fuel Filters

Boat-mounted fuel filters and water-separating fuel filter assemblies must meet the required fuel flow and filter specification. The filter must be mounted to a rigid surface above the "full" level of the fuel tank and accessible for servicing.

Fuel Filter Assembly, P/N 174176, meets all requirements for a water-separating fuel filter.



0070

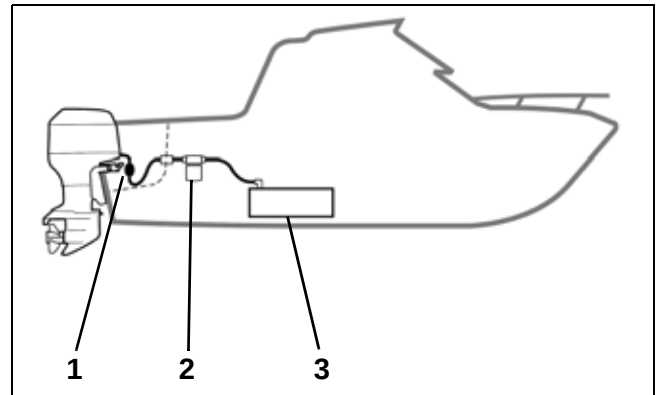

Typical Fuel Supply Configuration

DRC6797

1. Primer bulb
2. Water separating fuel filter
3. Anti-siphon valve, in fuel pick-up of tank

IMPORTANT: Avoid using "in-line" fuel filters. The filter area and flow characteristics may not be adequate for high horsepower outboards.

Outboard Fuel System Recommendations

Component	25 HP – 130 HP Models	135 HP – 250 HP Models
Fuel tank pickup tube	5/16 in. (7.9 mm) min. I.D.	3/8 in. (9.5 mm) min. I.D.
Fuel fittings	1/4 in. (6.4 mm) min. I.D.	9/32 in. (7.1 mm) min. I.D.
Fuel supply hoses	5/16 in. (7.9 mm) min. I.D.	3/8 in. (9.5 mm) min. I.D.
ALL MODELS		
Fuel tank pickup screen	100 mesh, 304 grade stainless steel wire, 0.0045 in. wire diameter, 1 in. (25 mm) long	
Antisiphon valve	2.5 in. (63.5 mm) Hg maximum pressure drop at 20 gph (76 l/hr) flow	
Remote fuel filter	0.4 in. Hg maximum pressure drop at 20 gph (76 l/hr) flow, 150 in. ² (1290 cm ²) of filter area	
Maximum fuel pump lift height	Fuel pump should not be located more than 30 in. (76.2 cm) above bottom of fuel tank	

OUTBOARD INSTALLATION

Hull Preparation

Maximum Capacity



WARNING



Do not overpower the boat by installing an outboard that exceeds the horsepower indicated on the boat's capacity plate. Overpowering could result in loss of control.

Before installing outboard:

- Refer to the boat manufacturer's certification label for maximum horsepower rating.
- Refer to ABYC Standards to determine the maximum horsepower capacity for boats without certification labeling.



1029A

Mounting Surface

Inspect transom surface prior to drilling mounting holes.

- The transom should meet ABYC Standards.
- The transom must be flat and cannot have any protrusions.
- The transom angle should be approximately 14 degrees.

- Check transom strength and height.



WARNING



DO NOT install an outboard on a curved or irregular surface. Doing so can wear, bind, and damage components, causing loss of control.

Top Edge of Transom or Bracket

Transom thickness or off-sets must also be considered. The top edge of the transom or bracket must provide a proper surface for stern brackets. The stern brackets must contact the flat surface of the transom or bracket. Modify moldings or components that prevent the stern brackets from resting against the transom surface. Do not modify transom brackets.

Transom Clearances

Make sure the transom and splash well area provide adequate clearances.

- The top edge of the transom should be wide enough to allow full steering travel. The ABYC standard for most single outboard installations is 33 in. (84 cm).
- Check cable and hose routing clearances.
- Make sure there is clearance for mounting bolts and washers. Check the inside area of the transom for obstructions prior to drilling holes.

Water Flow

Inspect the hull area directly in front of the mounting location.

- Boat-mounted equipment should not create turbulence in the water flow directly in front of the outboard's gearcase. Turbulence or disruptions in the water flow directly in front of the gearcase will affect engine cooling and propeller performance.

Mounting Hardware



WARNING



Use all mounting hardware supplied with the outboard to help ensure a secure installation. Substituting inferior hardware can result in loss of control.


Transom Measuring and Drilling

Hull Centerline

Locate the centerline of the boat transom as it relates to the hull (bottom) of the boat.

Use a straightedge to draw a line connecting the port and starboard chines. The chines should be used as reference points for determining the centerline of the hull.

Use a framing square to accurately place a line on the transom. The centerline of the hull should be in line with the keel of the hull and perpendicular to the midpoint of the line connecting the port and starboard chines.

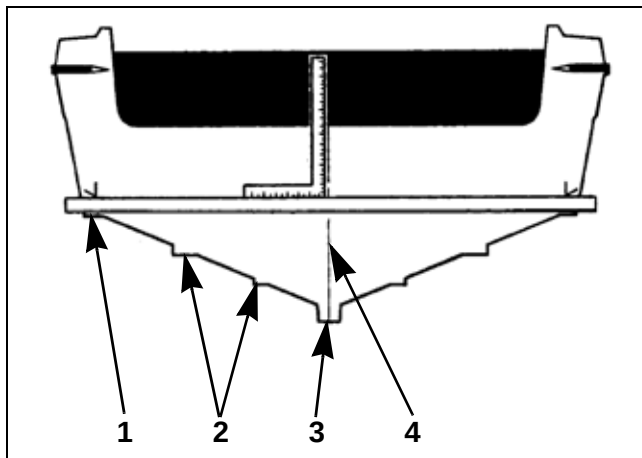

1. Chine
2. Strake
3. Keel
4. Hull centerline

DR5568

Transom Heights


Make sure the transom height is consistent with the height of the outboard to be installed.

- A 19 to 21 in. (48.3 to 53.3 cm) transom height uses a 20 in. (50.8 cm) shaft outboard.
- The shaft length of the outboard being installed should come close to matching the transom height of the boat.

Determine transom height by measuring from the top edge of the transom, along the centerline.

Use a straightedge as a reference to extend the bottom of the boat.

Position the straightedge along centerline. The distance from the top edge of the straightedge to the top edge of the transom is the actual transom height.

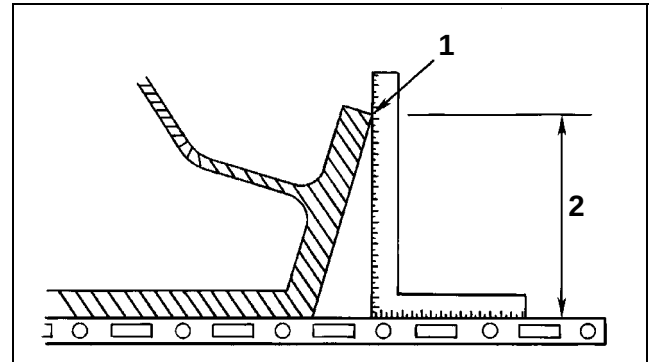

1. Top edge of transom
2. Actual transom height

DR5541

Transom Drilling Locations

Use the outboard stern brackets as a template for location and size of holes to drill in the transom.

Center the outboard on the transom (or mounting bracket) and tighten clamp screws by hand. An accessory transom plate is recommended to protect the transom.

Using each stern bracket's mounting holes as a guide, drill holes through the transom.

Drill one 11/32 in. (8.7 mm) hole for each side.


IMPORTANT: Be sure to drill the required holes perpendicular to transom surface.

INSTALLATION AND PREDELIVERY

OUTBOARD INSTALLATION


Lifting the Outboard

Lift the outboard using the lift grips (NOT the tilt grip or steering handle) and place it in the center of the boat's transom.

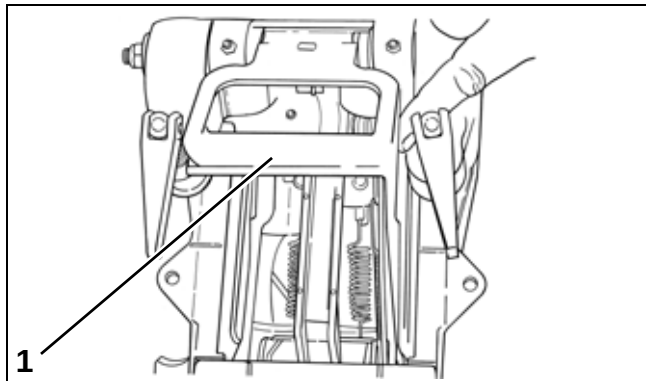

9.9/15 Model
1. Lift grip

DR31712

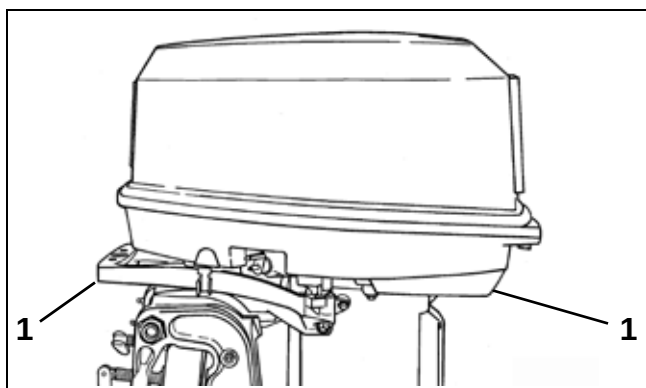

TYPICAL
1. Lift grips

DR16886

Before Mounting Outboard to Transom

Some rigging components that attach directly to the outboard should be assembled before the outboard is mounted to the boat's transom. Steering system components and gearcase speedometer pickup hoses are the most common. Determine what equipment will be installed prior to mounting the outboard to the transom or bracket.

Steering Systems

Mechanical Cables

All *Evinrude/Johnson* outboards equipped with tilt tubes are designed to be compatible with mechanical steering systems that meet ABYC Standard P-17. Single-cable mechanical steering systems can be used on single or dual-outboard installations if an ABYC-approved steering link is used.

Dual-cable mechanical steering helps provide firm steering control at high speeds.

Extend the output end of the steering cable and lubricate the inner core of cable prior to installation.



ABYC-approved mechanical steering cable.

5873

IMPORTANT: Install steering cable through tilt tube **before** mounting outboard on transom. Tighten nut securely.

Outboard Mounting



WARNING



The outboard must be correctly installed. Failure to correctly install the outboard could result in serious injury, death, or property damage.

IMPORTANT: Follow all directions carefully. The outboard's warranty will not cover product damage or failure resulting from incorrect outboard installation.



WARNING



Even if equipped with clamp screws, the outboard must be bolted to the boat to prevent it from "working off the transom" during operation.

Center the outboard on the boat's transom (or mounting bracket) and tighten the clamp screws by hand, NOT with tools. An accessory transom plate is recommended to protect the boat's transom (or mounting bracket).




WARNING



If either side of the transom deforms or cracks when the bolts are tightened to their recommended torque, the transom construction may not be adequate or may be deteriorated. Structural failure of the transom could result in loss of boat control and injury to the occupants.

IMPORTANT: Use a marine sealant rated for above or below waterline use. RTV silicone is not approved for below waterline use. Polyurethane sealants are not easily removed and may damage outboard or boat mounting surfaces when removed.

Apply marine sealer (rated for above and below waterline use) under hex heads of bolts, on the mounting plates, and to the bolt shanks.

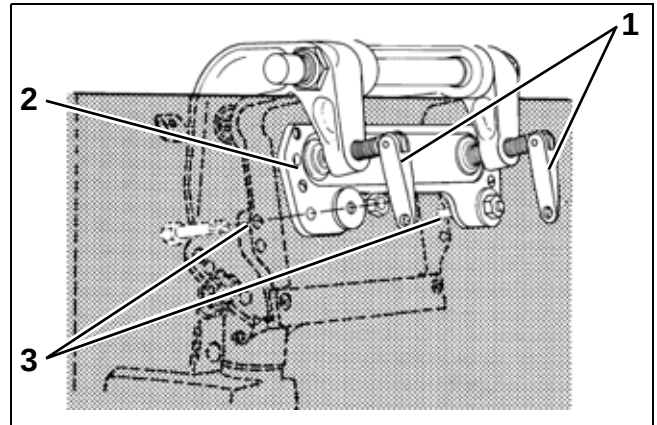

TYPICAL

- 1. Clamp screws
- 2. Transom plate
- 3. Stern bracket holes

DR5815

IMPORTANT: After 30 minutes of operation, retighten clamp screws by hand. DO NOT use tools to tighten clamp screws. Check clamp screws regularly.

OUTBOARD RIGGING



WARNING



To prevent accidental starting of engine, confirm the battery cables are disconnected at battery and spark plug leads are disconnected from spark plugs.


Control Cable Installation

Control Cable Identification

IMPORTANT: Control cable function must be identified before rigging outboard.

Identify each control cable:

- Put the control handle into NEUTRAL position. The throttle cable casing guide will retract completely and the shift cable casing guide will go to the midpoint of its travel.

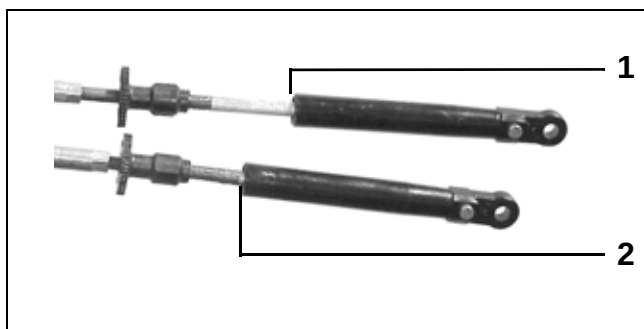

1. Shift cable casing guide extended to midpoint
2. Throttle cable casing guide retracted

DP0811

Extend the control cables and lubricate them with *Triple-Guard* grease.




30501

Throttle Cable Installation

Position the remote control handle in NEUTRAL. Be sure the throttle cable is retracted (IDLE).

Remove rubber grommet from front of lower engine cover. Remove cable retainer. Apply a liberal amount of *Triple-Guard* grease to both anchor pockets.

Attach cable casing guide to throttle lever using clevis pin and cotter pin supplied with remote control adapter kit. Secure cable by spreading cotter pin ends.

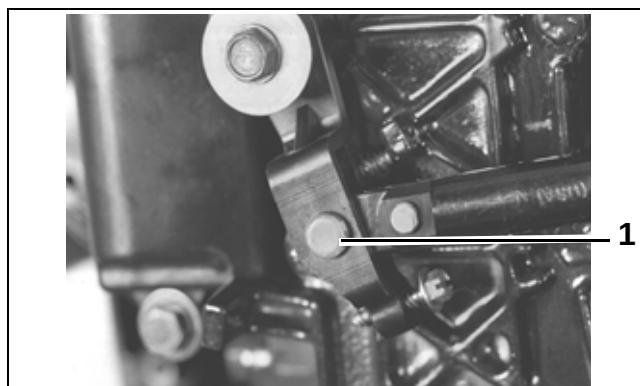

1. Clevis pin

38561

Hold throttle lever tight against idle stop screw. Pull firmly on throttle cable to remove backlash and install trunnion nut in anchor pocket.

Install cable retainer and torque screw to 60 to 84 in. lbs. (7 to 9 N·m).

Shift Cable Installation

Position the remote control handle in NEUTRAL. Be sure the throttle cable is retracted to IDLE position and shift cable is at mid-point of travel.


Position shift linkage of outboard in NEUTRAL. Make sure gearcase is in NEUTRAL.

Connect shift cable to shift lever using clevis pin and cotter pin supplied with remote control adapter kit.



38562


Adjust and locate cable trunnion in trunnion anchor bracket.

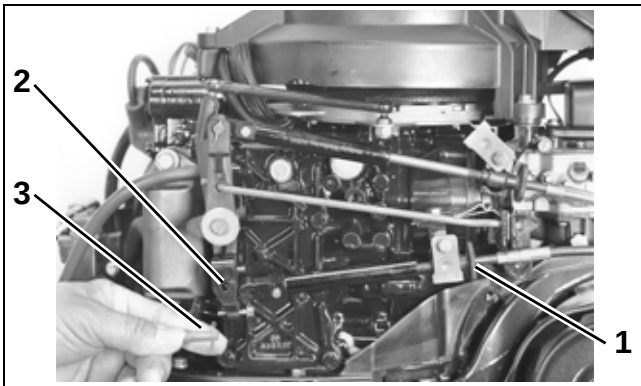

1. Cable trunnion
2. Shift lever
3. Clevis pin

38510

Install trunnion cover and torque the screw to 60 to 84 in. lbs. (7 to 9 N·m).

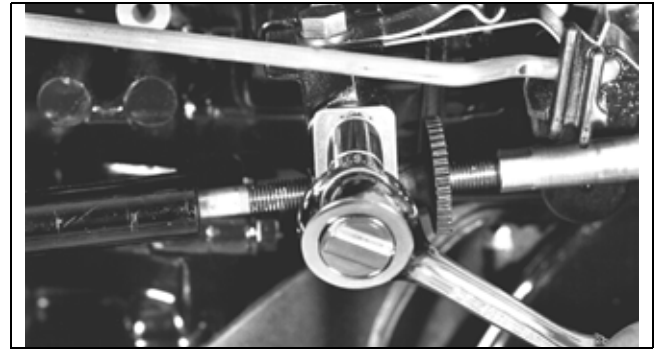

33259

Slip rubber grommet onto control cables and press grommet into groove in lower engine cover.

Control Cable Adjustment



WARNING



The trunnions on both remote control cables must be adjusted properly or operator may lose control of direction and engine speed.

The remote control cable trunnion provides adjustment for the throttle cable and the shift cable. Adjust by turning the trunnion nut.

Adjust the shift trunnion. The shift lever and gearcase must be in NEUTRAL when the remote control handle is in NEUTRAL.

Adjust the throttle trunnion. The throttle lever must be at extreme slow speed position and against the IDLE stop screw when the remote control is in extreme slow speed position.

Check cable adjustment:

- If throttle cable is too loose, idle speed will be high and/or inconsistent.
- If throttle cable adjustment is too tight, control effort will be high when shifting in and out of gear.

IMPORTANT: Inspect the installation to ensure the remote control cables are attached to the proper engine levers. Advance the fast idle lever to the START position. If correctly attached, the throttle cable and throttle lever on outboard will move.

INSTALLATION AND PREDELIVERY OUTBOARD RIGGING

Cable, Hose, and Wire Routing

IMPORTANT: Provide sufficient slack at outboard end to permit unrestricted steering and tilting of outboard. Do not allow cables to bind.

Battery Cables




WARNING



Disconnect battery cable from battery before servicing electrical systems. Failure to do so could result in injury from ignition sources (sparks) or from contact with moving parts if accidental cranking or starting occurs.

Route battery positive (+) cable to the starter solenoid. Secure the cable to terminal. Position grommet in lower engine cover.

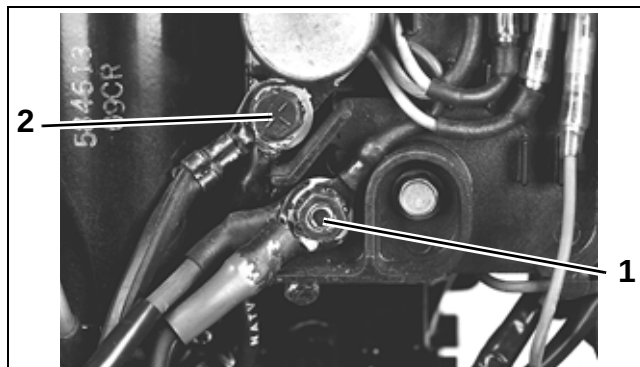

1. Solenoid terminal
2. Ground terminal

35545

Secure the battery negative (–) cable to the powerhead ground terminal. Apply *Black Neoprene Dip* to connection.

Remote Electrical Harness

Refer to accessory instruction sheet.

FUEL AND OIL PRIMING

Fuel Requirements



WARNING



Gasoline is extremely flammable and highly explosive under certain conditions. Improper handling of fuel could result in property damage, serious injury or death.

Always turn off the outboard before fueling.

Never permit anyone other than an adult to refill the fuel tank.

Do not fill the fuel tank all the way to the top or fuel may overflow when it expands due to heating by the sun.

Remove portable fuel tanks from the boat before fueling.

Always wipe off any fuel spillage.

Do not smoke, allow open flames or sparks, or use electrical devices such as cellular phones in the vicinity of a fuel leak or while fueling.

Minimum Octane

Evinrude/Johnson outboards are certified to operate on unleaded automotive gasoline with an octane rating equal to or higher than:

- 87 (R+M)/2 AKI, or
- 90 RON

Use unleaded gasoline that contains methyl tertiary butyl ether (MTBE) **ONLY** if the MTBE content does not exceed 15% by volume.

Use alcohol-extended fuels **ONLY** if the alcohol content does not exceed:

- 10% ethanol by volume
- 5% methanol with 5% cosolvents by volume

When using alcohol-extended fuels, be aware of the following:

- The boat's fuel system may have different requirements regarding the use of alcohol fuels. Refer to the boat's owner guide.
- Alcohol attracts and holds moisture that can cause corrosion of metallic parts in the fuel system.
- Alcohol blended fuel can cause engine performance problems.
- All parts of the fuel system should be inspected frequently and replaced if signs of deterioration or fuel leakage are found. Inspect at least annually.

IMPORTANT: Always use fresh gasoline. Gasoline will oxidize, resulting in loss of octane and volatile compounds, as well as the production of gum and varnish deposits which can damage the outboard.

Additives

IMPORTANT: The only fuel additives approved for use in *Evinrude* outboards are 2+4[®] fuel conditioner and *Evinrude/Johnson* Fuel System Cleaner. **Use of other fuel additives can result in poor performance or engine damage.**

Evinrude/Johnson 2+4 Fuel Conditioner will help prevent gum and varnish deposits from forming in fuel system components and will remove moisture from the fuel system. It can be used continuously and should be used during any period when the outboard is not being operated on a regular basis. Its use will reduce spark plug fouling, fuel system icing, and fuel system component deterioration.

Evinrude/Johnson Fuel System Cleaner will help keep fuel injectors in optimal operating condition.

Evinrude/Johnson Carbon Guard will minimize carbon deposit build-up when used as directed.

INSTALLATION AND PREDELIVERY

FUEL AND OIL PRIMING

Fuel System Priming

Use the primer to fill the outboard's fuel system.

Once the fuel system has filled, pressurize the fuel supply hoses by squeezing the fuel primer bulb or momentarily activating the boat-mounted electric fuel primer.

Observe all fuel lines, both in the boat and on the outboard. Repair any fuel leaks.



WARNING



Failure to check for fuel leaks could allow a leak to go undetected, resulting in fire or explosion and may cause personal injury or property damage.

Oil Requirements

IMPORTANT: Failure to follow these recommendations could void the outboard warranty if a lubrication-related failure occurs.

Evinrude/Johnson XD30 outboard oil is recommended for use in *Johnson 2-Stroke* outboards.

If *XD30* oil is not available, you must use an oil that meets NMMA TC-W3 certification.

Engine Lubricant Below 32°F (0°C)

If the outboard will be operated in temperatures below freezing (32°F, 0°C), use *Evinrude/Johnson XD100*.

Break-In Oiling

These models require **50:1 (2% oil)** fuel/oil ratio during normal operation and a **25:1 (4% oil)** fuel/oil ratio during break-in.


	Fuel		
Ratio	6 U.S. Gallons	3 U.S. Gallons	1 Liter
50:1	16 fl. oz. oil	8 fl. oz. oil	20 ml oil
25:1	32 fl. oz. oil	16 fl. oz. oil	40 ml oil

BEFORE START-UP

Gearcase Lubricant

With outboard in vertical position, check the gearcase lubricant level:

- Remove the lubricant level plug. Lubricant must be even with the bottom of the threaded hole.
- A clean tie strap can be used as a “dip stick” if the lubricant level is not obvious.
- Add *HPF XR* gearcase lubricant as needed.

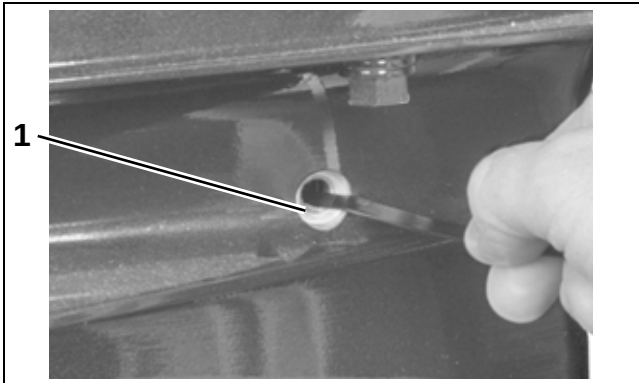

1. Gearcase lubricant level

000072

RUNNING CHECKS



WARNING



DO NOT run outboard without a water supply to the outboard's cooling system. Cooling system and/or powerhead damage could occur.



DANGER



DO NOT run the engine indoors or without adequate ventilation or permit exhaust fumes to accumulate in confined areas. Engine exhaust contains carbon monoxide which, if inhaled, can cause serious brain damage or death.



DANGER



Contact with a rotating propeller is likely to result in serious injury or death. Assume the engine and prop area is clear of people and objects before starting engine or operating boat. Do not allow anyone near a propeller, even when the engine is off. Blades can be sharp and the propeller can continue to turn even after the engine is off.

Fuel System

Perform running checks of the fuel system by following these steps:

- Squeeze fuel primer bulb until hard or activate electric primer. Observe all fuel hoses and connections. Repair any leaks.
- Start outboard. Inspect all hoses and connections. Repair any leaks or misrouted hoses immediately.

Emergency Stop / Key Switch

Check emergency stop function. With outboard running at IDLE, pull safety lanyard from emergency stop switch. Outboard must stop immediately.

INSTALLATION AND PREDELIVERY RUNNING CHECKS

Remote Control Operation

Make sure that control can be easily moved into all gear and throttle settings. Do not shift remote control when outboard is not running.

Start-In-Gear Prevention



WARNING



Make certain that the starter will not operate when the outboard is in gear. The start-in-gear prevention feature is required by the United States Coast Guard to help prevent personal injuries.

Start outboard and shift remote control lever to FORWARD.

Turn outboard OFF while remote control is in FORWARD.

Attempt restarting the outboard. Outboard should not start.

Pull remote control lever back to NEUTRAL and restart outboard.

Shift remote control lever to REVERSE. Turn outboard OFF while remote control is in REVERSE.

Attempt restarting the outboard. Outboard should not start.

Tachometer Pulse Setting


Confirm accuracy of tachometer reading.

- Adjust dial on back of tachometer to required setting (the outboard should not be running).

Outboard Model	Tachometer Setting
9.9–15 HP	5 Pulse

Water Pump Overboard Indicator

A steady stream of water should flow from the overboard indicator.

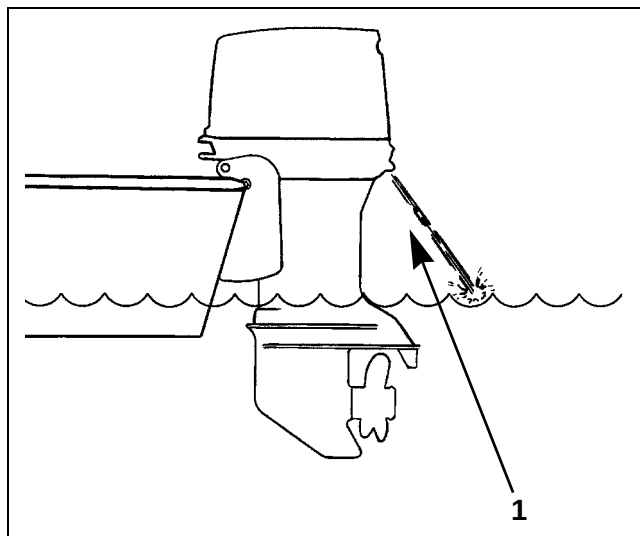

1. Water pump overboard indicator

DRC4952

Operating Temperature

An outboard run at idle speed should achieve a temperature based on the engine's thermostatic control. In general, the powerhead temperature should reach at least 104°F (40°C) after five minutes of idling. Check that the powerhead reaches idle temperature. Refer to specific **TECHNICAL DATA** on p. 18.

Idle Speed

Outboard idle speed is essential for proper outboard control and shift function. Make certain the outboard idles within the specified idle RPM range. If the outboard is run on a flushing device, the idle speed and quality may not be representative of actual "in water" use.

Break-In

When the outboard is delivered, the customer should be referred to the correct break-in procedure in the **Operator's Guide**.

PROPELLERS

Propeller Selection




CAUTION



Selection of the wrong propeller could reduce engine service life, affect boat performance, or cause serious damage to the powerhead.

Water testing with various propeller designs and sizes is the best method of propeller selection.

The correct propeller, under normal load conditions, will allow the engine to run near the midpoint of the RPM operating range at full throttle. Refer to **TECHNICAL DATA** on p. 18.

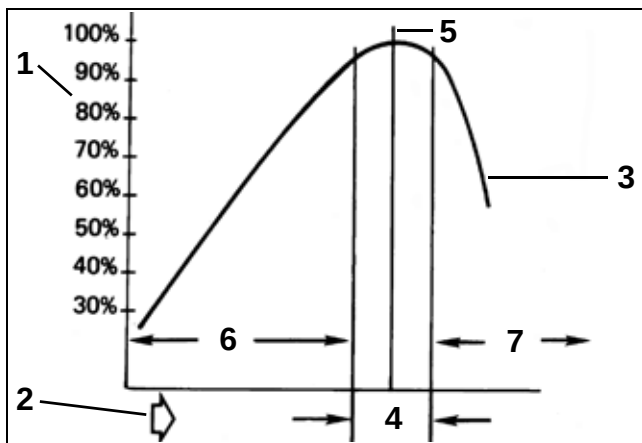

1. Percentage of horsepower (kw)
2. Engine RPM
3. Horsepower curve
4. Full throttle operating range
5. Midpoint of full throttle operating range, horsepower rating in kilowatts (kw)
6. Engine is overloaded at full throttle
7. Engine is overspeeding at full throttle

DR1261

IMPORTANT: If the propeller blades have too much pitch, the engine will operate below its normal range at full throttle. Power will be lost, and powerhead damage could occur. If the propeller blades have too little pitch, the engine will operate above its normal range and damage from overspeeding could occur.

When selecting a propeller, consider the following:

- Use an accurate tachometer to determine the engine's full-throttle RPM.
- The outboard should be trimmed for top speed.
- Select a propeller that suits the customer's application and allows the engine to run near the midpoint of the full-throttle operating range when the boat has a normal load.
- Occasionally, one propeller will not cover a wide range of boat applications — water skiing to high speed performance boating. In such cases, it might be necessary to have a propeller for each situation.
- Refer to the *Evinrude/Johnson Genuine Parts and Accessories Catalog* for propeller styles and sizes.
- Right-hand propellers are considered standard rotation propellers. When propelling a boat forward, the propeller rotates in a right-hand (clockwise) direction as viewed from the rear.
- Left-hand propellers are considered counter-rotation propellers. When propelling a boat forward, the propeller rotates in a left-hand (counterclockwise) direction as viewed from the rear.

Propeller Hardware Installation



WARNING



When servicing the propeller, always shift the outboard to NEUTRAL, turn the key switch OFF, and twist and remove all spark plug leads so the engine cannot be started accidentally.


Apply *Triple-Guard* grease to inner taper of propeller thrust bushing and the propeller shaft.

Install thrust bushing onto propeller shaft with shoulder of thrust bushing facing aft matching tapers.

Install propeller on propeller shaft by aligning splines and pushing until seated on the thrust bushing.

INSTALLATION AND PREDELIVERY PROPELLERS

Install the spacer, engaging the propeller shaft splines.

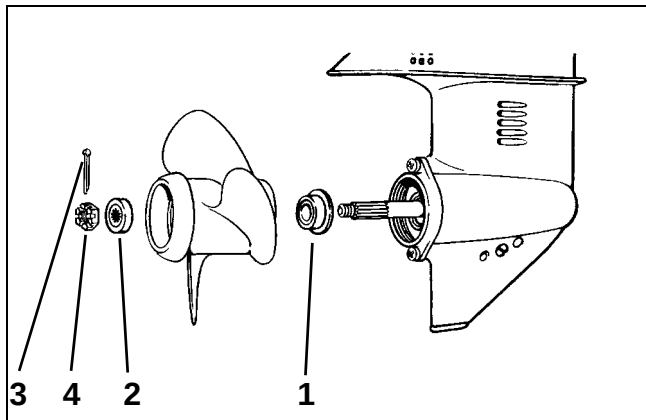

TYPICAL

1. Thrust bushing
2. Thrust washer
3. Cotter pin
4. Propeller nut


CO2443

Install the propeller nut and torque to 120 in. lbs. (14 N·m). If cotter pin holes in the propeller nut and propeller shaft are not aligned, continue to tighten the nut until they are in line. Do not loosen.

Insert a **new** cotter pin through the propeller nut and shaft. Bend its ends over the nut to secure the assembly. Remove block of wood.

IMPORTANT: After fastening propeller nut, make sure outboard is in NEUTRAL and carefully spin propeller. Propeller must turn freely and should not spin off center. If propeller appears to spin off center, check for possible bent propeller shaft.

Wedge a block of wood between propeller blade and the anti-ventilation plate.

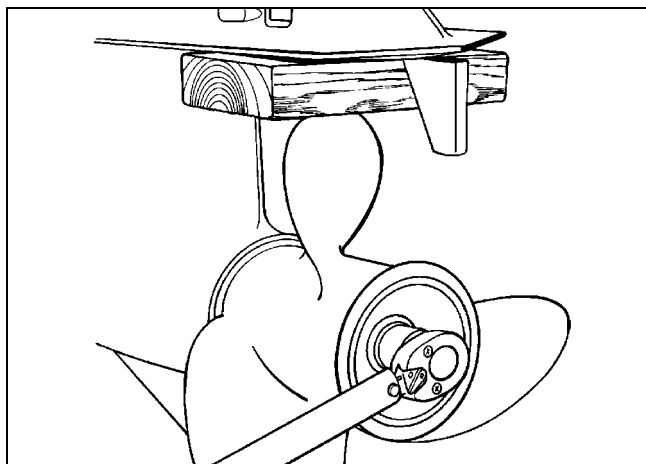

TYPICAL

DRC3984

MAINTENANCE

TABLE OF CONTENTS

INSPECTION AND MAINTENANCE SCHEDULE	50
ANTI-CORROSION PROTECTION	52
COOLING SYSTEM	53
FLUSHING	53
WATER INTAKE SCREENS	54
LUBRICATION	54
STEERING SYSTEM	54
MIDSECTION	55
THROTTLE AND SHIFT LINKAGE	55
GEARCASE LUBRICANT	56
PROPELLER SHAFT	56
ELECTRIC STARTER	57
BATTERY AND BATTERY CONNECTIONS	57
FUEL SYSTEM	58
FUEL FILTER	58
AIR SILENCER	58
HOSES AND CONNECTIONS	58
SPARK PLUGS	58
SYNCHRONIZATION AND LINKAGE ADJUSTMENTS	59
PRELIMINARY ADJUSTMENTS	59
CAM FOLLOWER PICKUP POINT	60
WIDE OPEN THROTTLE ADJUSTMENT	61
MAXIMUM SPARK ADVANCE	61
IDLE SPEED	61
SHIFT LEVER DETENT	62
10-HOUR INSPECTION	62
STORAGE	63
FUEL SYSTEM TREATMENT	63
INTERNAL ENGINE TREATMENT	63
ADDITIONAL RECOMMENDATIONS	63
PRE-SEASON SERVICE	64
CLAMP SCREWS AND MOUNTING BOLTS	64
GEARCASE LUBRICANT	64
BATTERY(S)	64
OPERATIONAL CHECKS	64
FUEL SYSTEM	64
SUBMERGED ENGINES	64
ENGINE DROPPED OVERBOARD (NOT RUNNING)	64
ENGINE DROPPED OVERBOARD (RUNNING)	65
ENGINE DROPPED OVERBOARD (IN SALT WATER)	65
PROLONGED SUBMERSION (FRESH OR SALT WATER)	65
NOTES	66

MAINTENANCE

INSPECTION AND MAINTENANCE SCHEDULE

INSPECTION AND MAINTENANCE SCHEDULE

Routine inspection and maintenance is necessary for all mechanized products. Periodic maintenance contributes to the product's life span. The following chart provides guidelines for outboard inspection and maintenance to be performed by an authorized Dealer.

IMPORTANT: Outboards used for rental operations, commercial applications, or other high hour use applications require more frequent inspections and maintenance. Inspection and maintenance should be adjusted according to operating conditions and use; and environmental conditions.

Engine Maintenance and Inspection Schedule						
Description	Engine Care Product	Frequency				
		Each Use	10-Hour Inspection	Every 50 Hours or 6 months	Every 100 Hours or Annually	Every 200 Hours or Biannually
Clamp screws, lubricate ⁽¹⁾	D	Every 60 days / Every 30 in Saltwater				
Tilt/run lever shaft / tilt shaft, lubricate ⁽¹⁾	D	Every 60 days / Every 30 in Saltwater				
Swivel bracket / tilt support bracket, lubricate ⁽¹⁾	D	Every 60 days / Every 30 in Saltwater				
Shift lever shaft and detent / shallow water drive bracket, inspect and lubricate ⁽¹⁾	D	Every 60 days / Every 30 in Saltwater				
Engine cover latch, lubricate ⁽¹⁾	D	Every 60 days / Every 30 in Saltwater				
Throttle and shift linkage, lubricate ⁽¹⁾	D	Every 60 days / Every 30 in Saltwater				
Choke, carburetor linkage / starter lockout, inspect and lubricate ⁽¹⁾	D	Every 60 days / Every 30 in Saltwater				
Fish line trap, inspect		Every 60 days / Every 30 in Saltwater				
Anticorrosion anodes, check operation		✓	✓			
Water intake screens, check condition		✓	✓			
Overboard water pump indicator, check operation		✓	✓			
Steering friction, check operation		✓	✓			
Steering system, check operation		✓	✓			
Throttle and shift operation, check function		✓	✓			
Emergency stop circuit and lanyard, check function		✓	✓			
Flush cooling system		✓				
Emergency start cord, onboard and inspect		✓				
Operator's Guide, onboard		✓				
Clamp screws, tighten		✓				
Engine upper and lower motor covers, clean and wax				✓		
Operator's Guide, review					✓	
Fuel filter inspection, eliminate contamination			✓			

MAINTENANCE

INSPECTION AND MAINTENANCE SCHEDULE

3

Engine Maintenance and Inspection Schedule						
Description	Engine Care Product	Frequency				
		Each Use	10-Hour Inspection	Every 50 Hours or 6 months	Every 100 Hours or Annually	Every 200 Hours or Biannually
Fuel system components, inspect and repair leaks ⁽²⁾			✓	✓		
Fastener inspection, tighten loosened components			✓	✓		
Engine to transom mounting hardware, re-torque			✓		✓	
Cam follower, inspect and lubricate			✓		✓	
Thermostat, inspect and check operation			✓		✓	
Spark advance linkage, lubricate			✓		✓	
Electric starter, lubricate			✓		✓	
Electrical and ignition wires and connections, inspect			✓		✓	
Gearcase lubricant replace	B		✓		✓	
Powerhead synchronization and linkage, inspect ⁽²⁾	D		✓		✓	
Gearcase lubricant, inspect fill level and condition of lube	B			✓		
Starter pinion shaft, inspect and lubricate ⁽³⁾	F			✓		
Propeller shaft splines, inspect and lubricate	D				✓	
Spark plugs, replace ⁽²⁾					✓	
Decarbonize	G				✓	
Driveshaft splines, inspect and lubricate	E					✓
Water pump, inspect and replace						✓

(1) Also recommended at 10-Hour Inspection

(2) Emission-related component

(3) Do not use light duty penetrating lubricants


- A Evinrude/Johnson Anti-Corrosion Spray or Evinrude/Johnson "6 in 1" Multi-Purpose Lubricant
- B HPF XR Gearcase Lubricant
- C Power Trim/Tilt and Power Steering Fluid
- D Triple-Guard grease
- E Evinrude/Johnson Molyube P/N 175356
- F Starter Bendix Lube Only P/N 337016
- G Evinrude/Johnson Engine Tuner

ANTI-CORROSION PROTECTION

Sacrificial Anodes

Galvanic corrosion occurs in fresh or salt water. Salt, brackish, and polluted water can accelerate corrosion. “Sacrificial” anodes are intended to protect the underwater metal components of the outboard from galvanic corrosion.

Outboards are equipped with sacrificial anodes.

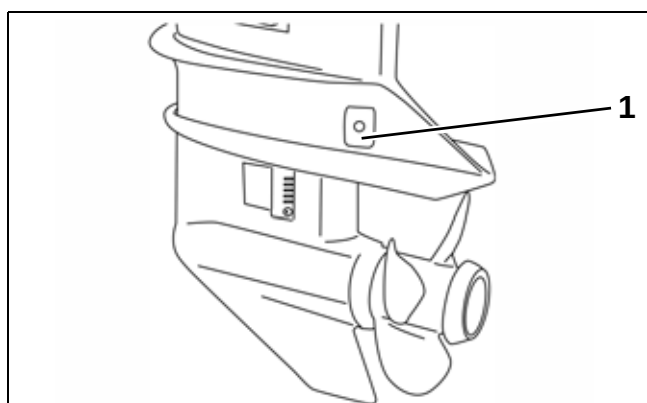

TYPICAL
1. Anode

000288R

Visually inspect anodes and metal components below water level. Erosion of anodes is normal and indicates the anodes are functioning properly.


IMPORTANT: Anodes that are not eroding may indicate that the anodes are not properly grounded. Anodes and the mounting screws must be clean and tight for effective corrosion protection.

For best anode performance:

- Replace all anodes that have eroded or disintegrated to two-thirds of their original size.
- Do not paint or apply protective coatings to anodes or anode fasteners.
- Avoid using metal-based antifouling paint on the boat or outboard.

Testing Procedure – Continuity

Connect meter leads between engine ground and anode surface.

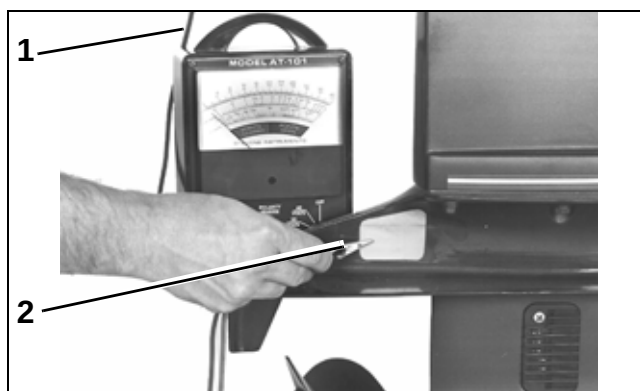

1. Black meter lead
2. Red meter lead

270757

The multimeter should indicate little or no resistance. If resistance is high, check the following:

- Remove the anode and clean the area where the anode is installed.
- Clean the mounting screws.
- Install the anode and test again.

Metallic Component Protection

Protect metal components on outboards from corrosion. Use the following products to minimize corrosion.

- *Anti-Corrosion Spray* provides a heavy, waxy coating to protect components.
- *“6 in 1” Multi-Purpose Lubricant* provides a thin film of anti-corrosion protection.

Exterior Finishes

Maintain the outboard's exterior finish to prevent corrosion and reduce oxidation.

- Use automotive wax to protect the outboard's exterior finish from oxidation.
- Clean regularly using clean water and mild detergent soap.
- Touch-up damage to painted surfaces promptly.
- Protect moving components with appropriate lubricants.

COOLING SYSTEM

Check the condition of cooling system components regularly. The outboard cooling system consists of:

- water intake screens;
- overboard water pressure indicator;
- water pump;
- all internal water passages;
- thermostats; and
- all external water hoses and fittings.

Flushing

Flush the outboard with fresh water following each use in brackish, salt, or polluted water to minimize the accumulation of scale and silt deposits in cooling system passages.

The outboard can be flushed on the trailer or at dockside; running or not running.

IMPORTANT: The outboard must be located in a well ventilated area with appropriate ground drainage during the flushing procedures.

Keep water inlet pressure between 20 to 40 psi (140 to 275 kPa).

Flushing — Outboard Running



WARNING




Prevent injury from contact with rotating propeller; remove the propeller before flushing.

Refer to **Propeller Hardware Installation** on p. 47.


Place outboard in VERTICAL (DOWN) position in a well ventilated area.

Remove the plug from the flushing port on exhaust manifold.

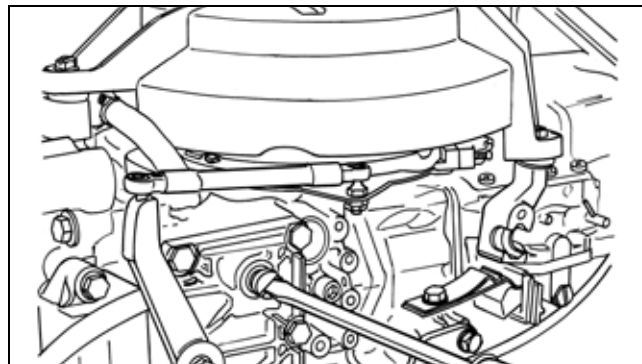

DR31699

Install flushing adapter and garden hose.

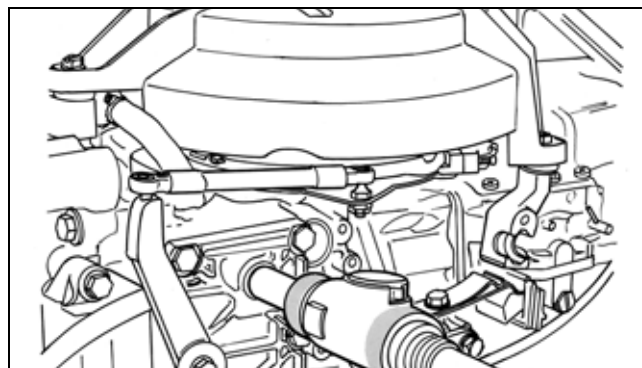

DR5077

Remove propeller and shift the outboard to NEUTRAL.

Turn water supply on. START outboard. Run outboard at IDLE only for at least five minutes.

Shut OFF the outboard. Turn off water supply. Remove garden hose and flushing device. Reinstall plug (9.9/15 HP models).

Leave the outboard in VERTICAL (DOWN) position long enough for the powerhead to drain completely.

Reinstall propeller.

MAINTENANCE

LUBRICATION

Flushing — Outboard Not Running

Outboard can be in VERTICAL (DOWN) or TILTED (UP) position.

Remove the plug from the flushing port. Install flushing device and garden hose.

Turn water supply ON.

Flush outboard for at least five minutes.


Turn off water supply. Remove garden hose and flushing device.

Reinstall plug. Position outboard in VERTICAL position (DOWN) long enough to allow the powerhead to drain completely.

Water Intake Screens

Inspect condition of water intake screens. Clean or replace as needed.

Confirm function of overboard water pressure indicator. Clean or replace plug and nozzle as needed.

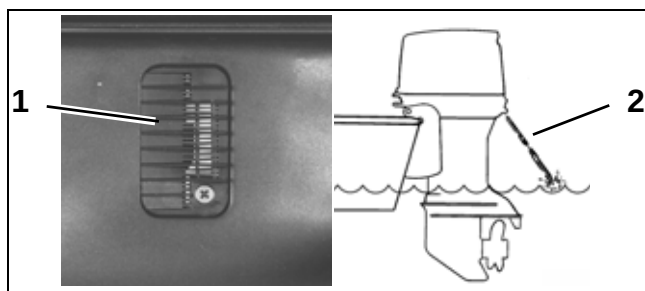

TYPICAL

1. Water intake screen
2. Overboard water pressure

32894DRC49

52

LUBRICATION

Steering System



WARNING




Failure to grease as recommended could result in steering system corrosion. Corrosion can affect steering effort, making operator control difficult.

Remote Models

Grease the stainless steel output end of the steering cable with *Triple-Guard* grease.

Use an appropriate cleaning solvent to remove corrosion and dirt from output end of cable prior to coating it with grease. Make sure wiper nut is installed and not damaged.

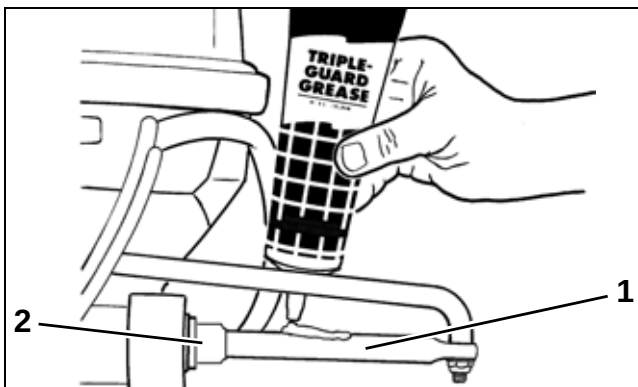


1. Steering cable
2. Wiper nut

DR29546

Midsection


Lubricate the tilt tube/tilt shaft grease fittings, clamp screws, tilt lever shaft grease fittings, and swivel bracket with *Triple-Guard* grease. Apply grease to the swivel bracket fitting until the grease begins to flow from the upper or lower swivel bracket areas.

Coat the pivot points of the tilt lock brackets and the reverse lock mechanism with *Triple-Guard* grease.

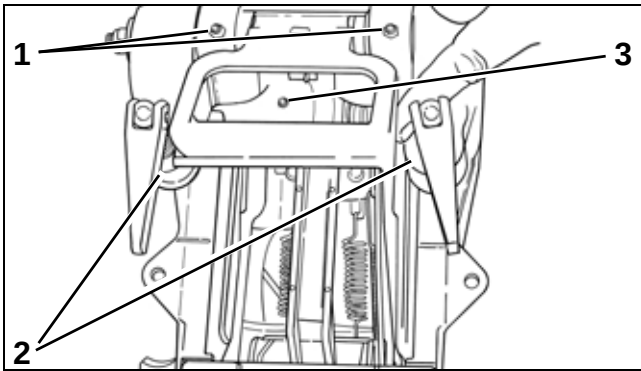

1. Tilt shaft fittings
2. Clamp screws
3. Tilt lever shaft fitting

DR31712

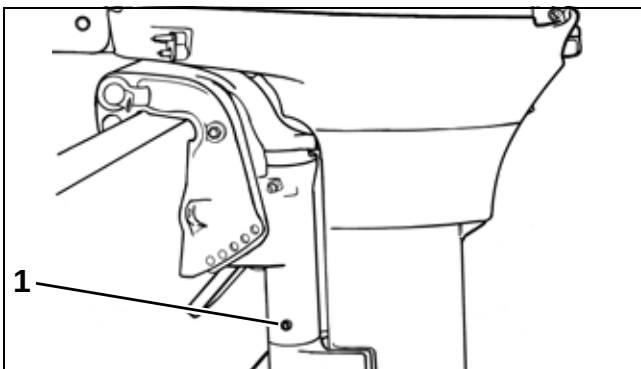


1. Swivel bracket fitting

DR32598

Throttle and Shift Linkage


Lubricate the throttle linkage, shift linkage, starter lockout mechanism, and carburetor linkage with *Triple-Guard* grease. Refer to the following diagrams.

IMPORTANT: Check proper throttle and shift function.

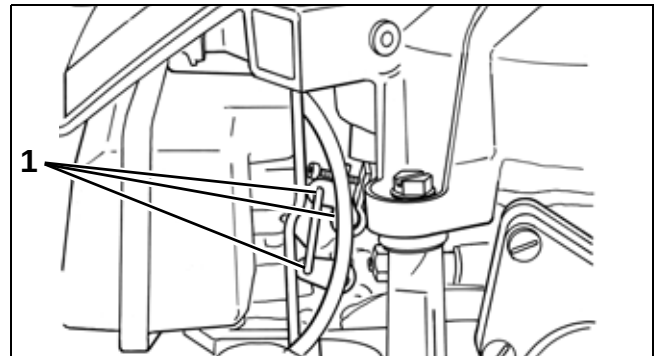

1. Carburetor linkage and cam follower

DR31711

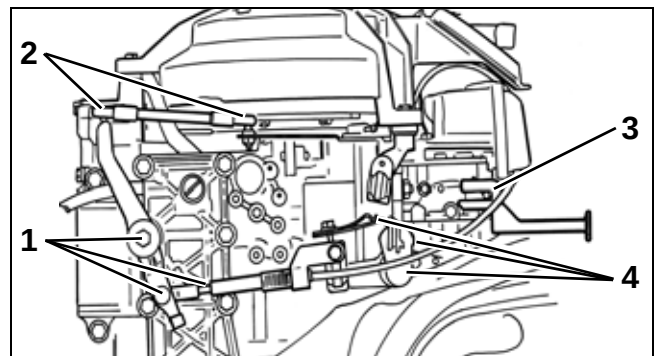


1. Throttle linkage
2. Spark advance linkage
3. Choke linkage
4. Shift linkage

DR31697

Gearcase Lubricant

IMPORTANT: Always check the fill level of the gearcase lubricant prior to removing drain/fill plug. A tie strap can be used to check lubricant level.

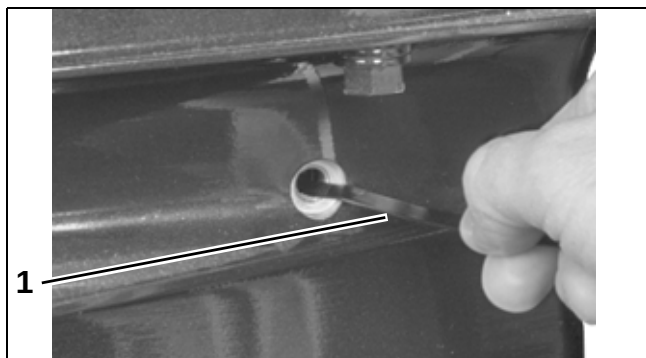


1. Tie strap

000072

Examine drained lubricant for excessive metal fragments and for any indication of water in oil (cloudy or milky appearance). Lubricant that is black in color with a burnt odor indicates worn, overheated oil. Pressure and vacuum check gearcases with apparent leaks. Repair all leaks.

Refer to **INSPECTION AND MAINTENANCE SCHEDULE** on p. 50 for service frequency and recommended lubricants.

Refer to **LUBRICANT** on p. 165 for complete gearcase lubricant filling procedures.

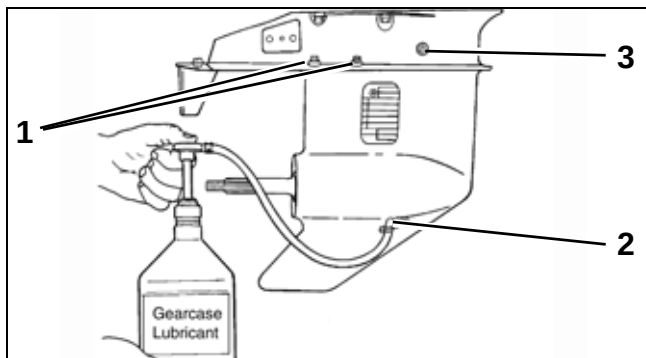

1. Drain/fill plugs
2. Drain/fill hole
3. Lubricant level hole

DR33673

REFILL the gearcase with *HPF XR* Gearcase Lubricant.

If *HPF XR* Gearcase Lubricant is not available, *Hi-Vis* gearcase lubricant can be used as an alterna-

tive; however, long term durability may be affected with continued use.

IMPORTANT: The recommended gear lubricants include special additives for marine applications. Do not use any automotive gear lubricants, 2-stroke or 4-stroke engine oil, or any other oil or grease for gearcase applications.

Propeller Shaft

Debris from the water can become lodged around propeller shaft. Frequent inspection can minimize potential gearcase damage.



WARNING




When servicing the propeller, always shift the outboard to NEUTRAL position, and twist and remove all spark plug leads so the engine cannot be started accidentally. Disconnect battery cables at battery on electric start models to prevent accidental starter engagement. Remove the battery negative (-) cable first and the battery positive (+) cable last.

Remove propeller. Refer to **Propeller Hardware Installation** on p. 47.

Inspect bushing and blade surfaces. Replace damaged or worn propellers.

Clean propeller shaft. Inspect propeller shaft seals. Replace damaged or worn seals.

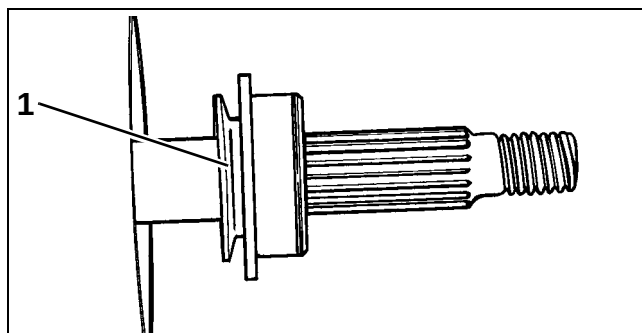

1. Thrust bushing

DR4310


Apply *Triple-Guard* grease to entire length of propeller shaft prior to installing propeller.

Reinstall propeller hardware and propeller.

Electric Starter

Lubricate the starter pinion area of the starter shaft with *Starter Lube*.

IMPORTANT: Do not use liquid or aerosol spray lubricants.

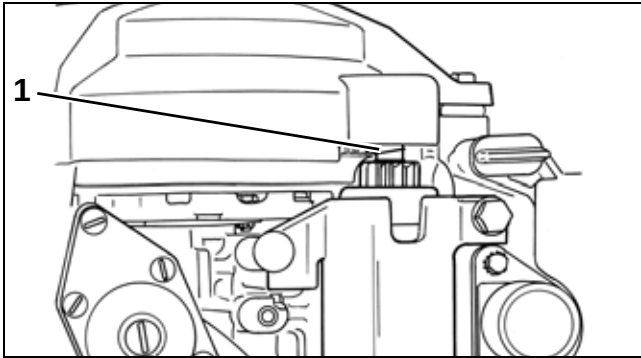

1. Starter shaft

DR31713

Refer to **ELECTRIC STARTER SERVICING** on p. 77.

BATTERY AND BATTERY CONNECTIONS

Check battery connections frequently. Clean and service battery connections at regular intervals.



WARNING



Battery electrolyte is acidic—handle with care. If electrolyte contacts any part of the body, immediately flush with water and seek medical attention.

- Confirm that battery meets the minimum engine requirements.
- Connections must be clean and tight.
- Note all wiring connections prior to disassembly.

Disconnect battery negative (–) cable **first** and the battery positive (+) cable last.

Clean all terminals, battery posts, and connectors with a solution of baking soda and water. Use a wire brush or battery terminal tool to remove corrosion buildup. Rinse and clean all surfaces.

Reinstall battery and tighten connections securely. Refer to **Battery Installation** on p. 33.

IMPORTANT: DO NOT secure battery cables with wing nuts.

Coat all connections with *Triple-Guard* grease and insulate to prevent shorts or spark arcing.



WARNING



Keep battery connections clean, tight, and insulated to prevent their shorting or arcing and causing an explosion. If the battery mounting system does not cover the connections, install covers.

FUEL SYSTEM

Visual inspection of fuel system components reduces the possibility of undetected fuel system leaks. Inspect fuel system components regularly.




WARNING



Failure to check for fuel leakage could allow a leak to go undetected, resulting in fire or explosion.

Fuel Filter

Johnson outboards are equipped with a serviceable fuel filter element. Clean or replace the element as needed. Refer to **FUEL PUMP SERVICE** on p. 106.

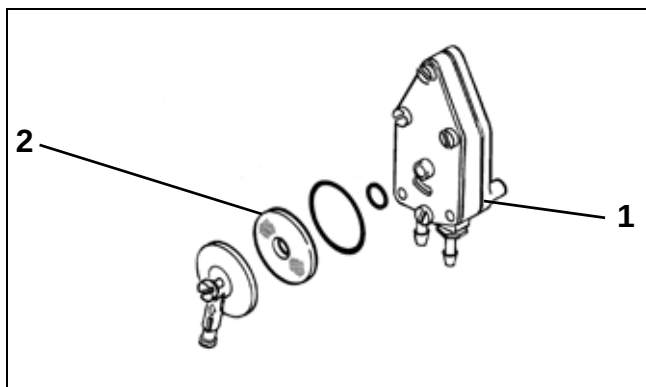

1. Fuel Pump
2. Filter element

DR3000

Air Silencer

The air silencer on *Johnson* outboards minimizes audible noise related to air flow into the engine.

Routine cleaning of the air silencer is recommended to remove any accumulation of fluid.

Hoses and Connections

Check condition of all hoses and connections related to the fuel system.

- Visually inspect all components.
- Observe all clamps, hoses, and connections while outboard is running.
- Replace all damaged components.
- Repair all leaks.

SPARK PLUGS

Spark plugs should be removed and examined periodically. Replace worn, fouled or damaged spark plugs.

- Remove spark plugs and inspect condition.
- Set spark plug gap on new, replacement spark plugs.
- Apply *Electrical Grease* to the ribbed portion of the spark plug ceramic and to the opening of the spark plug cover to prevent corrosion.

See table below for recommended spark plug data and gap setting.

Models	Recommended Spark Plug
9.9/15	<i>Champion</i> QL82C @ 0.030 in. (0.8 mm)

SYNCHRONIZATION AND LINKAGE ADJUSTMENTS


IMPORTANT: Synchronization and linkage procedures **MUST** be followed in sequence and be performed exactly as described to ensure consistent engine idling and smooth operation throughout the RPM range.

IMPORTANT: If equipped, remove both remote control cables from the outboard before performing these adjustments.

Preliminary Adjustments


TILLER MODELS

Turn the idle adjustment knob counterclockwise to the full SLOW position.

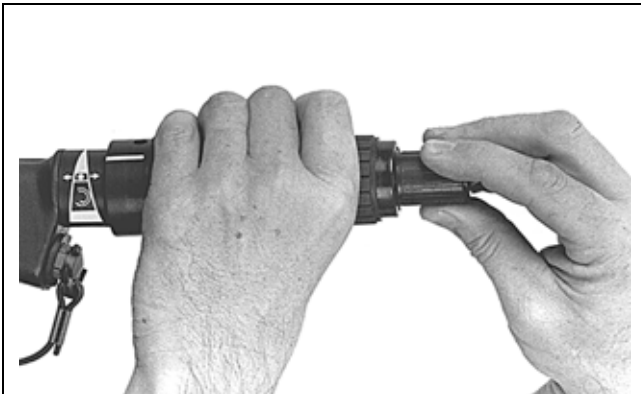

24333

Remove the pin retaining the cable connector to the throttle lever.

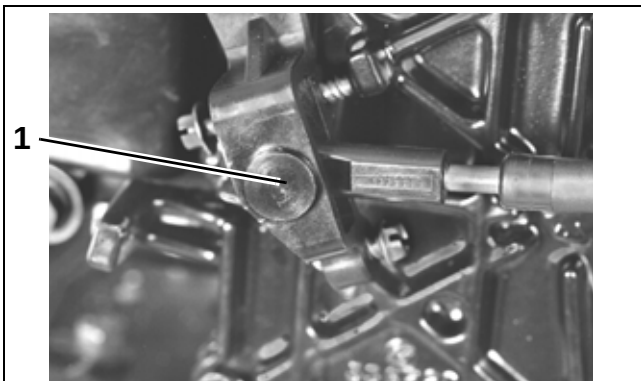

1. Pin


34783

Turn the connector clockwise until it seats. Turn counterclockwise no more than one-half turn to align it with the throttle lever. Install the retaining pin.



34782

The throttle cable bracket must be flush with the inside edge of the threaded cable. To adjust, remove the screw and turn bracket. Install screw.

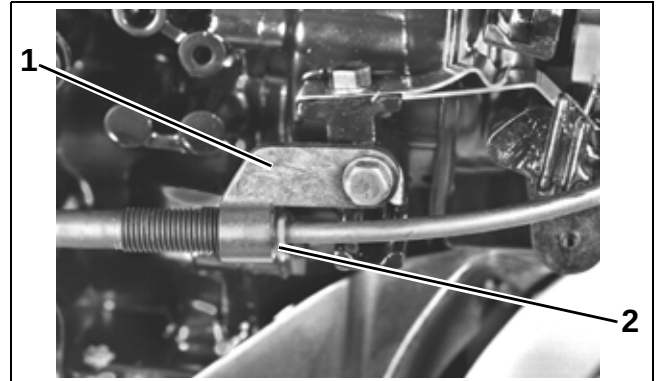
1. Throttle cable bracket
2. Screw

34784

Close the throttle completely so the idle speed screw is against the stop. The center of the cam follower roller should be halfway between pick-up mark and the end of the throttle cam.


TILLER AND REMOTE MODELS

To adjust, advance the throttle to wide-open position and adjust idle speed screw. Turn the screw in to move the cam closer to the roller and out to move cam away from the roller. Close the throttle

MAINTENANCE

SYNCHRONIZATION AND LINKAGE ADJUSTMENTS


completely and check the cam to roller alignment. Repeat procedure if necessary.

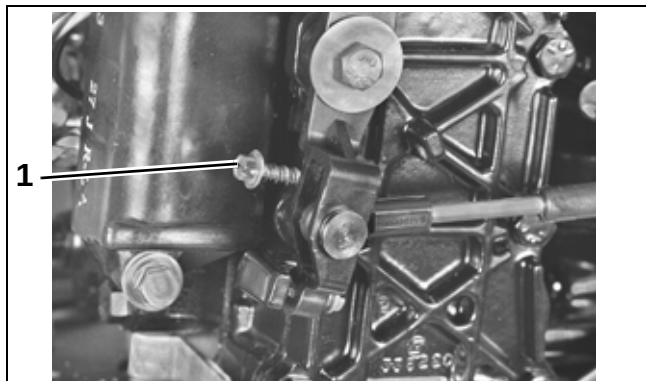


1. Idle speed screw

34786

Advance the throttle until the tip of the amplifier begins to move. At this point, the center of the roller should align with the indicator mark on cam.

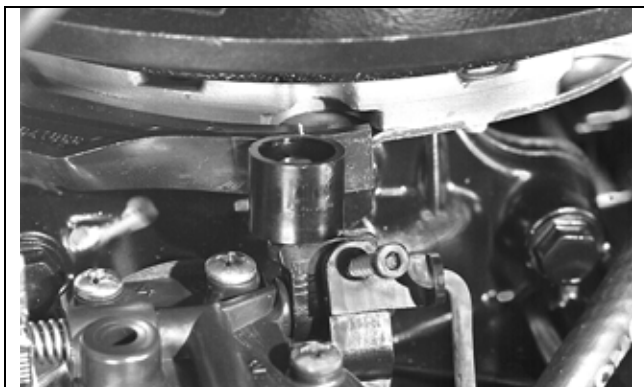

35001

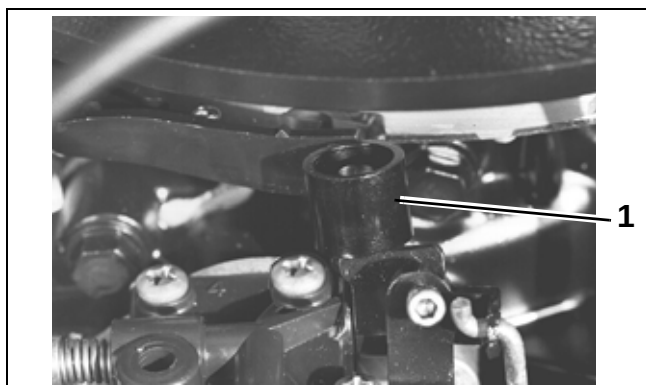

1. Cam follower roller

34785


To adjust, use Ball Hex Screwdriver, P/N 327622. Back out cam follower adjusting screw until the cam and cam follower do not touch. Turn the screw until amplifier begins to move and confirm the mark on cam aligns with the center of the cam follower. Repeat procedure if necessary. If air silencer is on, remove plug to adjust screw. Reinstall plug after procedure.



35002

Cam Follower Pickup Point


Connect a throttle shaft amplifier to the carburetor throttle shaft as shown.

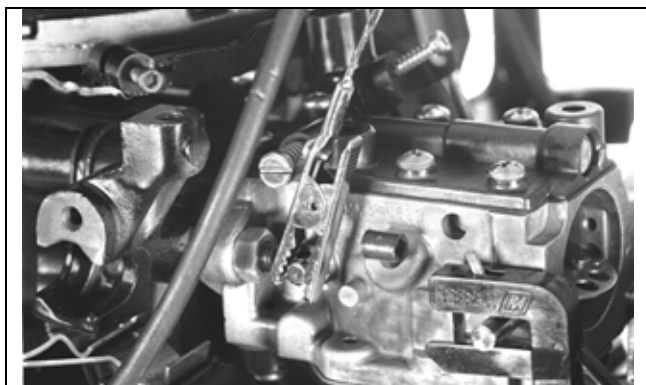

35000

Wide Open Throttle Adjustment


Adjust wide open throttle (WOT) stop screw until the tip protrudes 0.25 in. (8 mm) through the throttle lever.

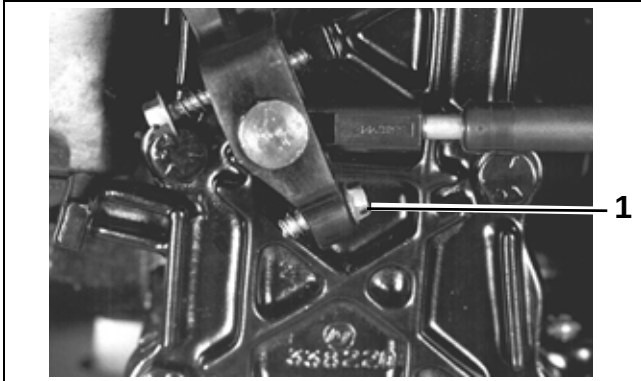

1. Stop screw, WOT


34778

Open throttle to WOT position and make sure the throttle shaft pin is vertical. If adjustment is required, turn the cam screw in to open the throttle valve and out to close the throttle valve.

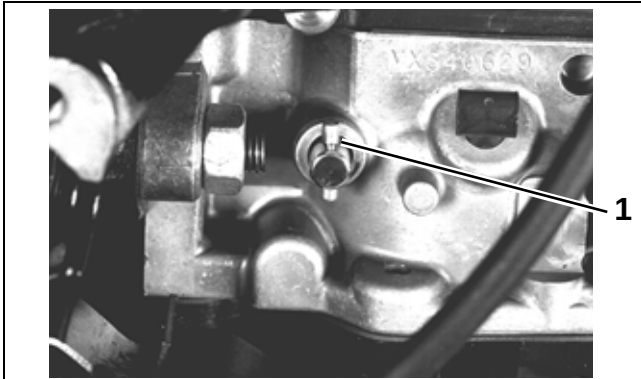

1. Throttle shaft pin

35003

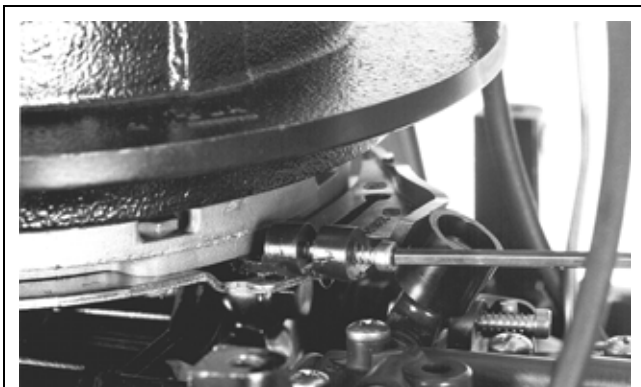

35004

Maximum Spark Advance


No maximum spark advance adjustment is necessary. Correct ignition primary lead position is all that is required to maintain proper ignition timing. Orange/blue lead must connect to top ignition coil.

Idle Speed

The boat must be in the water, under normal operating conditions, with correct propeller installed. The boat's movement must be unrestrained. The boat must not be tied to a dock or trailer.


Before proceeding with this procedure, be sure the low speed needle is properly adjusted. Refer to **CARBURETOR MIXTURE ADJUSTMENT** on p. 114.

Turn the idle speed knob fully counterclockwise to the full SLOW position (tiller models).

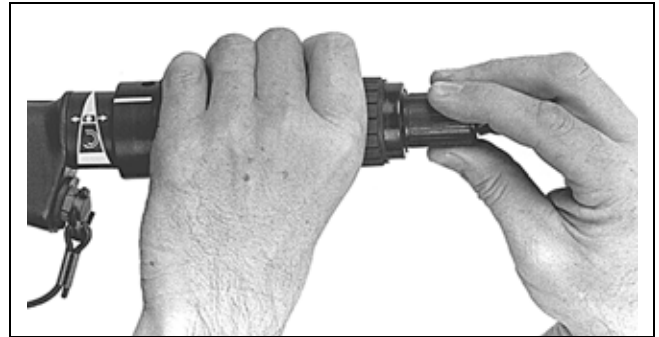

24333

Start the outboard and allow it to reach normal operating temperature. When speed is reduced, engine must idle at 700 ± 25 RPM in FORWARD gear. Stop the outboard and adjust the idle speed screw to change idle speed.

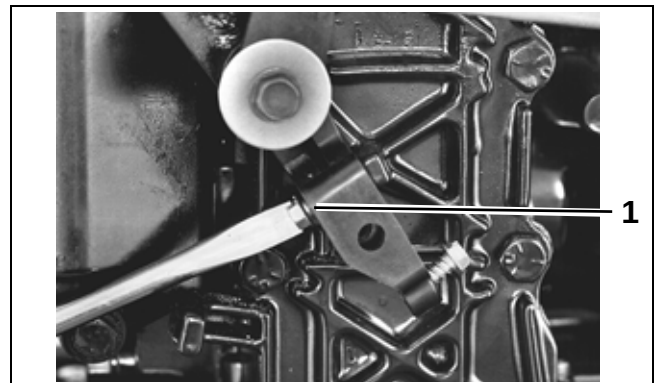


1. Idle speed screw

32979

MAINTENANCE

10-HOUR INSPECTION

Remove the throttle cable bracket screw. Adjust the throttle cable bracket to provide a slight pre-load against the idle speed screw when *Twist-Grip* throttle is held at the full throttle position (tiller models).

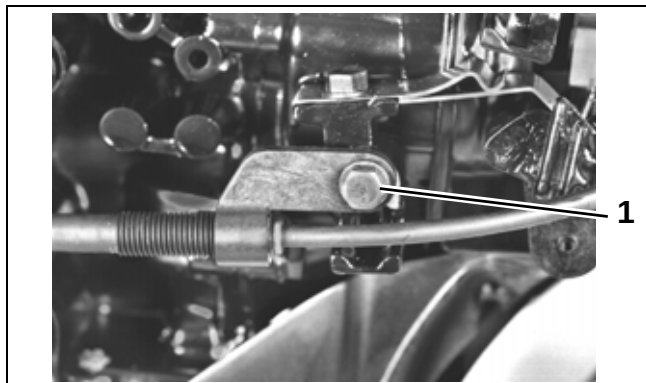

1. Throttle cable bracket screw

34784


Run outboard in gear at, or near, full throttle for one minute. Quickly reduce engine speed to 700 RPM and shift into NEUTRAL. Engine should continue to run smoothly.

If outboard stalls or backfires, the idle fuel mixture may be too lean. Refer to **CARBURETOR MIXTURE ADJUSTMENT** on p. 114.

Shift Lever Detent

Rotate propeller shaft and move the shift lever to NEUTRAL position.

The lower detent spring should be fully engaged in notch of the shift lever detent.

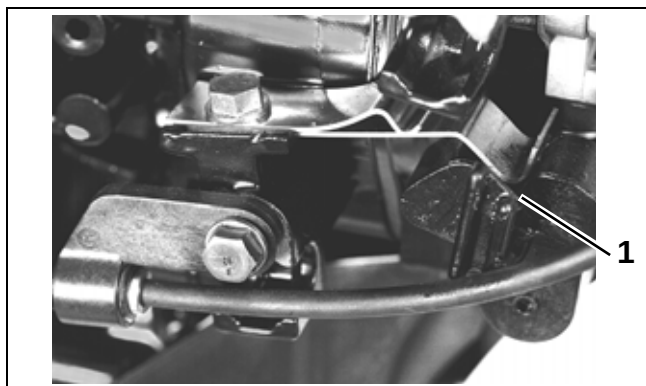

1. Notch

34780

10-HOUR INSPECTION

IMPORTANT: All *Johnson* outboard owners are encouraged to return their new engines to an authorized dealer for a mechanical check.

This check should be performed after approximately 10 operating hours. The cost of this check should be figured at local dealer labor rates and paid for by the engine owner.

The 10 hour inspection should check:

- Battery connections and condition
- *SystemCheck* and warning horn functionality
- Anticorrosion anodes functionality
- Water intake screens
- Overboard water pressure indicator functionality
- Steering system functionality (lubricate as needed)
- Throttle and shift operation
- Emergency stop circuit and lanyard functionality
- Fuel system components, fix and repair any leaks
- Fuel filter, eliminate any contamination
- Fasteners, tighten loose components
- Air silencer, clean and inspect
- Thermostat operation
- Engine to transom mounting hardware
- Electrical and ignition wires and connections
- Powerhead synchronization and linkage adjustments

STORAGE



WARNING



To prevent injury from contact with rotating propeller, remove the propeller before flushing.

IMPORTANT: DO NOT start outboard without a water supply to the outboard's cooling system. Cooling system and/or powerhead damage could occur.

Fuel System Treatment

Stabilize the boat's fuel supply with *Evinrude/Johnson 2+4 Fuel Conditioner* following the instructions on the container.

Prepare a "storage mixture" of fuel in a separate outboard six gallon fuel tank. The storage mixture should consist of:

- 5 gallons (18.9 liter) of fuel;
- 2 quarts (1.9 liter) of *Evinrude/Johnson Storage Fogging Oil*;
- 2.5 ounces (74 ml) of *Evinrude/Johnson 2+4 Fuel Conditioner*; and
- 1 pint (473 ml) of *Evinrude/Johnson* outboard lubricant.

Temporarily connect fuel tank with storage mixture to the outboard.

Shift the remote control to NEUTRAL and remove the propeller.

START outboard and RUN at IDLE speed for five minutes to ensure that the entire fuel system is filled with the storage mixture.

STOP outboard. Turn key switch to OFF position on remote electric start models. Proceed with **Internal Engine Treatment**.

Internal Engine Treatment

Use *Evinrude/Johnson Storage Fogging Oil* to prevent corrosion of internal engine components during periods of storage.

Remove all spark plugs and spray a liberal amount *Evinrude/Johnson Storage Fogging Oil* into the spark plug holes.

Turn the flywheel in a clockwise direction to distribute the fogging oil throughout the cylinders. Install and torque the spark plugs.

If outboard is equipped with a portable fuel tank, disconnect fuel hose from outboard and tank.

IMPORTANT: DO NOT restart outboard until it goes back into service.

If the outboard is removed from boat, examine all loosened and removed hardware. Replace damaged or missing parts with genuine *Evinrude/Johnson* parts or equivalent.

Additional Recommendations

- Replace gearcase lubricant.
- Remove and inspect propeller.
- Clean and grease propeller shaft.
- Lubricate all grease fittings and linkages.
- Clean or replace fuel filter element.
- Inspect outboard, steering system, and controls. Replace all damaged and worn components. Refer to manufacturer's maintenance and lubrication recommendations).
- Touch up painted surfaces as needed. Coat outer painted surfaces with automotive wax.
- Remove battery(s) from boat. Store in a cool, dry location. Periodically charge battery(s) while stored. (Refer to manufacturer's maintenance recommendations when servicing batteries.)
- Store outboard in upright (vertical) position.
- Check for fuel leakage.



WARNING



Failure to check for fuel leakage could allow a leak to go undetected, resulting in fire or explosion.

PRE-SEASON SERVICE

If outboard was removed from boat for storage, make certain it has been reinstalled with factory specified hardware. Refer to **INSTALLATION AND PREDELIVERY** section for proper set-up procedures.

Clamp Screws and Mounting Bolts

Check clamp screws and mounting bolts frequently. Grease or replace components as needed. High use applications require more frequent checks.

Gearcase Lubricant

- Check the lubricant level.
- Inspect gearcase for leaks. If leak is apparent, pressure and vacuum test gearcase.
- Repair gearcase as needed.

Battery(s)

- Replace batteries that cannot be properly charged.

Operational Checks

- Steering
- Throttle and shift
- *SystemCheck* gauge
- All other accessories and instrumentation

Fuel System

- Inspect entire fuel system for leaks prior to starting outboard. Repair all leaks.
- Start outboard and reinspect.



WARNING



Failure to check for fuel leakage could allow a leak to go undetected, resulting in fire or explosion.

SUBMERGED ENGINES

Once an outboard has been submerged in fresh or salt water, it must be serviced within three (3) hours of recovery. Immediate service can minimize the corrosive affect that air has on the polished surfaces of the crankshaft, connecting rods, and internal powerhead bearings.

IMPORTANT: If outboard cannot be started or serviced immediately, it should be resubmerged in fresh water to avoid exposure to the atmosphere.

Engine Dropped Overboard (Not Running)

Disconnect battery cables at the battery.

Rinse powerhead with clean water.

Remove spark plug leads and spark plugs.

Place outboard in horizontal position (cylinder heads down). Slowly rotate flywheel in a clockwise rotation to work all water out of powerhead.

IMPORTANT: If sand or silt may have entered the outboard, DO NOT attempt to start the it. Disassemble and clean.

Disassemble all electrical connectors. Clean connectors and terminals, and treat with water displacing electrical spray. Apply *Electrical Grease* to terminals prior to reassembly. Coat all exposed solenoid terminals and engine grounds with *Black Neoprene Dip*.

Clean and inspect all electrical components. Replace damaged or corroded components prior to returning the outboard to service. Electric starters should be disassembled, cleaned, flushed with clean water, and treated with water displacing electrical spray prior to reassembly.

Remove carburetor for draining, disassembly and cleaning.

Disconnect fuel supply hose from outboard. Drain and clean all fuel hoses, filters, and fuel tanks.

Inject a small amount of outboard lubricant into spark plug holes and install new spark plugs.

Reinstall all removed or disconnected parts.

Run outboard below 1500 RPM for one-half hour on a 25:1 fuel/oil mixture.

Engine Dropped Overboard (Running)

Follow the same procedures as **Engine Dropped Overboard (Not Running)**. However, if there is any binding when the flywheel is rotated, it may indicate a bent connecting rod and no attempt should be made to start the outboard. Powerhead must be disassembled and serviced immediately.

Engine Dropped Overboard (In Salt Water)

Follow the same procedures used for **Engine Dropped Overboard (Not Running)** and **Engine Dropped Overboard (Running)**. Disassemble and clean outboards that have been submerged in salt water for prolonged periods of time. Clean or replace electrical components as necessary.

Prolonged Submersion (Fresh or Salt Water)

Outboards that have been dropped overboard and not recovered immediately, must be serviced within three hours of recovery. Follow the same procedures used for **Engine Dropped Overboard (Not Running)** and **Engine Dropped Overboard (Running)**.

NOTES

Technician's Notes

[illegible]

Related Documents

[illegible]

ELECTRICAL

TABLE OF CONTENTS

CHARGING SYSTEM COMPONENTS	68
FLYWHEEL	68
STATOR	68
RECTIFIER	68
CHARGING SYSTEM TESTS	69
CHARGING SYSTEM CHECK CHART	69
RUNNING ALTERNATOR OUTPUT TEST	69
STATOR RESISTANCE TESTS	70
RECTIFIER RESISTANCE TESTS	70
TACHOMETER CIRCUIT TEST	71
ELECTRIC STARTER TESTS	72
START SWITCH TEST	72
START CIRCUIT VOLTAGE TEST	72
VOLTAGE DROP TESTS	75
STARTER SOLENOID TEST	76
NO LOAD CURRENT DRAW TEST	77
ELECTRIC STARTER SERVICING	77
REMOVAL	77
DISASSEMBLY	77
CLEANING AND INSPECTION	78
ASSEMBLY	79
INSTALLATION	80
ACCESSORY COMPONENTS	81
REMOVAL	81
INSTALLATION	82
CONNECTOR SERVICING	82
AMPHENOL CONNECTORS	82
NOTES	84

CHARGING SYSTEM COMPONENTS


Information in this section may only apply if any of the following kits have been installed:

- Electric Start Kit, P/N 586398
- Remote Electric Start Kit, P/N 176905
- Battery Charging Kit, P/N 176942

The charging system consists of a battery, flywheel, alternator stator, and rectifier.

Flywheel


The engine's flywheel contains permanently charged magnets. The magnets supply energy to power the stator windings. The magnets must be at their original design strength for full alternator output.

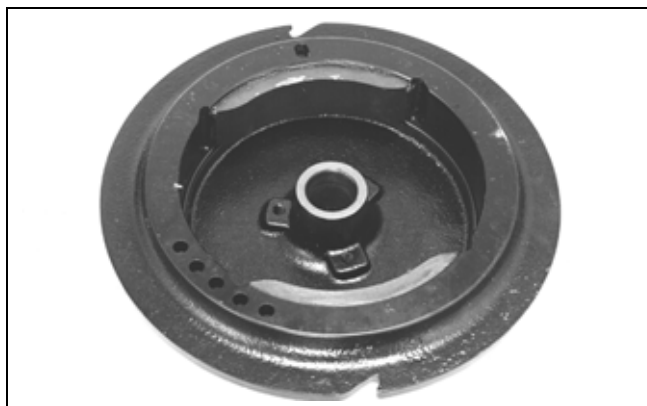

32278

Stator

The alternator stator has windings wrapped around metal laminations. The flywheel's magnetic lines of force cutting through the stator windings produce alternating current.

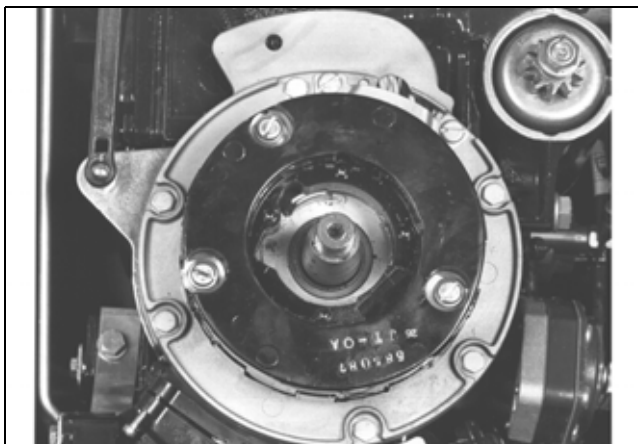

9.9/15 Model (Accessory Alternator)

42852

Rectifier

The rectifier consists of a series of diodes which change the stator's alternating current to the direct current used to charge the battery.



42854

CHARGING SYSTEM TESTS

Charging System Check Chart

Where to Look	Cause	Procedure	Reference
Battery	Battery defective or worn out	Check condition and charge	Accessories Service Manual
	Low electrolyte level	Add water and recharge	
	Terminal connections loose or corroded	Clean and tighten	
	Excessive electrical load	Evaluate accessory loads	
Wiring	Connections loose or corroded	Clean and tighten	Running alternator output test; Stator resistance test
	Stator leads shorted or grounded	Perform ohmmeter tests	Stator resistance test
	Circuit wiring grounded	Perform ohmmeter tests	
Alternator/stator	Damaged stator windings	Perform ohmmeter tests	Stator resistance test
	Weak flywheel magnets	Perform running output tests	Running alternator output test
	Damaged stator leads	Perform ohmmeter tests	Stator resistance test
Rectifier	Inoperative rectifier	Perform rectifier tests	Rectifier resistance tests

Running Alternator Output Test

Disconnect battery cables at the battery.

Remove the rectifier red lead.

Wire a 0 to 40 A ammeter in series with the rectifier red lead and the wiring harness red lead.




CAUTION



Guard against any red wire, its terminals, or the ammeter coming in contact with engine ground while the engine is running. Contact could cause arcing.

The outboard's battery should not be fully charged when beginning this test. Connect the battery cables and run the outboard in a test tank. Refer to the output curve to determine the correct output-to-RPM ratio.

- If there is no output or the output is not correct, refer to **Stator Resistance Tests** on p. 70 and **Rectifier Resistance Tests** on p. 70.

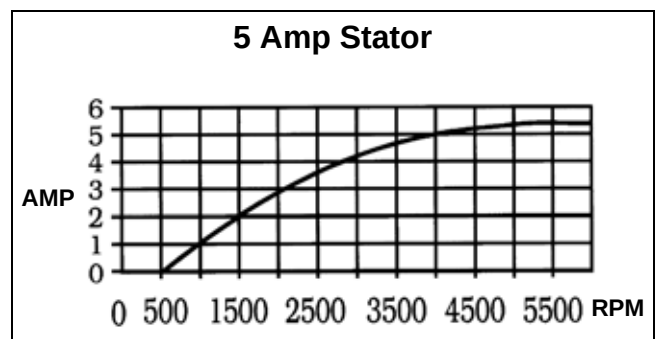

9.9/15 Model

DRC4809

ELECTRICAL

CHARGING SYSTEM TESTS


Stator Resistance Tests

Disconnect the battery cables at the battery.

Disconnect all stator leads.

Calibrate ohmmeter on appropriate scale. Connect meter leads between the two stator yellow/gray leads.

- Ohmmeter must show a low reading.
- If ohmmeter shows a high reading, repair lead between the two yellow/gray connectors, or replace stator.

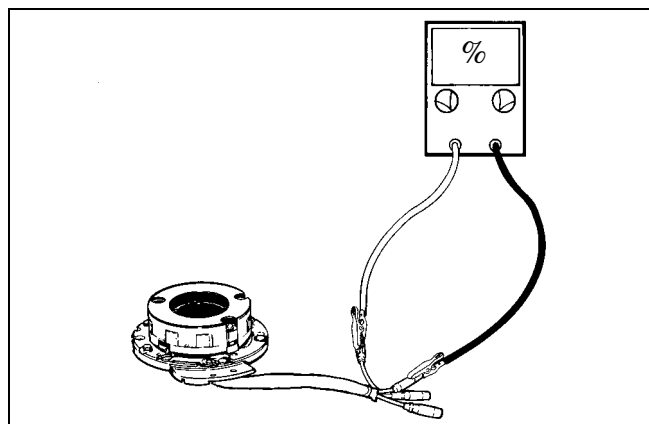

DR4816

Connect meter leads between the yellow and yellow/gray stator leads.

- Ohmmeter must show 0.80 to 0.90 ohms.

Connect meter leads between the yellow and yellow/blue stator leads.

- Ohmmeter must show 0.80 to 0.90 ohms.


Connect meter leads between yellow/blue and one yellow/gray lead.

- Ohmmeter must show 1.5 to 1.7 ohms.

To check stator for a grounded condition, connect one meter lead to a clean engine ground and the other lead alternately to the yellow/blue, yellow, and yellow/gray stator leads.

- Ohmmeter should show a high reading.
- If ohmmeter shows a low reading, stator is grounded.

If a stator lead is grounded, repair it or replace the stator assembly.

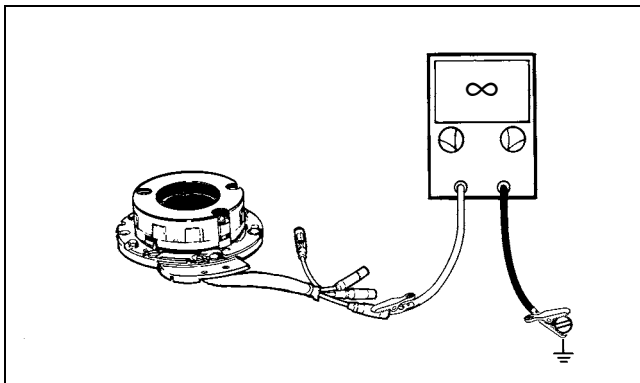

DR4818

Rectifier Resistance Tests


Disconnect the battery cables at the battery.

STEP 1

Disconnect all rectifier leads from terminal board.

Calibrate ohmmeter on appropriate scale. Connect one lead to a clean engine ground. Connect the other lead to the rectifier yellow/gray lead. Note the reading. Reverse the ohmmeter connections or press the "reverse polarity" button and note the reading. Perform the same procedure on the yellow and yellow/blue rectifier leads. Note the readings.

- A high reading in one direction and a low reading in the other direction indicates the diode is OK.
- Two high readings or two low readings indicate the diode is damaged.

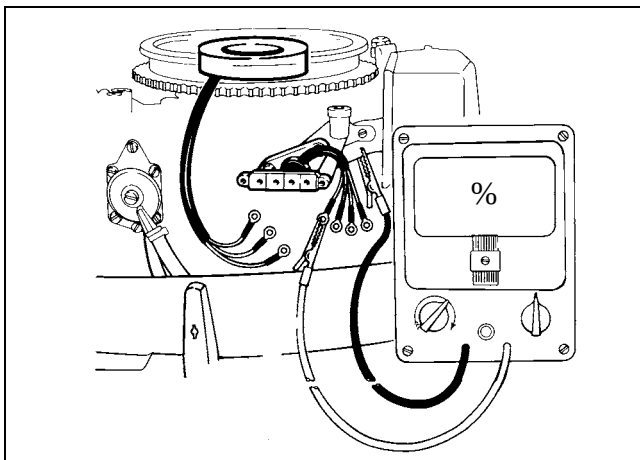


DR4157

STEP 2

Move ohmmeter lead from engine ground to rectifier red lead. Connect the other meter lead to the yellow/gray rectifier leads. Note the reading. Reverse the ohmmeter connections or press the "reverse polarity" button and note the reading. Perform the same procedure on the yellow and yellow/blue rectifier leads. Note the readings.

- A high reading in one direction and a low reading in the other direction indicates the diode is OK.
- Two high readings or two low readings indicate the diode is damaged.

Replace the rectifier if test results vary.

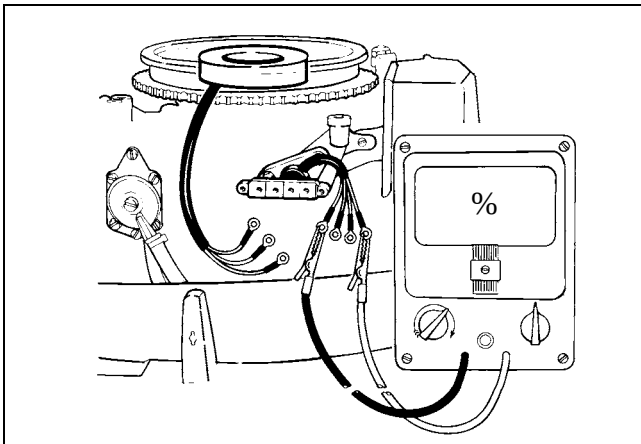

DR4158

TACHOMETER CIRCUIT TEST

IMPORTANT: The tachometer circuit is driven by the stator output. Before proceeding, check condition of the stator and do the **Stator Resistance Tests** on p. 70.

Inspect all engine and boat wiring and make sure connectors are in good condition.

Do the following tests if the tachometer does not operate.

STEP 1

Set peak-reading voltmeter to "POS" and "50." Check voltage at the battery.

- Use this reading as the reference for battery voltage.

STEP 2

Check for battery voltage between the tachometer purple lead and black lead at the dash with the engine NOT running and the key switch ON.

- If the voltmeter shows battery voltage, go to **STEP 3**.
- If the voltmeter shows less than battery voltage, check the purple, purple/red, and black circuits engine fuse, key switch, and the battery connections.

STEP 3

With the engine NOT running and the key switch ON, check for battery voltage between the instrument harness gray lead and black lead at the dash.

- If voltmeter shows 0 V, go to **STEP 4**.
- If voltmeter shows any voltage replace rectifier.

ELECTRICAL

ELECTRIC STARTER TESTS

STEP 4

With the engine running at 1000 RPM, check for voltage between the instrument harness gray lead and black lead at the dash.


- If voltmeter shows 0 V, go to **STEP 5**.
- If voltmeter shows more than 8 V, replace the tachometer.

STEP 5

With the engine running at 1000 RPM, check for voltage at the engine terminal board gray connection.

- If voltmeter shows 0 V, replace or repair the rectifier.

If the voltmeter shows 8 V or higher, check the instrument harness and engine harness gray circuit for an open.

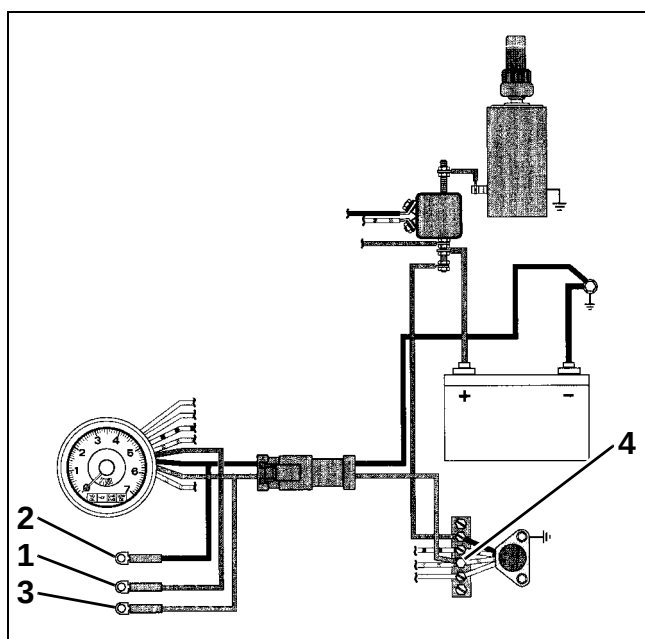

1. Purple lead
2. Black lead
3. Gray lead
4. Terminal board gray connection

DRC6297

ELECTRIC STARTER TESTS

Start Switch Test

Disconnect the two starter switch leads.

Connect ohmmeter between switch leads. Activate switch. Meter must indicate resistance as follows:

- Low resistance reading when switch is pressed.
- High resistance reading when switch is released.

Replace the start switch if test results are not correct.

Start Circuit Voltage Test



WARNING



Avoid accidental starting while testing; disconnect the starter cable from the starter terminal.

IMPORTANT: Outboard must be in NEUTRAL throughout test procedure and battery must be fully charged.

STEP 1

Connect voltmeter red lead to battery positive (+) terminal. Connect voltmeter black lead to battery negative (-) terminal. Check the battery voltage.

- If the voltmeter shows 12 V, go to **STEP 2**.
- If the voltmeter shows 0 V, test the battery.

STEP 2

Move the voltmeter black lead to the rectifier terminal ground. Check the voltage between battery positive (+) terminal and rectifier terminal ground.

- If the voltmeter shows 12 V, go to **STEP 3**.
- If the voltmeter shows 0 V, test the negative (-) battery cable.

STEP 3

Move the voltmeter red lead to the start switch connection. Check the voltage between the start switch connection and rectifier terminal.

- If the voltmeter shows 12 V, go to **STEP 4**.
- If the voltmeter shows 0 V, test the positive (+) battery cable.

STEP 4

Move the voltmeter black lead to powerhead ground. Check the voltage between the start switch connection and powerhead ground.

- If the voltmeter shows 12 V, go to **STEP 5**.
- If the voltmeter shows 0 V, clean and tighten the rectifier terminal screw.

STEP 5

Move the voltmeter red lead to the start switch output lead. Push the start button. Check the voltage between the start switch output lead and powerhead ground.

- If the voltmeter shows 12 V, go to **STEP 6**.
- If the voltmeter shows 0 V, check the start switch, start switch wires and start switch connection.


STEP 6

Remove voltmeter red and black leads. Connect the start switch output lead to the starter terminal. Push the start button. Check for correct operation of the starter.

- If the starter runs, check the condition of the pinion.
- If the starter does not run, service the starter. Refer to **ELECTRIC STARTER SERVICING** on p. 77.

ELECTRICAL

ELECTRIC STARTER TESTS

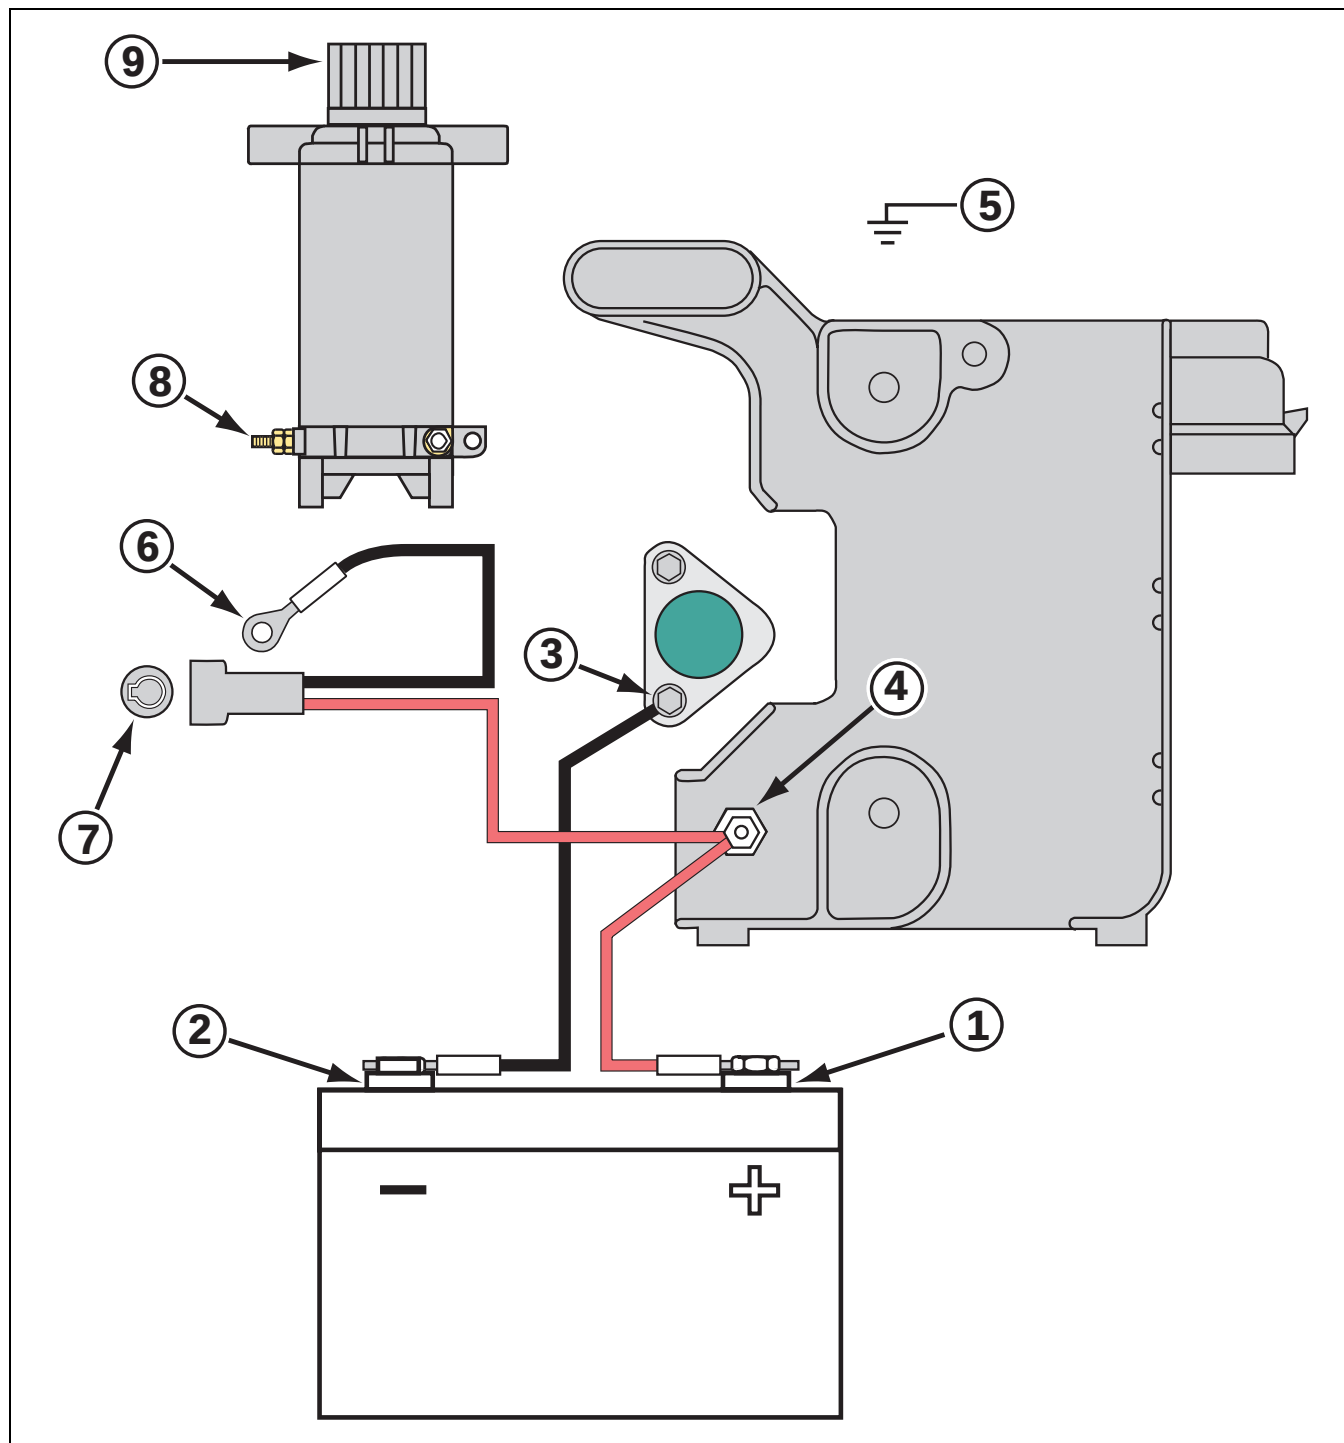

TYPICAL

1. Battery positive (+)
2. Battery negative (-)
3. Rectifier terminal ground
4. Start switch connection
5. Powerhead ground
6. Start switch output lead
7. Start button
8. Starter terminal
9. Pinion

DRC6305

Voltage Drop Tests



WARNING




Avoid accidental starting while testing; twist and remove all spark plug leads.

STEP 1

Connect voltmeter positive (+) lead to battery positive (+) post. Connect voltmeter negative (-) lead to starter solenoid positive (+) terminal. Turn key switch to START to crank engine.

- Voltage reading must not be more than 0.3 volt.

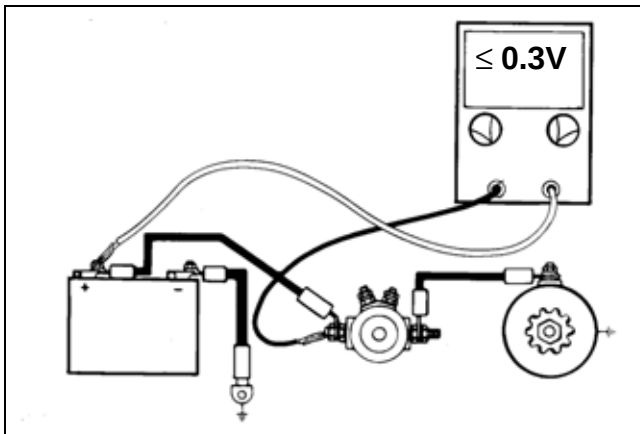

DRC4029


IMPORTANT: In **STEP 2**, connect the voltmeter leads only while the engine is cranking, or damage to the voltmeter can occur.

STEP 2

Connect voltmeter negative (-) lead to the starter side of the starter solenoid terminal. While cranking engine, connect voltmeter positive (+) lead to starter solenoid opposite terminal.

- Voltage reading must not be more than 0.2 V.

Remove voltmeter positive (+) lead from starter solenoid and stop cranking engine.

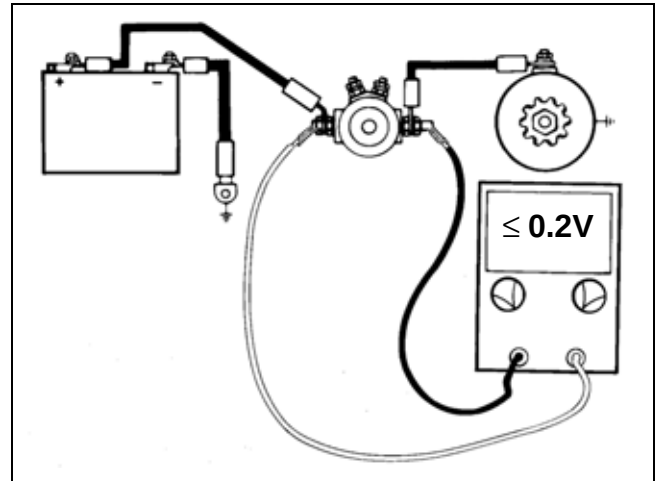


DRC4030

STEP 3

Connect voltmeter positive (+) lead to starter solenoid, starter lead terminal. Connect voltmeter negative (-) lead to starter motor terminal. Turn key switch to START.

- Voltage reading must not be more than 0.2 V.

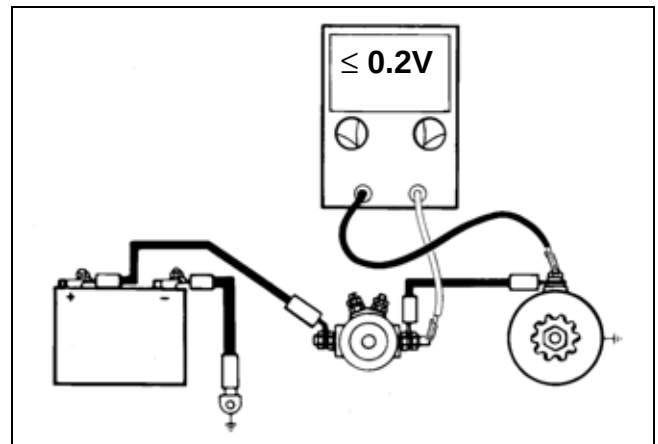

DRC4031


ELECTRICAL

ELECTRIC STARTER TESTS

STEP 4

Connect voltmeter positive (+) lead to battery negative (-) lead common powerhead ground screw. Connect voltmeter negative (-) lead to battery negative (-) post. Turn key switch to START.

- Voltage reading must not be more than 0.3 volt.

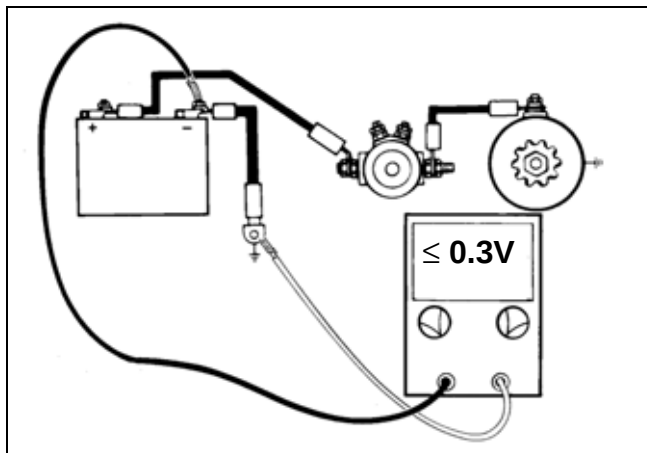

DRC4032

STEP 5

Clean and tighten, or replace, any connection, cable, or other component that does not meet the specified values.

Starter Solenoid Test

IMPORTANT: All engine wiring must be disconnected from the solenoid before proceeding.

STEP 1


Connect one ohmmeter lead to terminal (A) and the other lead to terminal (B).

- Ohmmeter must show a high reading.
- If ohmmeter shows a low reading, replace the solenoid.

STEP 2

With the ohmmeter still connected, attach a positive (+) battery jumper to terminal (C) and a negative (-) battery jumper to terminal (D). The solenoid should close with an audible click.

- Ohmmeter must show a low reading.
- If ohmmeter shows a high reading, replace the solenoid.

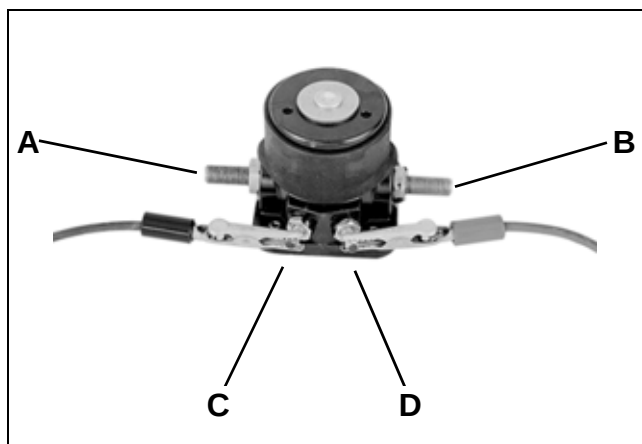

24082

After installing the solenoid, coat all wires and terminals with *Black Neoprene Dip*.

No Load Current Draw Test

Securely fasten starter in a vise or suitable fixture before proceeding with this check.


Use a battery rated at 350 CCA or higher that is in good condition and fully charged.

Connect a 0 to 50 amp ammeter in series with a heavy jumper between the battery positive (+) terminal and the starter positive (+) terminal.

Fluke⁺ model 334 or 336, *Snap-On*⁺ model MT110 or EETA501, and various other ammeters should be available through your local tool suppliers.

Attach or hold a vibration tachometer, such as a *Frahm*⁺ *Reed* tachometer, to the starter.

Complete the circuit with a heavy jumper between the battery negative (–) terminal and the starter frame.

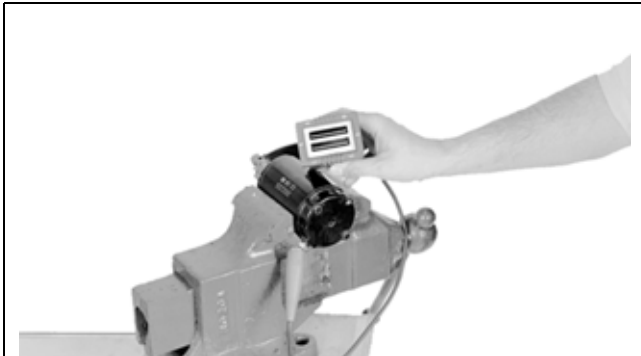

3459

Monitor the starter RPM and current draw. Refer to the chart below for the correct specifications.

No Load Current Draw Specifications

Model	Voltage	Amps (Maximum)	RPM
9.9/15	12 to 12.4	7	7000 to 9200

IMPORTANT: When performing this test, the driven gear and pinion assembly must be removed.

ELECTRIC STARTER SERVICING


Removal

Disconnect the battery cables at the battery.

Remove the two retaining screws.

Disconnect the starter lead at the terminal on the bottom of the starter.

Remove rectifier from the starter bracket.

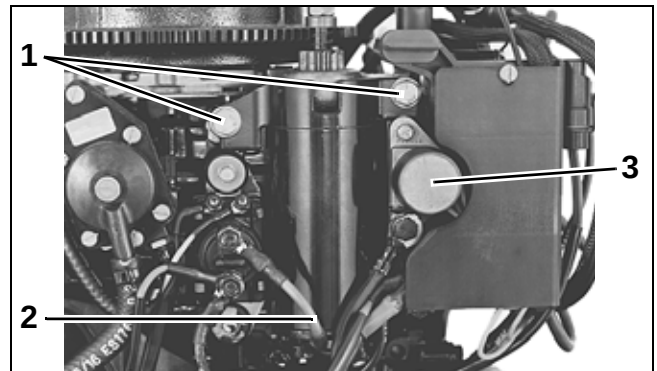

1. Screws
2. Starter lead at terminal
3. Rectifier

32987

Disassembly

IMPORTANT: Before disassembly, scribe marks on starter frame for reference during reassembly.


Remove the two bolts.

Remove the drive end cap and the armature from the frame and magnet assembly.

ELECTRICAL

ELECTRIC STARTER SERVICING

Remove the brush end cap from the frame and magnet assembly.

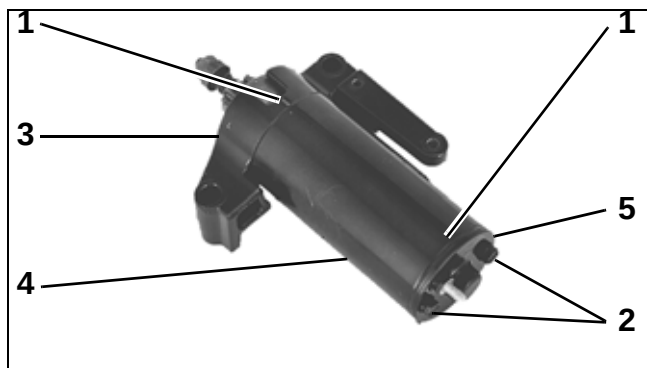


1. Scribe marks
2. Bolts
3. Drive end cap
4. Frame
5. Brush end cap

32986


Cleaning and Inspection

Inspect the brushes for wear and damage. Replace brushes if damaged or worn. Replace weak brush springs.

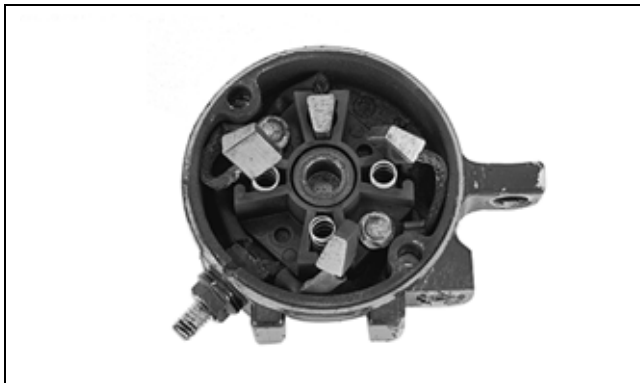


24056

Remove the pinion nut, spacer, spring, pinion, and washer from the armature.

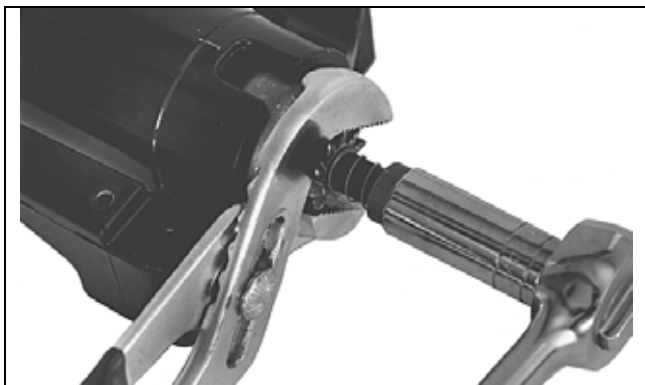

32985

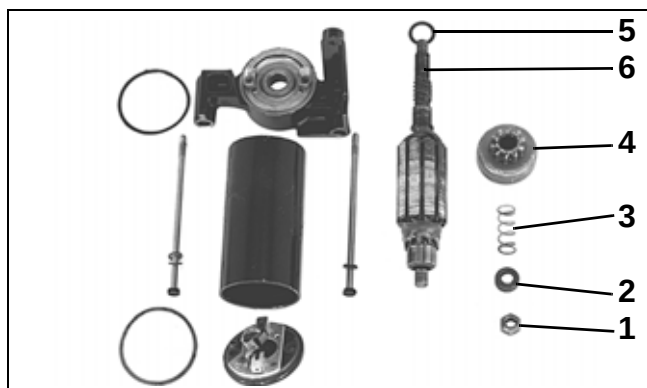


1. Pinion nut
2. Spacer
3. Spring
4. Pinion
5. Washer
6. Armature


32983

Clean commutator with 300-grade emery cloth. If commutator surface is unevenly worn or pitted, turn on a lathe. Remove any trace of oil or metal dust from commutator.

Check the armature on a growler for shorted turns using a test light or meter. Inspect armature insulation for indications of overheating or damaged windings. Clean off any carbon deposits or foreign matter which could contribute to failure of windings.

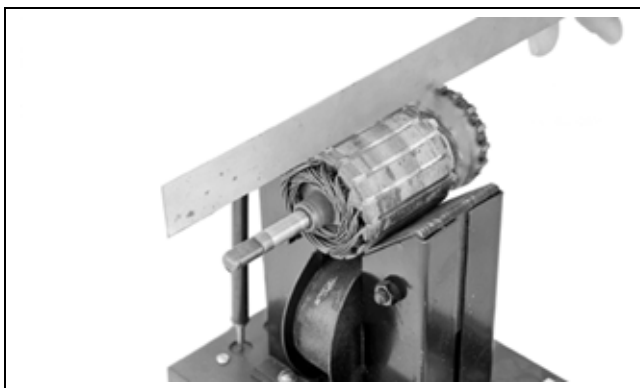

24059

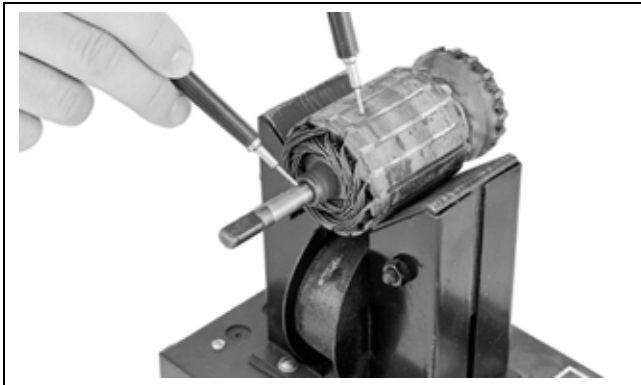

24058

Check permanent magnets and make sure they strongly attract any steel or iron object held inside frame. Weak magnets could cause excessive RPM on **No Load Current Draw Test** on p. 77.



24057


Do not clean drive assembly while the starter and drive are installed. The cleaning agent could drain into the starter, washing dirt from the drive into the bearings and commutator. After disassembling, clean each part with a grease solvent and inspect.

If the pinion does not properly engage the fly-wheel, the pinion and screw shaft assembly may be worn, distorted, or dirty. Locate the cause of binding and correct it before completing the assembly.

Assembly

Lubricate the armature shaft bearing surface with *Moly Lube*. Lubricate the armature shaft on and above the pinion helix with *Starter Pinion Lube*, P/N 337016.

Assemble the brush end cap with brushes and springs to the armature shaft. Place a new gasket on the brush end cap.

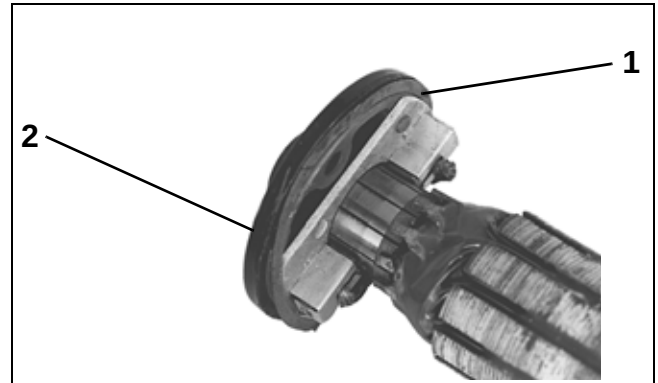

1. Brush end cap
2. Gasket

32982




WARNING



Use caution when inserting armature into frame and magnet assembly as the permanent magnets in the frame exert extreme pulling force on the armature which could result in pinched fingers.

Align the brush end cap mark with the mark on the frame and magnet assembly. Assemble the brush end cap to the frame and magnet assembly.

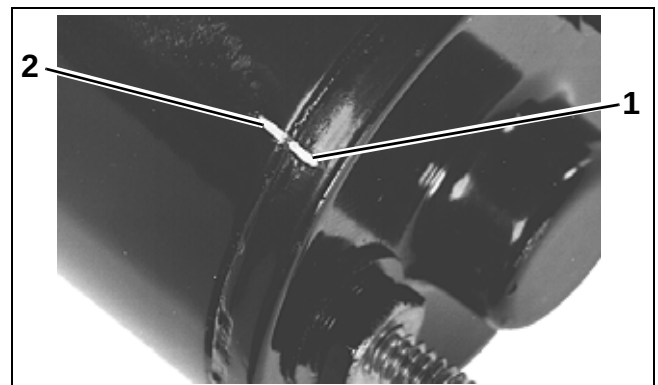

1. Brush end cap scribe mark
2. Frame scribe mark


32981

ELECTRICAL

ELECTRIC STARTER SERVICING

Place the washer on the armature shaft. Place a new gasket on the drive end cap.


Align the drive end cap mark with the mark on the frame and magnet assembly. Assemble the drive end cap to the frame and magnet assembly.

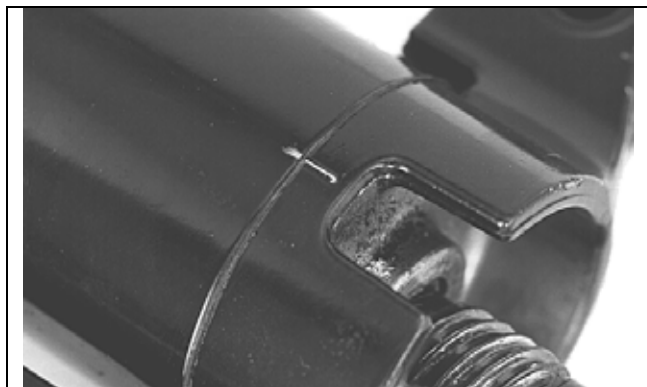

32980

Put a drop of oil on the two thru-bolts and install the thru-bolts. Tighten the thru-bolts and torque 30 to 40 in. lbs. (3.4 to 4.6 N·m). Apply *Black Neoprene Dip* to the seams between the end caps and frame and magnet assembly.

Assemble the pinion, spring, spacer, and nut to the armature shaft. Tighten the nut and torque 150 to 170 in. lbs. (17 to 19 N·m).

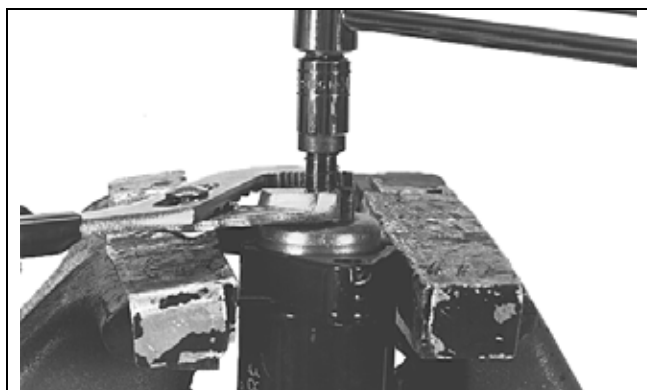

30695

Refer to **No Load Current Draw Test** on p. 77 to check starter operation.


Installation

Install the starter on the bypass cover. The electric starter motor must be held firmly against the bracket while bolting it to the bypass cover. Tighten screws and torque 10 to 12 ft. lbs. (14 to 16 N·m).

Install the starter lead to the starter. Tighten the nut securely. Apply *Black Neoprene Dip* to connection.

IMPORTANT: When tightening the terminal nut, make sure the starter lead and terminal does not turn into a position where the lead and terminal could contact the starter or lower engine cover.

Attach rectifier and two black wires to starter bracket.

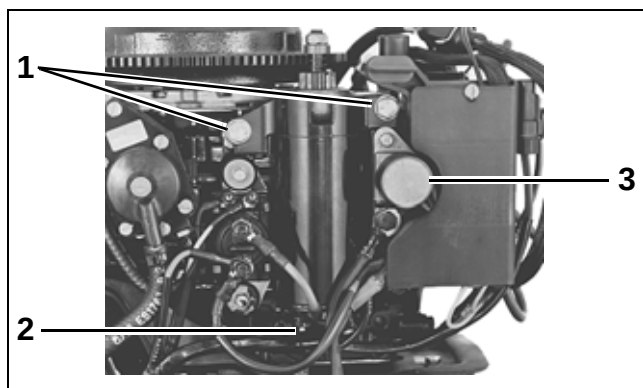

1. Screws
2. Starter lead at terminal
3. Rectifier

32987

Reconnect the battery cables at the battery.

ACCESSORY COMPONENTS

Use these procedures if it is necessary to remove any of the following accessory components:

- Primer
- Solenoid
- Rectifier
- Electrical bracket

IMPORTANT: Disconnect the battery cables at the battery.

Removal

Disconnect the black and purple/white wires and remove the primer.



32704


Remove the black and yellow/red wires from the top posts. Remove the red cables and remove the solenoid with bracket.



1. Black wire
2. Yellow/red wire

32703

Disconnect the yellow/blue, yellow/gray, and yellow wires. Remove the red wire and two screws retaining the rectifier and black cables. Remove the rectifier.

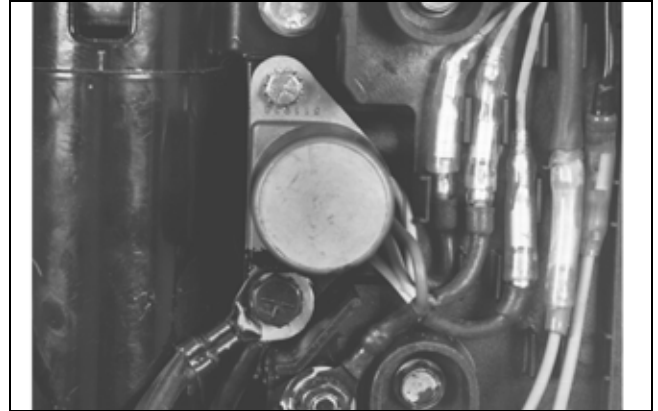

32722

Remove the fuse and disconnect the gray and tan wires.




32717

ELECTRICAL

CONNECTOR SERVICING

Remove the two screws retaining the electrical bracket. Remove the bracket.

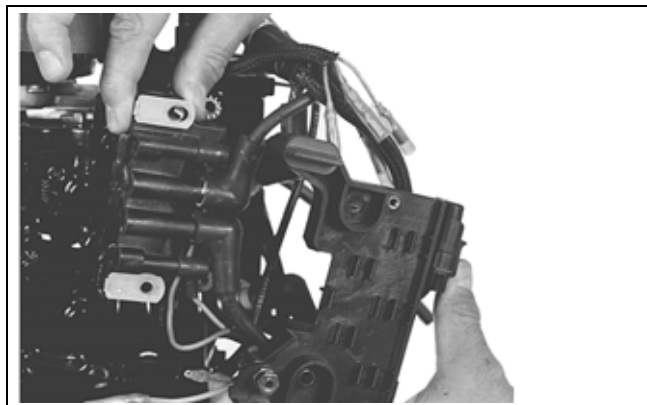

32721

Installation

Installation is essentially the reverse of removal. Pay close attention to any **additional** task that may be required for installation.

Install bracket (with coil) on powerhead. Torque screws 48 to 96 in. lbs. (5.4 to 10.8 N·m).

Install the fuse and connect the gray and tan wires.

Install the rectifier with the red wire and black cables and torque screws 48 to 96 in. lbs. (5.4 to 10.8 N·m). Connect the yellow/blue, yellow/gray, and yellow wires.

Install bracket with solenoid and tighten screws securely. Attach the red cables (starter cable to top large post). Attach black and yellow/red wires to top posts.

Install primer and connect black and purple/white wires.

CONNECTOR SERVICING

Amphenol Connectors

Terminal Removal

To remove a terminal from the plug or receptacle, lubricate both ends of the cavity with isopropyl alcohol.

Pick the proper tool for the service being performed. Refer to "SPECIAL TOOLS" on page 21.


- Pin Remover, P/N 322698
- Socket Removal Tool, P/N 322699
- Crimping Pliers, P/N 322696
- Pin Insert Tool, P/N 322697

Place the plug or receptacle against the edge of a flat surface with clearance behind connector for terminal to be pushed out. Push terminal from connector with appropriate tool.




30386

Pin and socket terminals may be replaced if damaged. Strip 1/4 in. (6 mm) insulation from wire and crimp new terminal onto wire with crimping pliers.

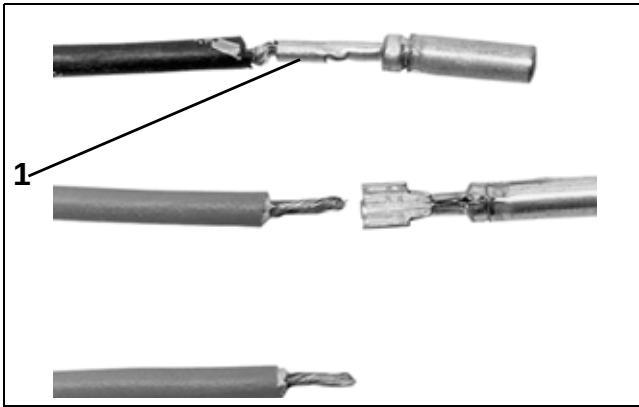

1. New terminal

42201

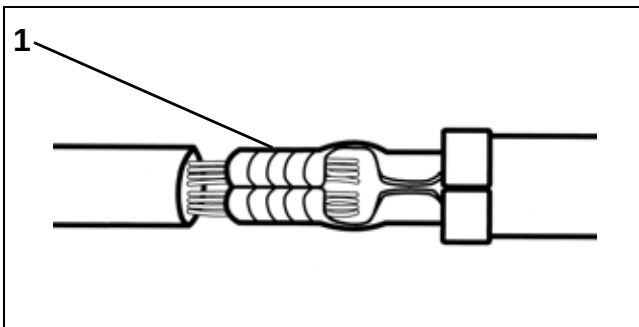

1. Crimp point

DR6201

Terminal Installation

Connect the plug and receptacle before installing terminal. Apply isopropyl alcohol to connectors, align arrows, and push together.

Apply isopropyl alcohol to the terminal cavity.

Place connectors against solid surface.




CAUTION




To avoid injury, hold tip of tool securely against shoulder of terminal while inserting terminal.

Push terminal into connector until step of insert tool touches connector body.

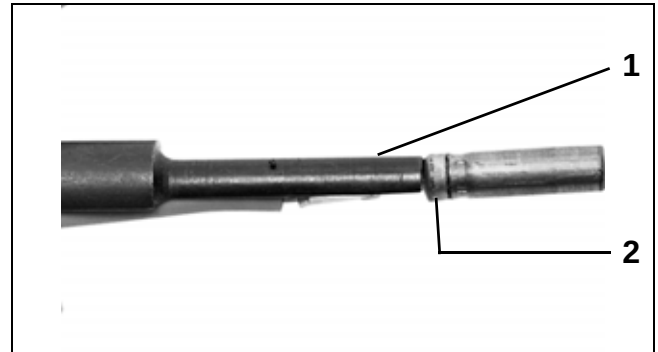

1. Tip of tool
2. Shoulder of terminal


42226

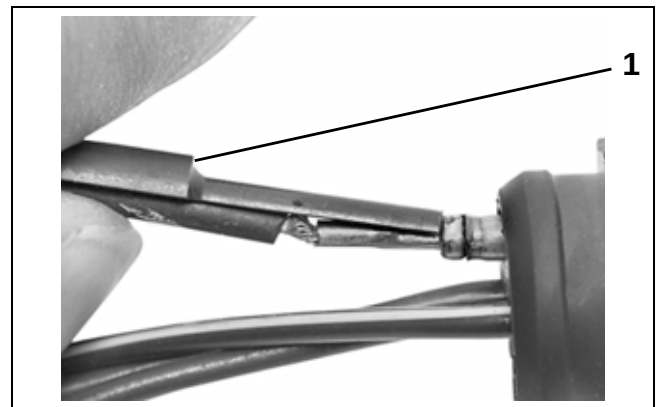

1. Step

42227

Check your work. Separate the connectors and check to see that terminals are inserted the proper distance.

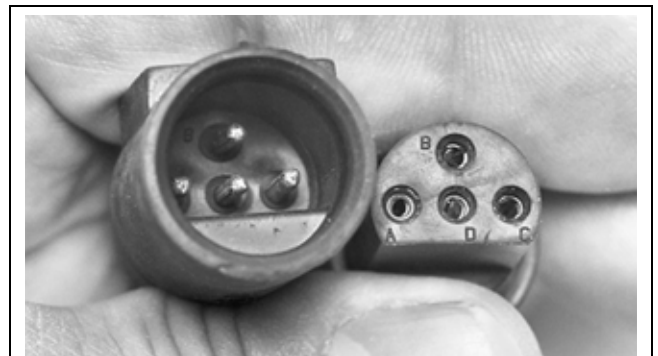

42228

NOTES

Technician's Notes

[illegible]

Related Documents

[illegible]

IGNITION


TABLE OF CONTENTS

COMPONENTS	86
FLYWHEEL	86
CHARGE COIL	86
SENSOR COIL	86
POWER PACK	86
STOP BUTTON	87
KEY SWITCH	87
IGNITION COIL	87
TROUBLESHOOTING	88
FLYWHEEL INDEXING	88
IGNITION SYSTEM TESTS	89
TOTAL IGNITION OUTPUT TEST	89
STOP CIRCUIT TESTS	89
CHARGE COIL TEST	91
SENSOR COIL TEST	92
POWER PACK CRANKING OUTPUT	94
POWER PACK RUNNING OUTPUT	94
IGNITION COIL TESTS	95
SPARK PLUGS	97
FLYWHEEL SERVICING	97
REMOVAL	97
INSTALLATION	98
IGNITION PLATE SERVICING	99
REMOVAL	99
INSTALLATION	99
CHARGE COIL AND SENSOR COIL	100
REMOVAL	100
INSTALLATION	101
IGNITION COIL	102
REMOVAL	102
INSTALLATION	102

COMPONENTS

Flywheel

The flywheel contains permanent magnets which energize the charge coil, sensor coil, and alternator stator. Once the flywheel exceeds a minimum cranking RPM, the flywheel's magnetic lines of force pass through the ignition plate components to produce voltage in those circuits.

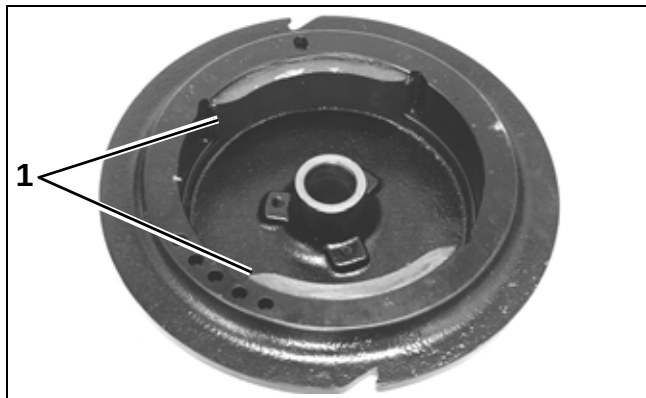


1. Permanent magnets

32278

Charge Coil

The charge coil contains many windings of wire wrapped around a metal lamination. Once the flywheel exceeds a minimum cranking RPM, the flywheel's magnetic lines of force pass through the coil windings to produce voltage. The voltage is supplied to the power pack to operate the ignition system.

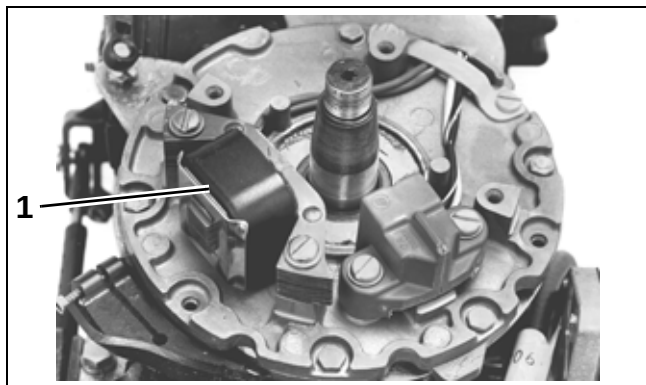


1. Charge coil

32329

Sensor Coil

The sensor coil contains many windings of wire wrapped around a metal lamination. Once the flywheel exceeds a minimum cranking RPM, the flywheel's magnetic lines of force cutting through the sensor coil windings produce approximately 3 V.

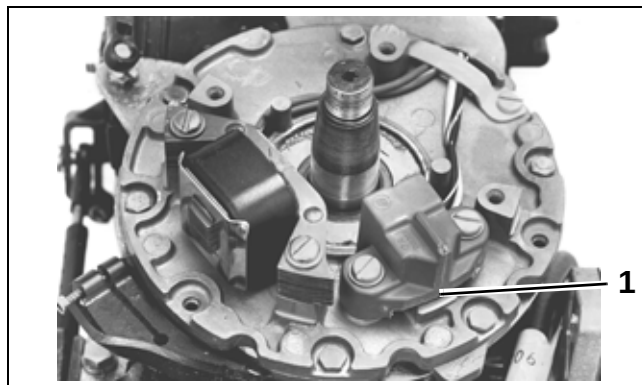


1. Sensor coil

32329

This voltage is supplied to the power pack to control small electronic switches (SCRs) which, in turn, direct power pack output to the correct ignition coil primary.

Power Pack

The power pack has several basic functions. It stores and distributes the voltage received from the charge coil. The power pack uses electronic switches, activated by sensor coil output, to select the correct ignition coil primary winding.

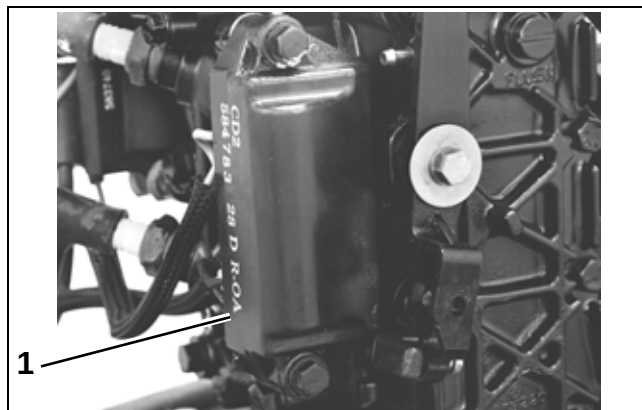


1. Power pack

32323

Stop Button

The stop button, and emergency stop switch are connected to the power pack through the engine wiring harness. When activated, these switches direct the power pack output to ground, stopping the ignition system.

The steering handle contains a combination stop switch/emergency stop device.

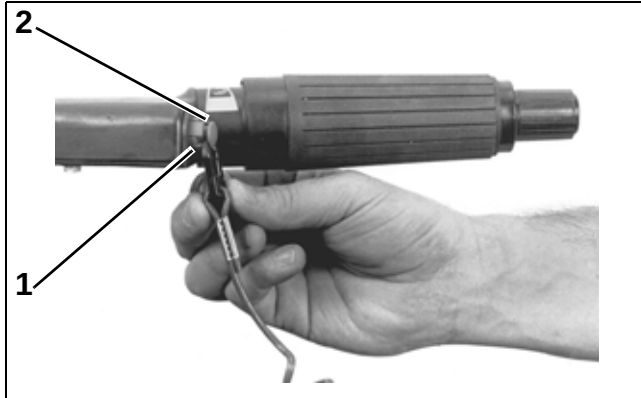

1. Stop button
2. Emergency stop switch

24331

When the clip and lanyard assembly is **removed**, the emergency stop device is in the STOP position.


When the clip and lanyard assembly is **installed**, the emergency stop device is in the RUN position.

To stop the engine when the clip and lanyard assembly is in place, press the stop button **inward** until the engine stops.

Key Switch

A combination key switch and emergency stop switch is connected to the power pack through the engine wiring harness (remote electric models).

When activated, this switch directs power pack output to ground, stopping the ignition system.

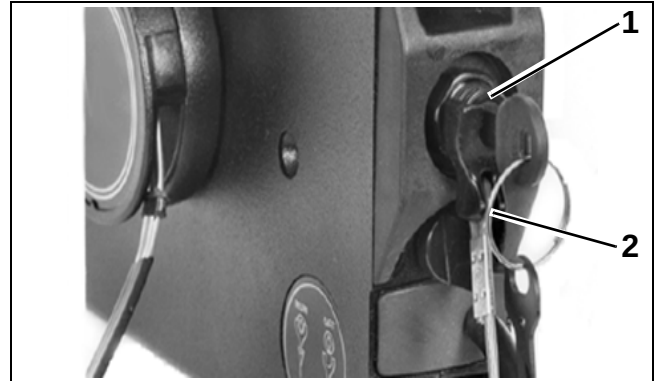


1. Key switch
2. Emergency stop switch clip

31545

IMPORTANT: This emergency stop switch clip turns the key from ON to OFF as it is removed. It does not electrically disarm the ignition system. The key switch, ignition system, and starting circuit are all fully functional after the emergency stop switch clip has been removed.

Ignition Coil

The ignition coil consists of two windings of wire wrapped around a compacted ferrite core. The coil has primary and secondary terminal connections and a ground plate.

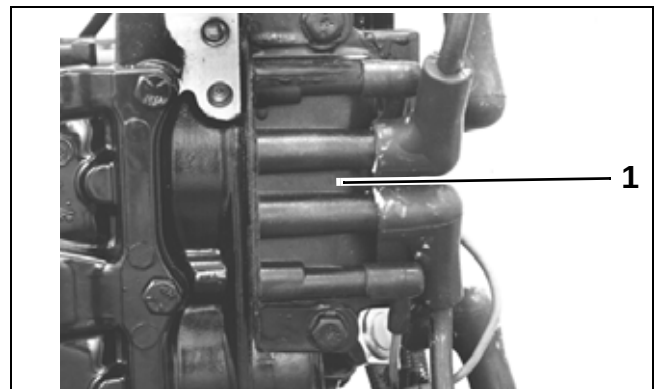

9.9/15 Model
1. Dual ignition coil

32322

Through mutual induction, the ignition coil transforms the ignition module output to as much as 40,000 V to fire the spark plugs. There is one ignition coil per cylinder.

TROUBLESHOOTING

Complete these tasks to obtain fast, accurate test results when troubleshooting the capacitor discharge ignition system.

- **Visual Inspection** – Check wiring for broken, pinched, or loose leads. Connectors must be securely fastened and free from moisture or water accumulation.
- **Test Equipment Condition** – Make sure testers are in working order. Many hours can be wasted by replacing working components needlessly.
- **Follow Procedure** – Troubleshooting can seem difficult if you vary your technique for each problem. Many times items in the system are overlooked because you "thought" you tested them. By following the same procedure each time you troubleshoot, all items in the ignition system will be tested.
- **Test the Complete System** – There may be occasions when more than one component is defective. If this condition is undetected, repeated ignition system failure may occur, or damage to replacement parts could result. Test everything.


Flywheel Indexing

This test is used to identify erratic ignition operation. Internal power pack problems could cause a pack to fire erratically or continuously. To troubleshoot this situation, determine if each cylinder is firing at the correct time and no more than once per revolution.

Disconnect the spark plug leads and remove both spark plugs.

Place the eraser end of a pencil in the number 1 spark plug hole. Slowly turn the flywheel by hand, clockwise, until the greatest length of the pencil is

outside the spark plug hole. This indicates the number 1 piston is near top dead center.

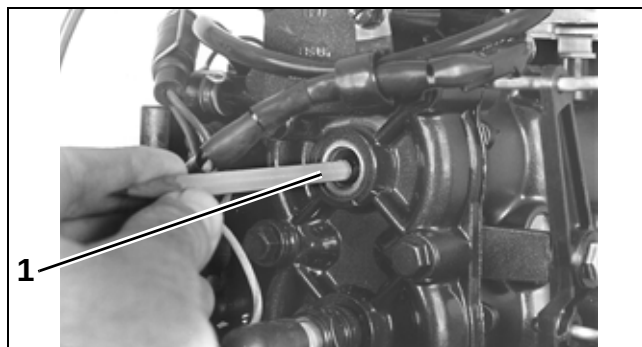

TYPICAL
1. Pencil

27360

Make a reference mark on the flywheel rim, directly across from the timing pointer or starter pivot screw. Label this mark number 1.



TYPICAL
1. Mark
2. Timing pointer

45102

Repeat procedure for number 2 cylinder. Label this mark number 2.

Install the spark plugs and spark plug leads. Start the engine in a test tank and run the engine at the RPM where the problem exists.

Carefully hook an induction timing light to each cylinder, alternately. The timing light should indicate that cylinder's number only, and the number should only appear near the timing pointer or starter pivot screw.

If another cylinder's number appears, or the correct number appears more than once per revolution, check ignition coil primary lead routing or replace power pack.

IGNITION SYSTEM TESTS



CAUTION



All cranking output tests must be performed with spark plugs installed and torqued in the cylinder head. If necessary to remove the spark plugs, be sure to keep the spark tester away from open spark plug holes.

The following series of steps will systematically isolate a problem area in the ignition system. To reduce troubleshooting time and to avoid incomplete results, perform these steps in the order written.

Total Ignition Output Test



CAUTION



To avoid possible shock hazard, do not handle ignition coils or spark tester during cranking tests.

Twist and remove the leads from both spark plugs.

Adjust the gap on the spark tester to 1/2 in. (12 mm). Connect tester leads to the spark plug leads. Secure tester clip to a clean engine ground.



COA4308

IMPORTANT: To prevent high voltage arc, route tester leads at least 2 in. (51 mm) from any metal surface.

If equipped, install the clip onto the emergency stop switch. Crank the engine. Spark should jump each tester gap alternately.

- If tester shows good output on both cylinders, go to **Power Pack Running Output** on p. 94.
- If tester shows good output on one cylinder, go to **Power Pack Cranking Output** on p. 94.
- If tester shows no output, go to **Stop Circuit Tests**.

IMPORTANT: It is possible for the ignition system to have a problem but still produce good output. If the engine pops or backfires during starting, the ignition may be out of time. Check the following:

- Coil primary wire routing
- Spark plug lead routing
- Flywheel condition and location
- Synchronization and linkage adjustments

Stop Circuit Tests



CAUTION




To avoid possible shock hazard, do not handle ignition coils or spark tester during cranking tests.

Elimination Test

Disconnect 5-pin *Amphenol* connector between ignition plate and power pack.

Insert jumper wires between the "A," "B," "C," and "D" terminals of the 5-pin connector.

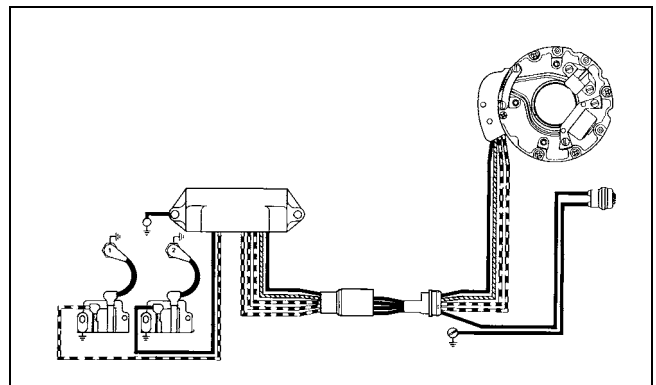

DR4185

IGNITION

IGNITION SYSTEM TESTS

Crank engine and observe results at spark tester.

- If there is no spark at one gap, go to **Power Pack Cranking Output** on p. 94.
- If there is no spark at both gaps, go to **Charge Coil Test** on p. 91.
- If the spark jumps alternately at each gap, the problem is in the stop circuit. Begin troubleshooting with **Ohmmeter Test** and follow all steps to locate the fault.

Ohmmeter Test


Step 1

IMPORTANT: All ohmmeter tests must be performed with the engine NOT running.

Install the clip and lanyard.

Calibrate an ohmmeter on appropriate scale. Connect meter leads between ignition plate end of connector, terminal "E," and a clean engine ground.

- The meter must show a high reading.

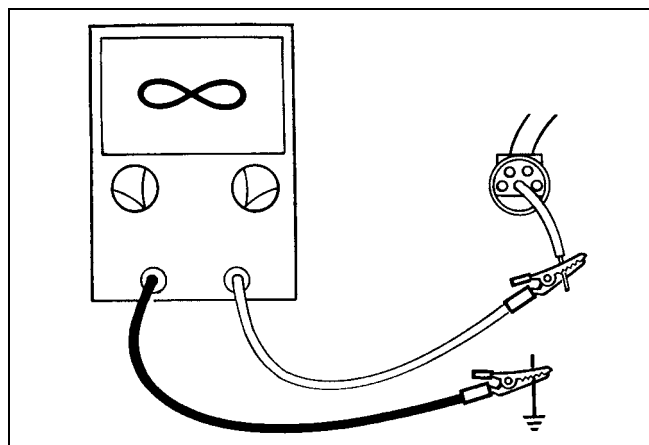

DR4186

Momentarily press inward on the stop button.

- The meter must show a low reading.

Remove the emergency stop switch clip and lanyard.

- The meter must show a low reading.
- If any of the test results are incorrect, replace the stop button assembly.

Complete all circuits disconnected during this test.

STEP 2

Install the emergency stop switch clip and lanyard.

Disconnect the 5-pin *Amphenol* connector between the power pack and ignition plate.

Calibrate ohmmeter on appropriate scale. Connect meter leads between ignition plate end of connector, terminal "E," and a clean engine ground.

- Key OFF, meter must show a low reading.
- Key ON, meter must show a high reading.

If key ON reading is low, disconnect harness black/yellow lead from key switch "M" terminal.

- If meter now shows a high reading, replace key switch.
- If meter shows a low reading, go to **STEP 3**.

STEP 3


Disconnect the key switch 6-pin connector

- If meter now shows a high reading, repair or replace key switch harness.
- If meter shows a low reading, go to **STEP 4**.

STEP 4

Disconnect the engine harness to instrument harness 6-pin connector that contains the black/yellow lead.

- If meter now shows a high reading, repair or replace instrument harness.
- If meter shows a low reading, repair or replace engine harness.
- If the engine fails to shut off, test for open black/yellow lead, black/white lead, damaged key switch, or damaged power pack.

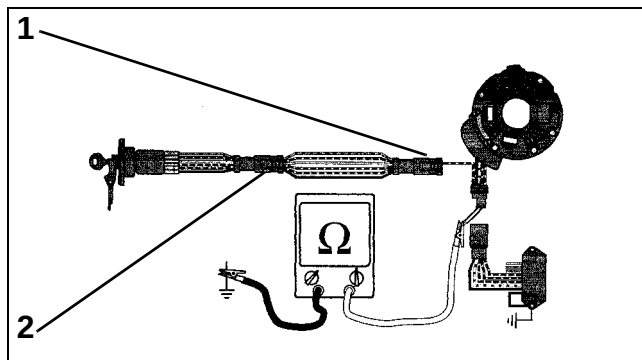

1. Key switch 6-pin connector
2. Instrument harness 6-pin connector

DR6224

Complete all circuits disconnected during this test.

Charge Coil Test

STEP 1


Disconnect 5-pin *Amphenol* connector between ignition plate and power pack.

Set peak-reading voltmeter to:

- **9.9/15** – "NEG" and "500."

Alternately, connect voltmeter between ignition plate connector terminals "A," "D," and a clean engine ground. Crank engine and observe meter at each connection.

- Any reading on either test indicates charge coil or leads are grounded.
- Locate and repair ground, or replace charge coil.
- If no reading is indicated go to **STEP 2**.

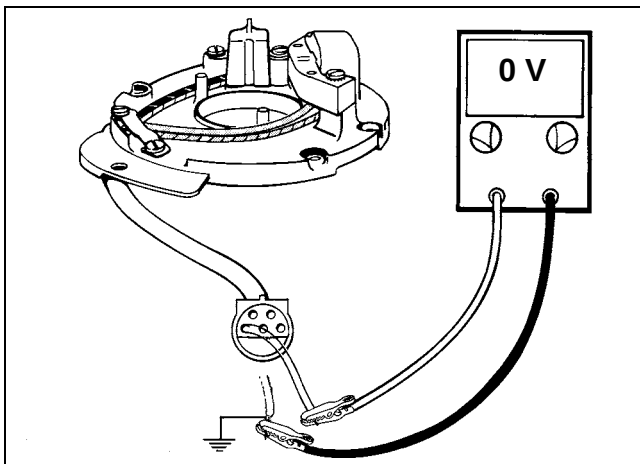


DR4619

STEP 2

Set peak-reading voltmeter to:

- **9.9/15** – "NEG" and "500."

Attach voltmeter black lead to ignition plate connector, terminal "A." Attach meter red lead to terminal "D."

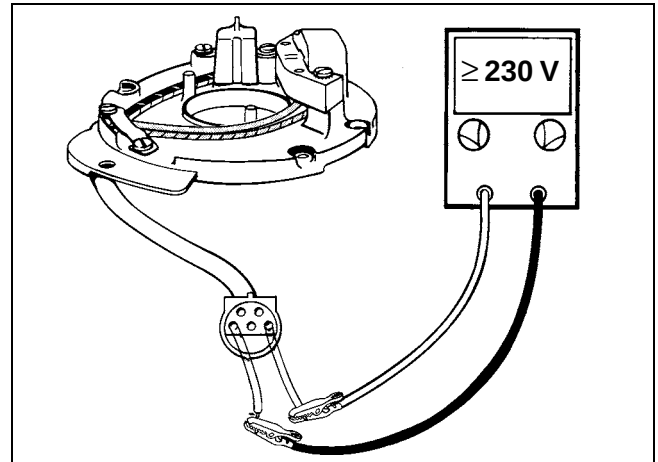

DR4620

Crank engine and observe meter.

- If meter shows 230 V or higher, go to **Sensor Coil Test** on p. 92.
- If meter shows less than 230 V, check condition of wiring and connectors.
- If wiring and connector condition is good, go to **STEP 3**.


IGNITION

IGNITION SYSTEM TESTS

STEP 3

IMPORTANT: All ohmmeter tests must be performed with the engine NOT running.

Insert jumper wires in ignition plate connector, terminals "A" and "D."

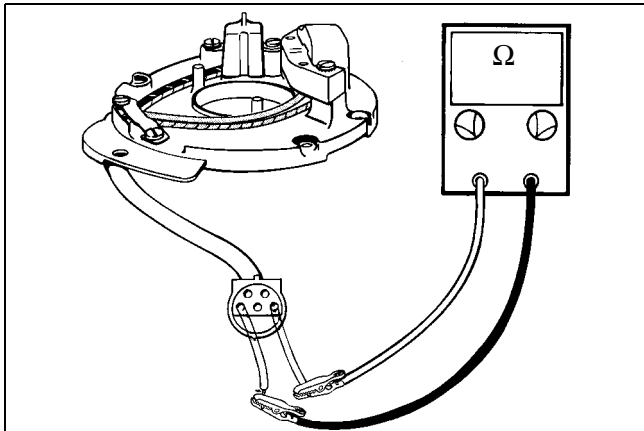


DR4620

Calibrate ohmmeter on appropriate scale. Connect between jumpers. Meter must show:

- **9.9/15 R** – 900 ± 100 ohms.
- **9.9/15 (accessory stator, electric)** – 760 ± 80 ohms.

To test for a grounded condition, connect ohmmeter, alternately, between each jumper and a clean engine ground.

- Any needle movement indicates charge coil or leads are grounded.
- Locate and repair ground, or replace charge coil.

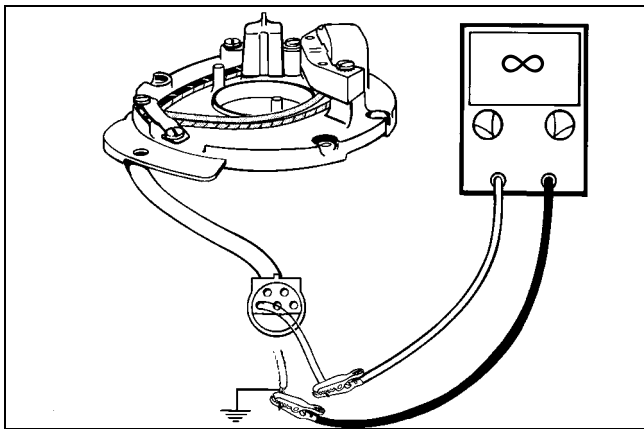

DR4619

Complete all circuits disconnected during this test.

Sensor Coil Test

STEP 1


Disconnect 5-pin *Amphenol* connector between ignition plate and power pack.

Set peak-reading voltmeter to:

- **9.9/15** – "NEG" and "50," or "SEN" and "50" on *Stevens* CD-77 meter.

Alternately, connect voltmeter between ignition plate connector terminals "B," "C," and a clean engine ground. Crank engine and observe meter at each connection.

- Any reading indicates sensor coil or leads are grounded.
- Locate and repair ground, or replace sensor coil.
- If no reading is indicated, go to **STEP 2**.

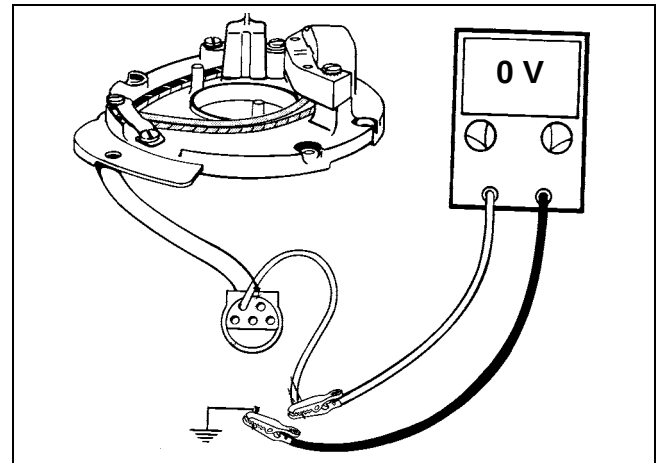


DR4621

STEP 2

Set peak-reading voltmeter to:

- **9.9/15** – "NEG" and "50," or "SEN" and "50" on *Stevens* CD-77 meter.

Attach voltmeter black lead to ignition plate connector, terminal "C." Attach meter red lead to terminal "B."

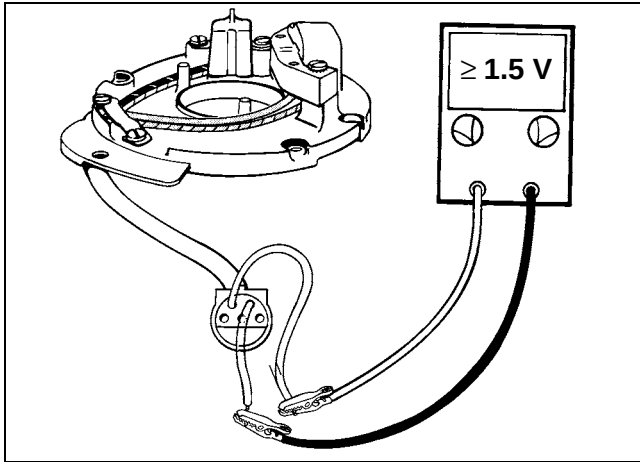

DR4622


Crank engine and observe meter.

- If meter shows 1.5 V or higher, go to **Power Pack Cranking Output** on p. 94.
- If meter shows less than 1.5 V, check condition of wiring and connectors.
- If wiring and connector condition is good, go to **STEP 3**.

STEP 3

IMPORTANT: All ohmmeter tests must be performed with the engine NOT running.

Insert jumper wires in ignition plate connector, terminals "B" and "C."

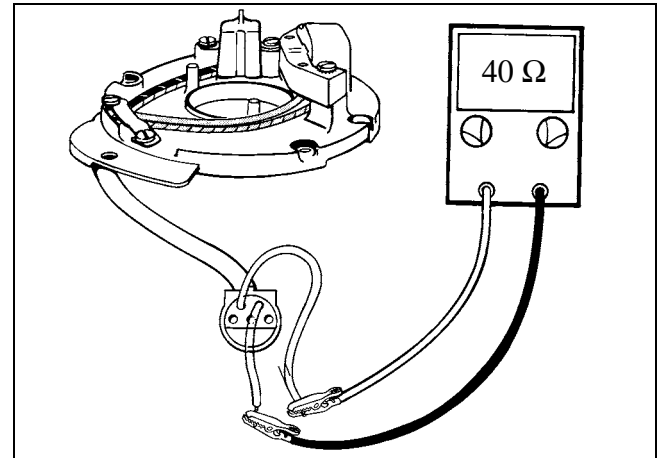


DR4622

Calibrate ohmmeter on appropriate scale. Connect between jumpers.

- Meter must show 40 ± 10 ohms.

To test for a grounded condition, connect ohmmeter, alternately, between each jumper and a clean engine ground.

- Any needle movement indicates sensor coil or leads are grounded.
- Locate and repair ground, or replace sensor coil.

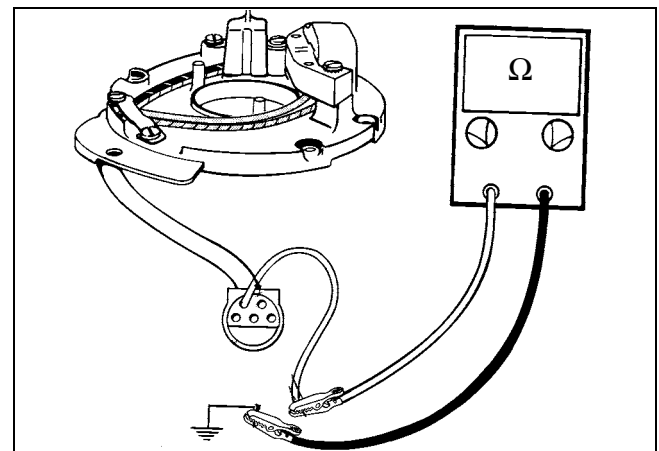

DR4621

Complete all circuits disconnected during this test.

IGNITION

IGNITION SYSTEM TESTS


Power Pack Cranking Output

Twist and remove primary leads from ignition coils.

Connect number 1 ignition coil primary lead to *Stevens* Number PL-88 Pack Load Adapter, P/N 507983, red lead. Connect adapter black lead to a clean engine ground.

If *Stevens* Number PL-88 is not available, make an adapter using a 10-ohm, 10-watt resistor, *Radio Shack* Number 271-132, or equivalent.

Connect peak-reading voltmeter red lead to adapter red lead and meter black lead to a clean engine ground.

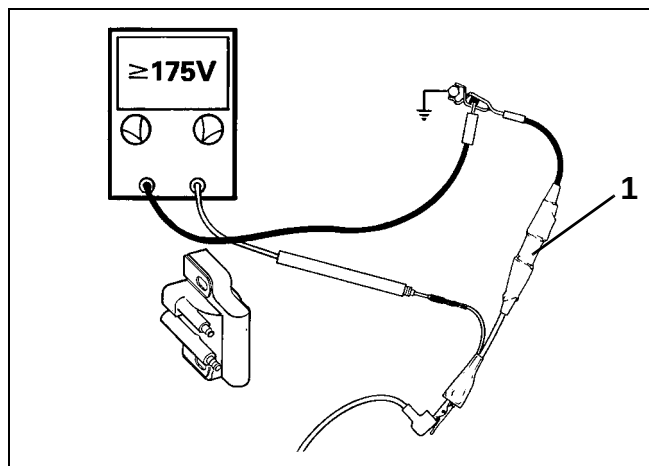

1. Load adapter

DR4052

Adjust voltmeter to settings listed in following chart. Crank engine and observe meter. Meter must show at least:

Model	Voltmeter	Output
9.9/15	NEG/500	175 V

After testing number 1 ignition coil primary lead, test the number 2 ignition coil primary lead.

- If both primary leads have good output, test ignition coils. Refer to **Ignition Coil Tests** on p. 95.
- If one primary lead has no output, replace power pack.
- If both primary leads have no output, go to **Charge Coil Test** on p. 91. If charge coil tests good, replace the power pack.

Power Pack Running Output


Twist and remove primary leads from ignition coils.

Use a clockwise twist to install *Stevens* Number TS-77 terminal extenders, or equivalent, to ignition coil primary posts.

Install primary leads on terminal extenders. Observe proper wire routing. Orange/blue primary lead must be connected to number 1 ignition coil.

IMPORTANT: Route all tester leads so they do not interfere with moving engine parts.

Connect peak-reading voltmeter red lead to number 1 terminal extender. Connect meter black lead to a clean engine ground.

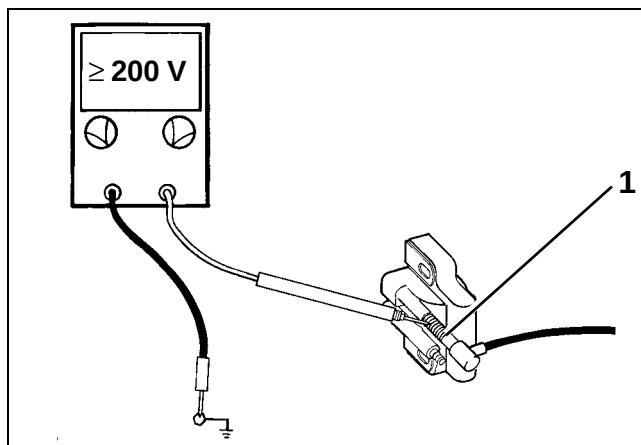

1. Terminal extender

DR4053

Adjust voltmeter to setting listed in following chart. Start engine and run it under load at RPM where ignition problem exists. Meter must show at least:

Model	Voltmeter	Output
9.9/ 15	NEG/500	200 V

After testing number 1 ignition coil, test the number 2 ignition coil.

- If either cylinder shows less than specified output, test charge coil. Refer to **Charge Coil Test** on p. 91.
- If charge coil tests good, replace the power pack.

Ignition Coil Tests



DANGER



To avoid personal injury from electrical shock, perform all coil tests on a wooden (or insulated) bench top.

Ignition Coil Specifications

Magneto C.D. Coil Specifications	
Primary Resistance	$0.1 \pm 0.05 \Omega$
Secondary Resistance	$275 \pm 50 \Omega$

Resistance Test


Resistance tests may be performed while the ignition coil is still mounted on the powerhead.

STEP 1

Twist and remove the spark plug leads and primary coil leads from the ignition coil.

Calibrate ohmmeter on appropriate scale. Connect meter black lead to a clean engine ground. If the coil is not mounted on the engine, connect meter black lead to ground tab on the coil. Connect meter red lead to coil primary terminal.

- Meter must show $0.1 \pm 0.05 \text{ ohm}$

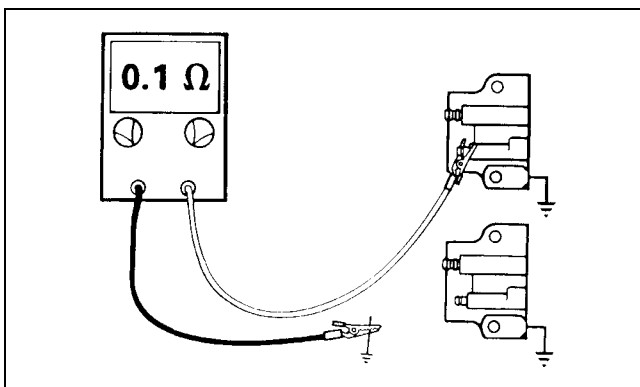


DR4093

STEP 2

Calibrate ohmmeter on appropriate scale. Connect meter red lead to coil primary terminal. Connect meter black lead to coil spark plug terminal.


- Meter must show $275 \pm 50 \text{ ohms}$

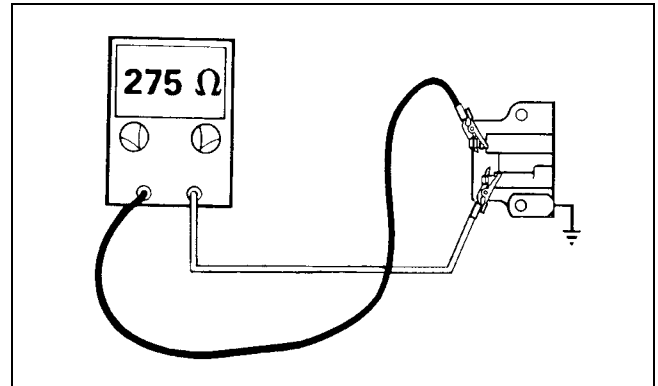

DR4094

STEP 3

Test spark plug leads for continuity. Calibrate ohmmeter on low ohms scale. Attach one ohmmeter lead to each spring terminal. While wiggling both spark plug covers and entire length of the spark plug lead, the resistance should remain near zero. Replace spark plug lead if your test results vary.

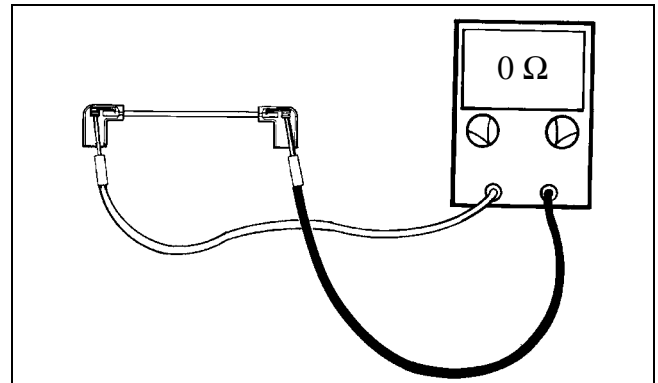

DR4081

IGNITION

IGNITION SYSTEM TESTS

Ignition Coil Analyzer Tests


IMPORTANT: When conducting these tests to the coil, do not exceed its maximum specified amperage.

Magnetos C.D. Coil Specifications		
Operating Amps (Max)	<i>Merc-O-Tronic</i> 1.5 amps	<i>Stevens</i> 1.1 amps
Analyzer Polarity	Normal	

Power Test

The ignition coil is tested with normal polarity connections.

Connect tester red lead to the primary terminal of the coil and the tester black lead to the ground tab. Connect the high tension lead of the tester to the coil spark plug lead.

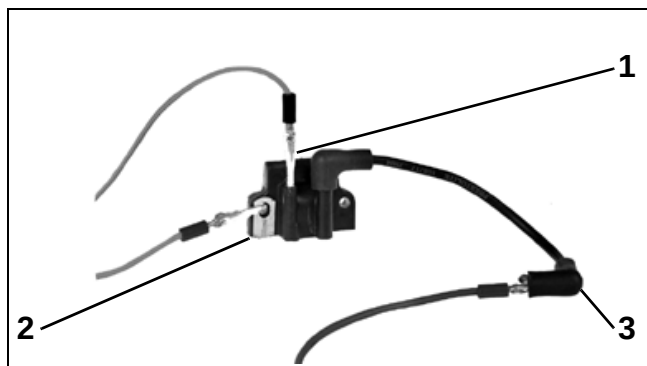

1. Primary terminal
2. Ground tab
3. Coil spark plug lead


COA4328

A steady spark, in the tester at or before maximum specified amperage, indicates a good coil. Refer to **Ignition Coil Specifications** on p. 95.

Surface Leakage Test

The ignition coil and spark plug lead should be tested for leakage or insulation failures using the ignition analyzer. Leakage is caused by moisture, cracks, or holes in the coil housing or spark plug leads.

With the analyzer's black and red leads still connected from the Power Test, remove the analyzer's high tension lead from the coil. Turn on the analyzer and probe the entire surfaces of the coil, spark plug lead, and spark plug cover.

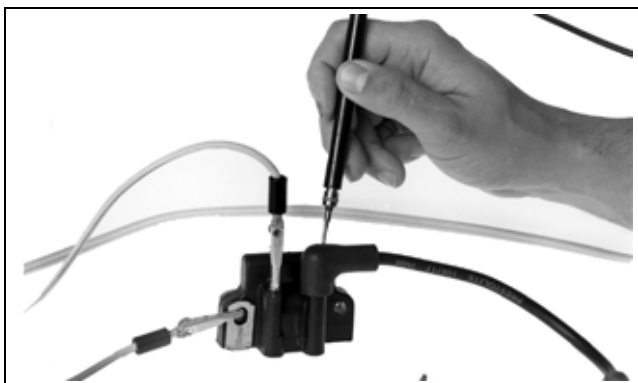

COA4327

Flashover will be apparent wherever insulation has broken down. Replace any coil or spark plug lead which shows leakage.

SPARK PLUGS

Remove and inspect the spark plugs for the following conditions:

- Worn electrodes
- Cracked insulator
- Dirty spark plugs

Replace all defective spark plugs.

Before installing the spark plug lead cover on the spark plug, apply a light coating of *Electrical Grease* to the ribbed portion of the spark plug ceramic and to the opening of the spark plug cover. See table below for recommended spark plug data and gap setting.

Models	Recommended
9.9/15	QL82C @ 0.030 in. (0.8 mm)

IMPORTANT: Use of non-suppression spark plugs will cause ignition problems.

FLYWHEEL SERVICING

IMPORTANT: In order to produce the voltage necessary to run an ignition system, the flywheel magnets must be of a particular strength. Weak flywheel magnets can cause low ignition voltage which would affect engine performance. Weak flywheel magnets can also cause low readings on ignition test equipment such as the peak-reading voltmeter, which might cause unnecessary replacement of ignition components.


An accurate test of alternator output can help determine flywheel condition. Refer to **Running Alternator Output Test** on p. 69.

Removal

⚠
WARNING
⚠

To prevent accidental starting while servicing, twist and remove all spark plug leads.

Remove the flywheel nut. Use a Flywheel Holding Tool and three screws, P/N 307641, from Universal Puller Set, P/N 378103, or Flywheel Holder, P/N 771311.

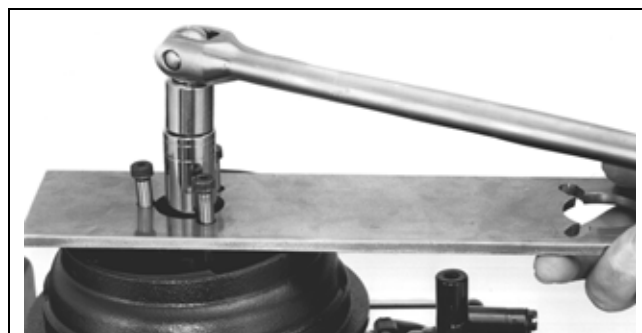

Flywheel Holding Tool

32927

IGNITION

FLYWHEEL SERVICING


Apply *Moly Lube* to threads of pressing screw and center hole of crankshaft.



32845

Assemble the following components from Universal Puller Set, P/N 378103:

- Body, P/N 307636
- Pressing Screw, P/N 307637
- Handle, P/N 307638
- Three screws, P/N 307641
- Three washers, P/N 307639

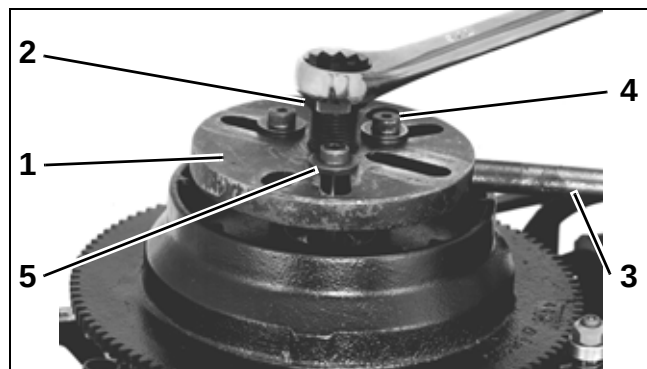

TYPICAL


1. Body
2. Pressing screw
3. Handle
4. Screws (3)
5. Washers (3)

32846

Install the puller on flywheel with body flat side up. Seat the shoulder screws completely. Hold puller by its handle, and tighten pressing screw until flywheel releases.

Installation

Install the flywheel key with its outer edge parallel to taper of crankshaft.

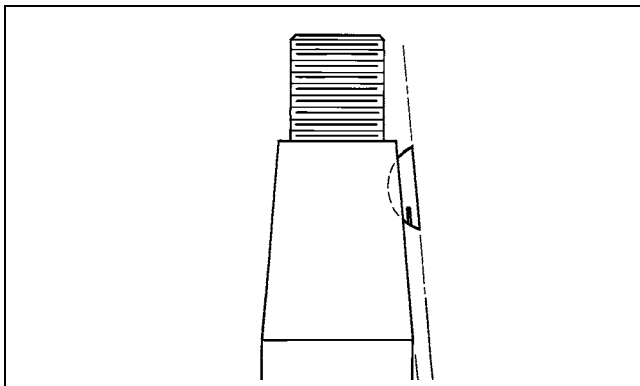


DR2115

Clean the crankshaft and flywheel tapers with *Cleaning Solvent* and let dry. These surfaces must be clean and dry to allow proper locking of the tapers.

Align the flywheel keyway and install flywheel. Coat the threads of the flywheel nut with *Gasket Sealing Compound*. Install the nut and torque to the correct value. See chart below.

Model	Ft. lb.	N·m
9.9/15	45 to 50	60 to 70

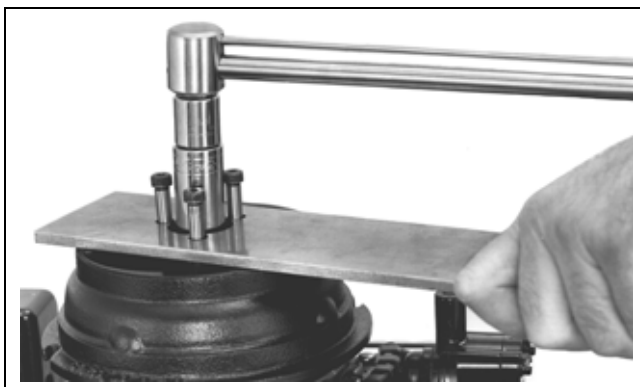

32911

IGNITION PLATE SERVICING

Removal



WARNING




To prevent accidental starting while servicing, twist and remove all spark plug leads.

If equipped, remove the manual starter. Refer to Manual Starter **REMOVAL** on p. 184 section.


Remove the flywheel. Refer to **FLYWHEEL SERVICING** on p. 97.

Loosen the six screws attaching the ignition plate to the retainer plate. Lift the ignition plate from the powerhead.

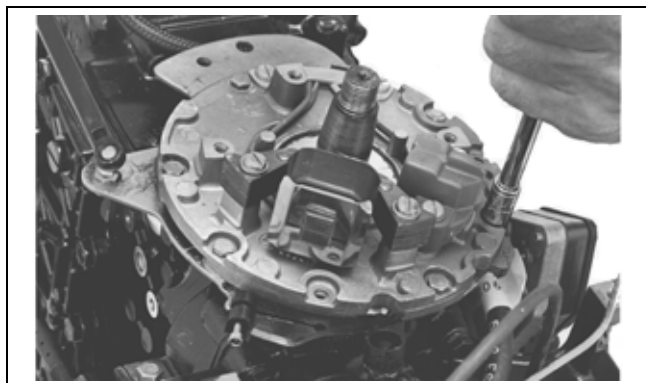

32324

Remove the four support plate screws. Lift the retainer and support plate from the powerhead.

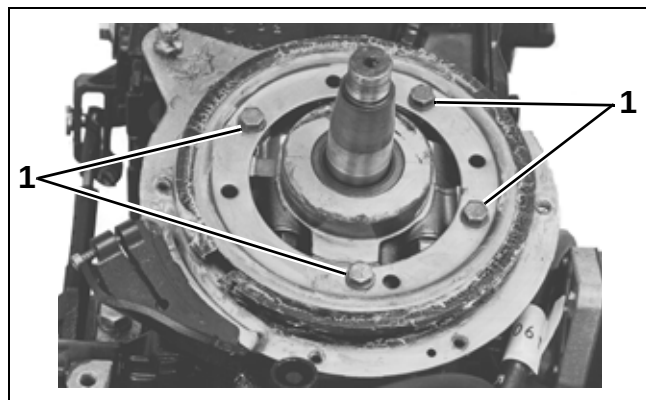


1. Screws

32327

Installation


Place the retainer plate, then the support plate on the powerhead. Align support plate with four screw holes in powerhead. Apply *Nut Lock* to threads of the four support plate screws. Install the screws and torque to 48 to 60 in. lbs. (5 to 7 N·m).

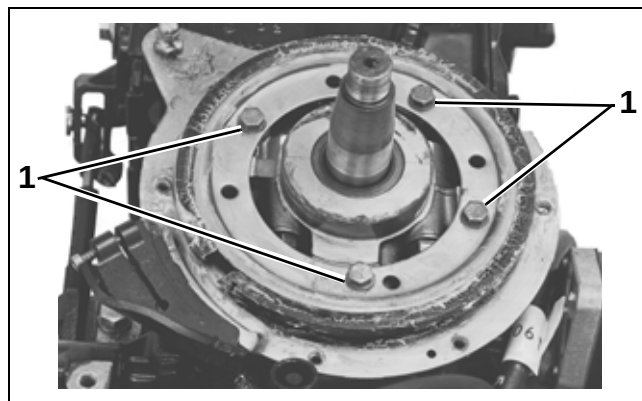

1. Screws

32327

Apply *Moly Lube* to the crankcase boss.

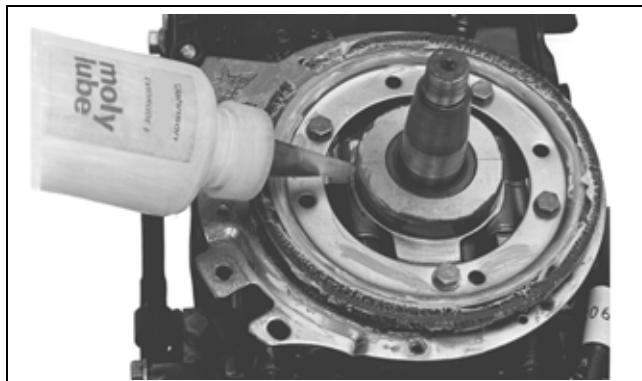


32326

IGNITION

CHARGE COIL AND SENSOR COIL


Lubricate the ignition plate bearing groove with *Moly Lube*.

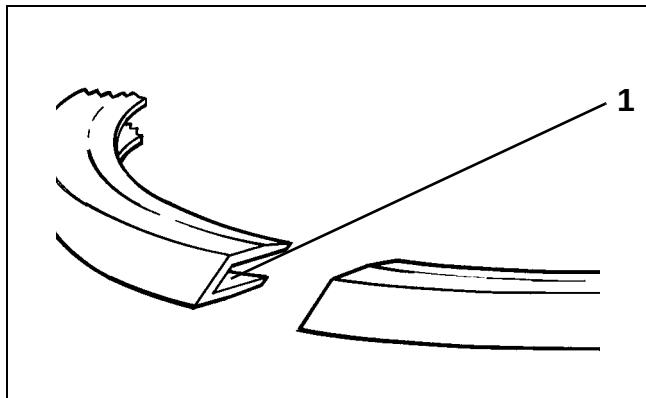

1. Groove

DR2618

Apply *Nut Lock* to the threads of the ignition plate screws. Insert needle-nose pliers into slots in the ignition plate bearing and compress bearing while guiding the ignition plate into position.

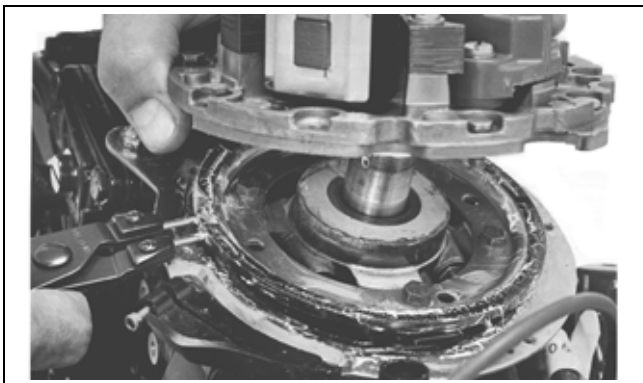

32380

Align the ignition plate with the retainer plate. Torque the screws to 25 to 35 in. lbs. (2.8 to 4.0 N·m).

Connect and adjust spark advance link. Refer to **SYNCHRONIZATION AND LINKAGE ADJUSTMENTS** on p. 59.

Check for sufficient slack on ignition component leads during full advance movement of the ignition plate.

CHARGE COIL AND SENSOR COIL

Removal




WARNING



To prevent accidental starting while servicing, twist and remove all spark plug leads.


Remove the screws retaining the ignition component that is being replaced.

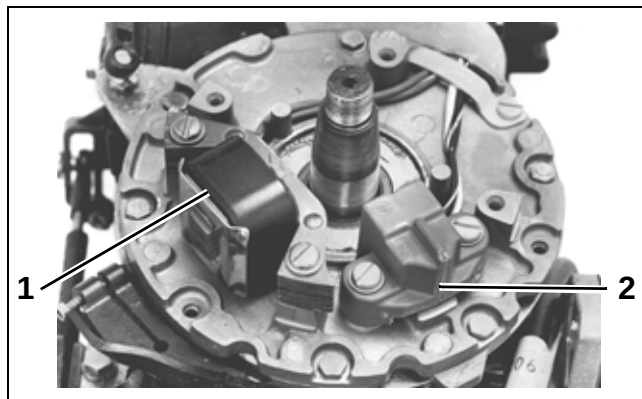

1. Charge coil
2. Sensor coil

32329


Remove the wire clamp from the ignition plate.

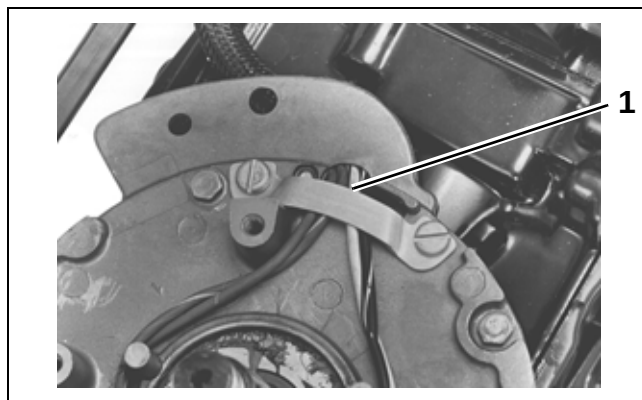

1. Wire clamp


32302

Loosen the ignition plate screws. Lift the ignition plate from the powerhead.

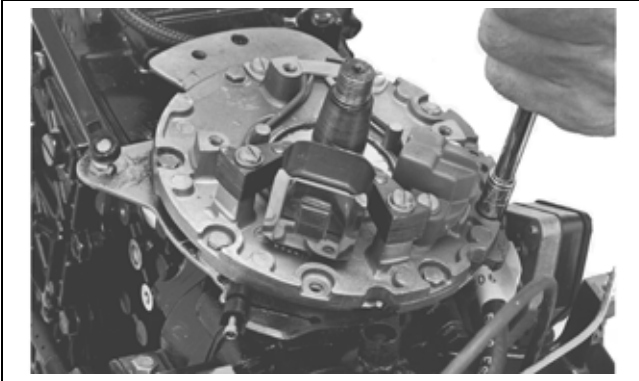

32324


Install plate on bottom of the ignition plate.

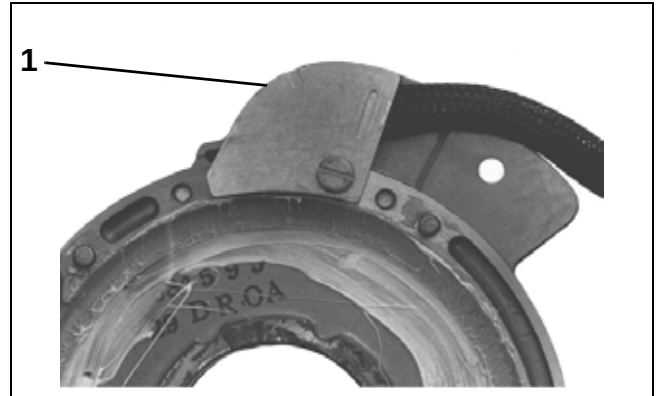

1. Plate

32288

Remove the plate from the bottom of the ignition plate.

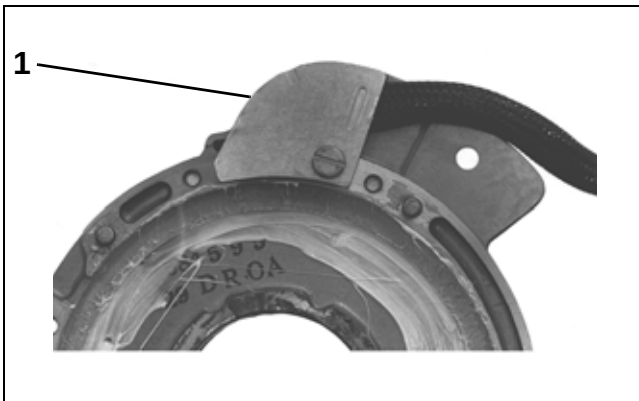

1. Plate

32288

Remove the leads from the spiral wrap and from the ignition component.


Installation

Apply *Ultra Lock* to the threads of the component retaining screws. Loosely install the new ignition component on the ignition plate.

Connect and route the leads from the spiral wrap and from the ignition component.

IMPORTANT: All component leads must be routed through the clamp and plate in a single layer, not twisted or crossed over another lead.


Install the wire clamp on ignition plate.

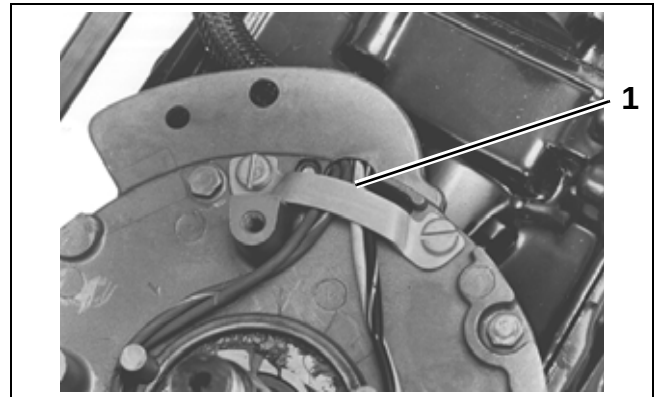

1. Wire clamp

32302

Apply *Nut Lock* to the threads of the ignition plate screws. Install the ignition plate on the retainer plate. Torque screws to 25 to 35 in. lbs. (2.8 to 4.0 N·m).

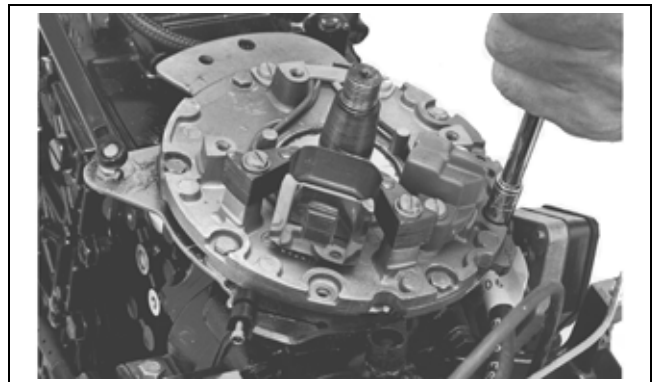


32324

IGNITION

IGNITION COIL

Check for sufficient slack on ignition component leads. Route component leads through wire clamps.

Position Coil Locating Ring, P/N 334994, over machined bosses on the ignition plate. Push the locating ring in toward the component to be installed. Hold the ring in place and pull the component out toward the ring. Tighten screws to 15 to 22 in. lbs. (1.6 to 2.4 N·m). Do this step for each component installed.

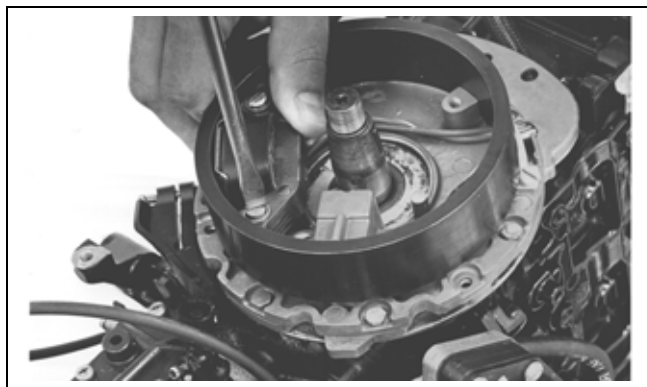


32287

IGNITION COIL

Removal

Twist and remove cover. Remove the spark plug and primary leads from the ignition coils.

IMPORTANT: Make a note of the fastener and washer locations before removing any screws.

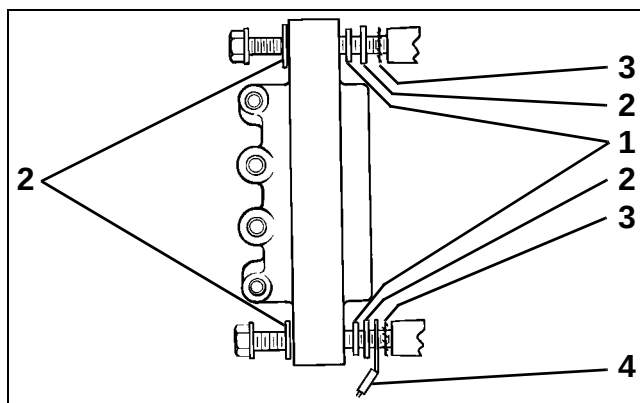

9.9/15 Model

DR5055

1. Fiber washer
2. Ignition coil ground strap
3. Starwasher
4. Stop switch ground lead

Remove the screws, coil, and washers.

Installation

Assemble the correct sequence of washers and locate the ignition coil on the powerhead. Install screws and torque to 48 to 96 in. lbs. (5.4 to 10.8 N·m).

Apply a light coating of *Electrical Grease* to the ribbed portion of the spark plug ceramics and to the openings of each of the spark plug lead covers. Install the spark plug leads.

Apply a light coating of *Electrical Grease* to the opening of each primary lead cover and install the covers. Observe proper wire routing and ignition timing. Orange/blue primary lead must be connected to the number 1 ignition coil.

FUEL SYSTEM

TABLE OF CONTENTS

FUEL SYSTEM TROUBLE CHECK CHART	104
COMPONENTS	105
FUEL PUMP	105
CARBURETOR	105
INTAKE MANIFOLD	105
FUEL PUMP PRESSURE TEST	106
FUEL PUMP SERVICE	106
DISASSEMBLY	106
CLEANING	106
ASSEMBLY	107
CARBURETOR SERVICE	107
EMISSIONS COMPLIANCE	107
REMOVAL	107
DISASSEMBLY	108
CLEANING AND INSPECTION	109
ASSEMBLY	111
INSTALLATION	113
CARBURETOR MIXTURE ADJUSTMENT	114
INTAKE MANIFOLD	115
REMOVAL	115
INSPECTION	115
DISASSEMBLY	116
ASSEMBLY	116
INSTALLATION	117
NOTES	118

FUEL SYSTEM TROUBLE CHECK CHART

	USER										FUEL TANK AND FILTER				LINKAGE ADJUSTMENT				CARBURETOR						INTAKE MANIFOLD & LEAF PLATE ASSEMBLY	
	IMPROPER STARTING PROCEDURES	CLOGGED FUEL FILTER	POOR QUALITY OR OLD FUEL	FUEL TANK VENT OR HOSE RESTRICTED	RESTRICTED FUEL PICK-UP	FAULTY ANTI-SIPHON VALVE	FUEL SYSTEM AIR LEAK	THROTTLE LINKAGE MISADJUSTED	THROTTLE CAM PICK-UP POINT MISADJUSTED	W.O.T. STOP SCREW MISADJUSTED	THROTTLE CABLE MISADJUSTED	FLOAT VALVE MISADJUSTED	FLOAT VALVE STUCK CLOSED	FLOAT SETTING INCORRECT	CARBURETOR BASE GASKET LEAKING	PLUGGED IDLE FUEL PASSAGE	PLUGGED HIGH SPEED ORIFICE	BENT THROTTLE NOZZLE VENT	RESTRICTED FLOAT CHAMBER VENT	WARPED INTAKE SHAFT OR VALVE	MANIFOLD MISROUTED FUEL SUPPLY LINES	LEAF PLATE GASKET LEAKING	LEAF PLATES BENT, CHIPPED, OR BROKEN			
ENGINE WILL NOT START	●	●	●	●	●	●												●								
STARTS, WILL NOT IDLE		●	●			●		●	●	●	●	●	●	●	●	●		●	●	●	●	●				
WILL NOT IDLE SLOWLY		●				●	●	●	●	●			●				●	●	●	●						
SPITS AT IDLE, LEAN		●				●	●	●			●		●	●	●	●	●	●	●	●	●	●				
ENGINE RICH AT IDLE												●	●	●		●										
EXCESSIVE OIL USE		●		●	●	●	●																			
STALLS ON ACCELERATION		●		●	●	●	●	●	●				●		●	●	●	●	●	●	●	●				
SURGES AT HIGH SPEED		●	●	●	●	●	●				●		●	●	●	●	●	●								
RUNS RICH AT HIGH SPEED												●	●	●		●	●									
LOSS OF W.O.T. RPM		●	●	●	●	●	●			●	●	●	●	●	●	●	●	●			●					
CARBURETOR FUEL SPITBACK																			●	●	●					

32CFTCENR


COMPONENTS

The carbureted fuel system consists of the following components:

- Fuel pump
- Carburetor
- Intake manifold assembly

Fuel Pump

The fuel pump is a diaphragm-displacement type and is operated by changes in crankcase pressure. A pulse hose connects the pump to the cylinder/crankcase. Alternately, vacuum and pressure in the crankcase are transmitted to the pump diaphragm.

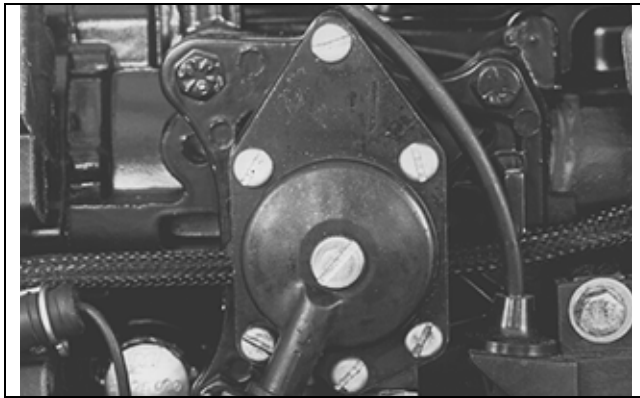


26417

Carburetor

The carburetor meters and distributes the fuel to the engine. It controls engine speed and power output by varying the intake charge density. To react correctly to a wide range of operating conditions, the carburetor has multiple fuel mixing circuits.

Fuel mixture enrichment for cold starting is controlled by a choke.

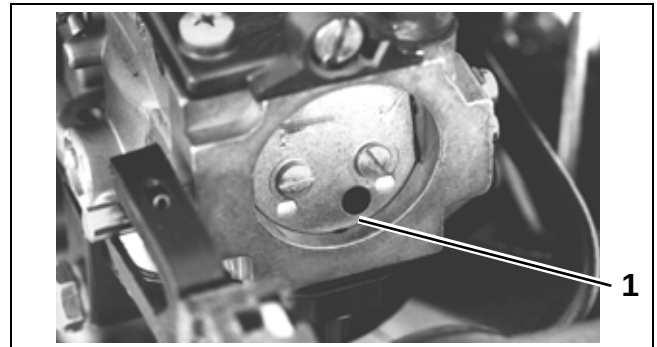


9.9/15 Model
1. Choke

32958

IMPORTANT: The 9.9/15 models use a tamper resistant carburetor. Changing original factory fuel mixture calibrations beyond the limits allowed by the tamper resistant device is a violation of federal law. Any carburetor adjustments beyond preset limits become the responsibility of the servicing technician and/or the owner. Refer to **Emissions Compliance** on p. 107.

Intake Manifold

The intake manifold provides the mounting surfaces to adapt the carburetor to the cylinder/crankcase assembly. It contains the leaf valves which control the intake charge to each cylinder.

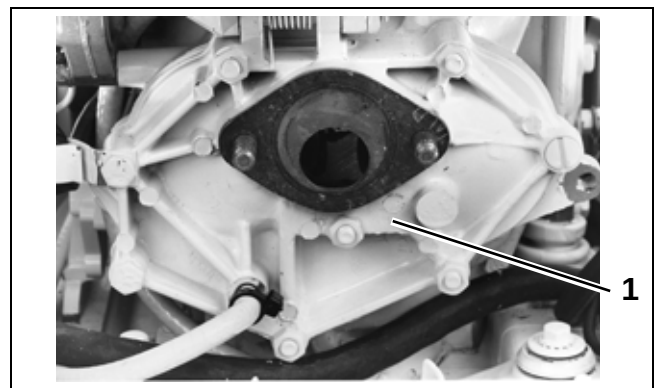

TYPICAL
1. Intake manifold

COA1524

FUEL SYSTEM


FUEL PUMP PRESSURE TEST

FUEL PUMP PRESSURE TEST

Perform this test with the outboard in a test tank or on the boat.

Before testing, loosen fuel tank gas cap momentarily to release any pressure that may have built up. Fuel tank must not be more than 30 in. (76 cm) below fuel pump.

Remove carburetor to fuel pump hose. Connect a fuel pressure gauge between the carburetor and fuel pump.

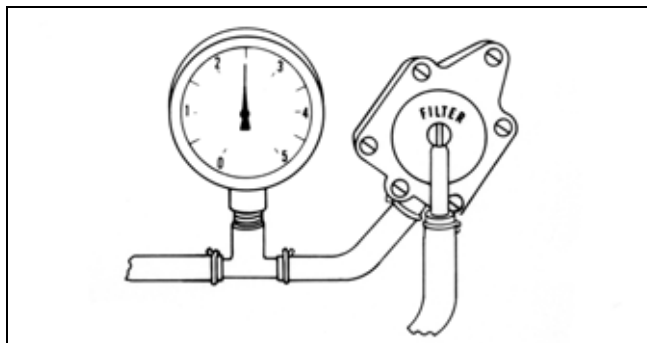

63328

Start outboard and monitor gauge. Pump pressure must be as specified below:

RPM	Pressure	
600	1 psi	7 kPa
2500-3000	1.5 psi	10 kPa
4500	2.5 psi	17 kPa

Results:

If pump does not develop minimum pressure, replace the pump.


FUEL PUMP SERVICE

Before replacing a suspect fuel pump, remove and clean the fuel filter and install a new filter element. Also, remove the fuel hose from the fuel tank and blow through all passages and hoses with low-pressure compressed air to be sure they are open. This might be the cause of inadequate fuel delivery. If this procedure does not correct the trouble, perform **FUEL PUMP PRESSURE TEST** on p. 106.

IMPORTANT: To prevent excessive fuel spillage, disconnect hose connector at outboard before disassembly.

Disassembly

Loosen cover screw and remove cover. Do not lose small O-ring from around center post or large O-ring from outer edge of cover.

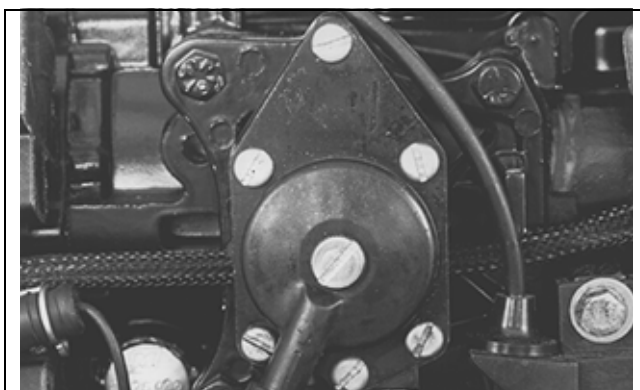

26417


Cleaning

Wash filter element with clean solvent and a brush. Do not dry parts with a cloth as lint might stick to the parts and clog the passages. Dissolve any gummy deposits with *Cleaning Solvent*.

Assembly

Install filter with lip facing fuel pump body.

- Confirm the large O-ring is seated in its groove in the cover and the small O-ring is in place around center post.
- Install cover. Position inlet nipple between screw heads.
- Tighten the cover screw.

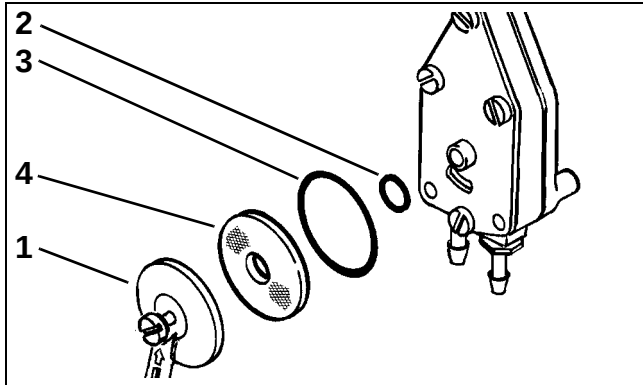

1. Cover
2. Small O-ring
3. Large O-ring
4. Filter element

DR3000

When installing fuel pump, apply *Nut Lock* to threads of screws. Install screws and torque 24 to 36 in. lbs. (2.8 to 4.0 N·m).



WARNING



After servicing the fuel system, check for leaks. Failure to check for fuel leakage could allow a leak to go undetected, resulting in fire or explosion.

IMPORTANT: Check for leaks after assembling pump. Connect the fuel hose to outboard and squeeze the primer bulb until definite resistance is felt.

CARBURETOR SERVICE

Emissions Compliance

Johnson 9.9/15 models are manufactured in accordance with United States of America Environmental Protection Agency (EPA) standards for emissions.

These models are equipped with tamper resistant carburetors. When servicing, DO NOT substitute any part of the carburetor with non-tamper resistant parts.

In addition, carburetor fuel mixture adjustments MUST NOT be altered from original factory calibrations beyond the limits allowed by the tamper resistant device.

Changes to the original design or adjustment limits of the outboard that effect emissions are a violation of federal law, and become the responsibility of the servicing technician and/or the owner.

When servicing the carburetors, it is very important that the procedures in this section are followed EXACTLY to ensure compliance with emissions standards.

Removal



WARNING




Do not attempt to run engine with any fuel system component disconnected or removed. Fuel leakage could contribute to a fire or explosion.

Remove the manual starter. Refer to Manual Starter **REMOVAL** on p. 184.

FUEL SYSTEM

CARBURETOR SERVICE


Loosen two retaining screws and remove air silencer.

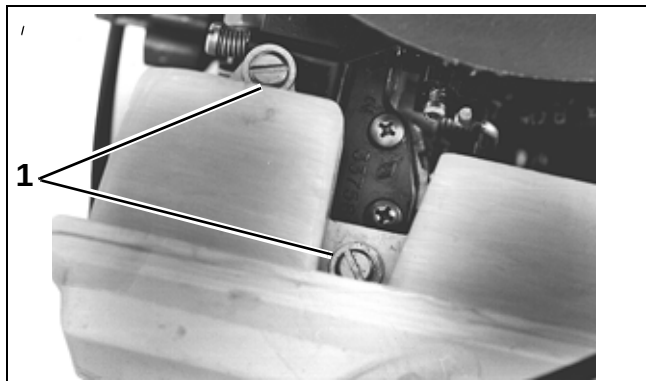

1. Screws


32957

Remove the choke lever.

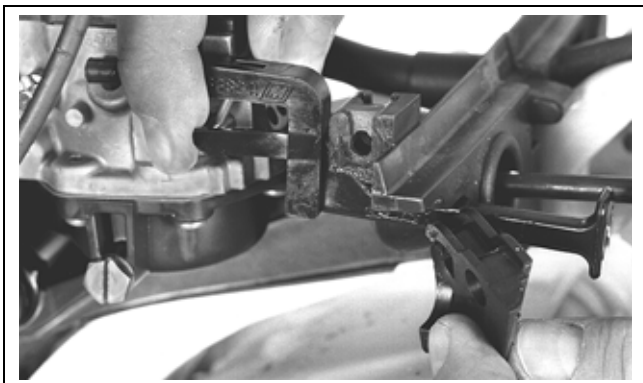

35005


Remove the cam follower O-ring.

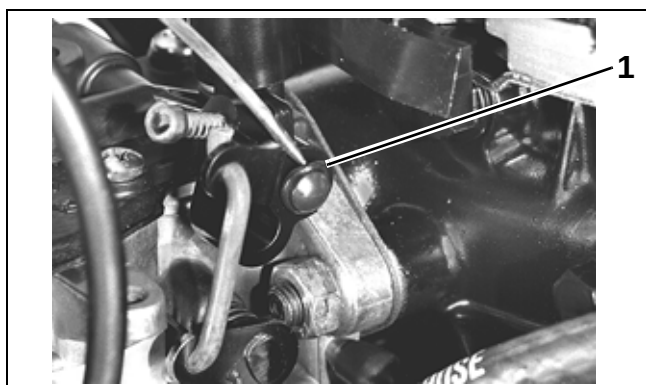

1. O-ring

35010

Loosen two mounting nuts and remove carburetor.

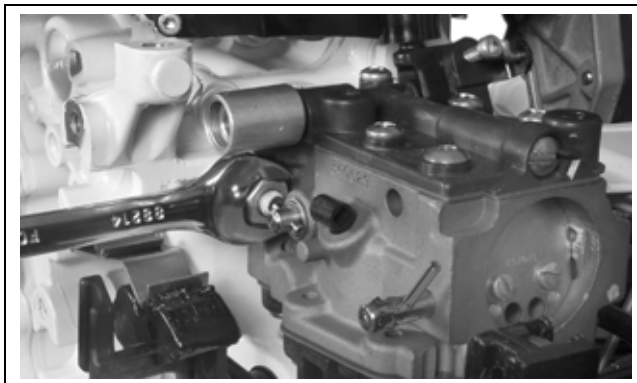

002558

Cut tie strap securing fuel hose to carburetor.



35009

Disassembly

IMPORTANT: Changing original factory fuel mixture calibrations beyond the limits allowed by the tamper resistant device is a violation of federal law. Changes to the original design or adjustment limits become the responsibility of the servicing technician and/or the owner. The following procedures must be followed EXACTLY to ensure compliance with emissions standards.

IMPORTANT: This carburetor uses a tamper resistant low speed needle and body cover assembly (except 10HR models). The needle valve is NOT removable from the cover and is adjustable within a limited range. If the needle is turned for any reason, it should be returned to its original location.

HR Models Only

Remove the low-speed needle and spring from the carburetor body cover.


All Models

Remove the six cover screws. Lift the cover and gasket off the carburetor body.

Remove the seven float chamber screws and the float chamber and gasket.

Remove the hinge pin, float, and inlet valve assembly.

Remove the high-speed orifice. If necessary, remove the air vent.

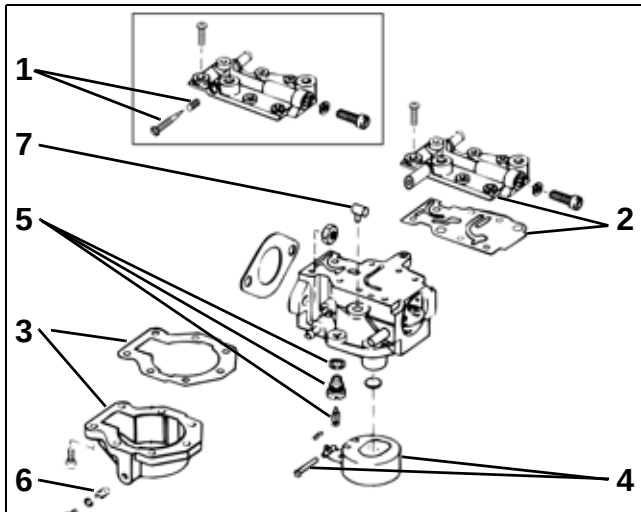

1. Low speed needle and spring (10RH models only) 002535
2. Carburetor body cover and gasket
3. Float chamber and gasket
4. Hinge pin and float
5. Inlet valve assembly
6. High-speed orifice
7. Air vent

Refer to **Cleaning and Inspection** on p. 109.

Cleaning and Inspection

IMPORTANT: Do not clean carburetor or its components by submerging in strong carburetor cleaner or hot soaking tank. Strong cleaners might damage components or remove sealing compounds.

Before inspection, all carburetor components must be thoroughly clean.

- Carburetor must be completely disassembled.
- Clean parts with *Carburetor and Choke Cleaner*.
- Use a clean bristle brush to remove gum or varnish deposits.
- Blow dry with shop air of not more than 25 psi (172 kPa). When drying passages, direct the flow of shop air opposite to the direction of fuel flow.



33953


Float Valve Assembly

Inspect the inlet needle and float valve seat.

- Check the float for signs of oil or gasoline saturation.
- Check the float valve seat for nicks, scratches, or distortion.
- Check the inlet needle tip for grooves, nicks, scratches, or distortion.

FUEL SYSTEM

CARBURETOR SERVICE

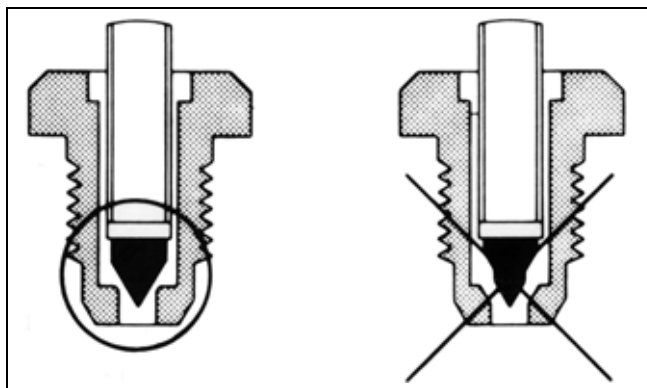


DR3584

IMPORTANT: The inlet needle and float valve seat must be replaced as a set.

Needle Valves


Inspect the tapered end of the needle valve for nicks, scratches, grooves, or signs of distortion.

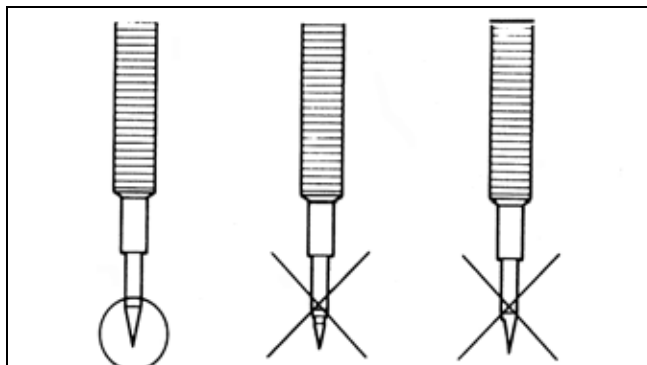

63324

Carburetor Body

Check all drillings and passages with a syringe filled with isopropyl alcohol.

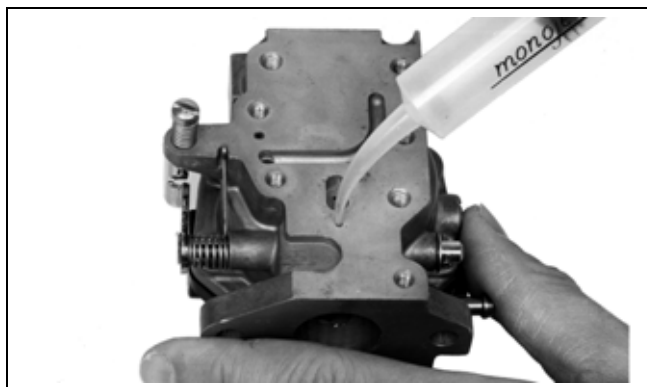


7628

Visually inspect all gasket surfaces for nicks or irregularities.

Check for excessive throttle shaft play. Check for throttle valve misalignment.

If necessary, remove the calibration pocket core plug to inspect the pocket for damage or restrictions.


- Drive a small punch not more than 1/8 in. (3 mm) through plug and pry out.
- Install a new core plug with the convex side up. Seat the plug using a flat end punch and plastic mallet. Apply *Gasolila* sealer to the rim of the core plug after it is seated.

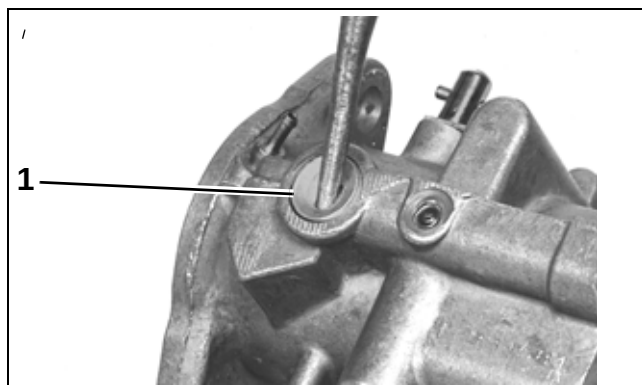

1. Core plug


9490

If necessary, remove the lead shot to inspect passage for restrictions or leaks. Gently pry up on lead shot with a sharp edged tool.

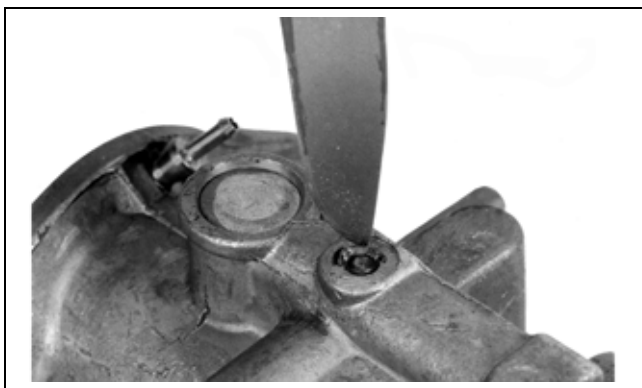

16768


Install a new lead shot. Flatten shot with flat end punch and plastic mallet. Check for leakage.

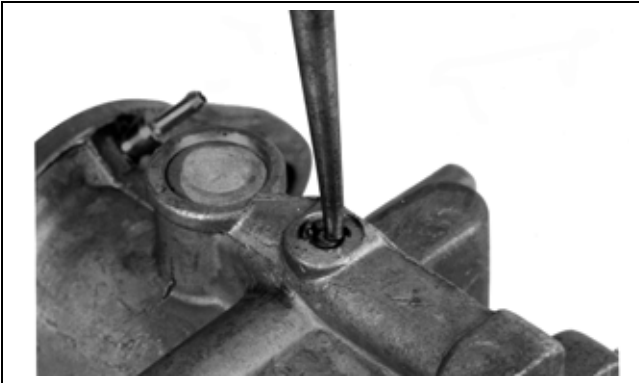

16767

Check for leaks between emulsion pickup tube and carburetor body.

- Invert carburetor body and fill idle circuit with isopropyl alcohol.
- Check for leaks at point shown below.
- If a leak occurs, blow dry and apply a drop of *Ultra Lock* at point shown.

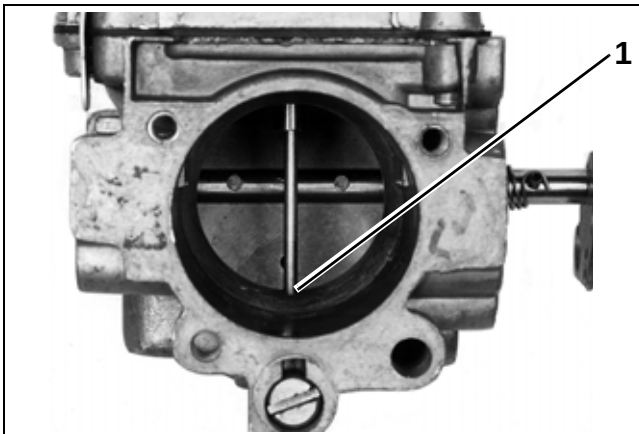

1. *Ultra Lock application point*

7626

Assembly

When installing new parts from a carburetor rebuild kit, inspect gaskets and compare to original gaskets to ensure all holes are correctly punched. Also, inspect new gaskets for any loose fibers or particles of gasket material.


IMPORTANT: Before proceeding, be sure that all parts are perfectly clean. Be sure that all replacement parts match original ones in size and shape. Replace all gaskets, O-rings, and sealing washers each time you assemble a carburetor.

If removed, press the air vent in the carburetor body.

Install the high-speed orifice.

Install the inlet valve assembly

Install the hinge pin and float.

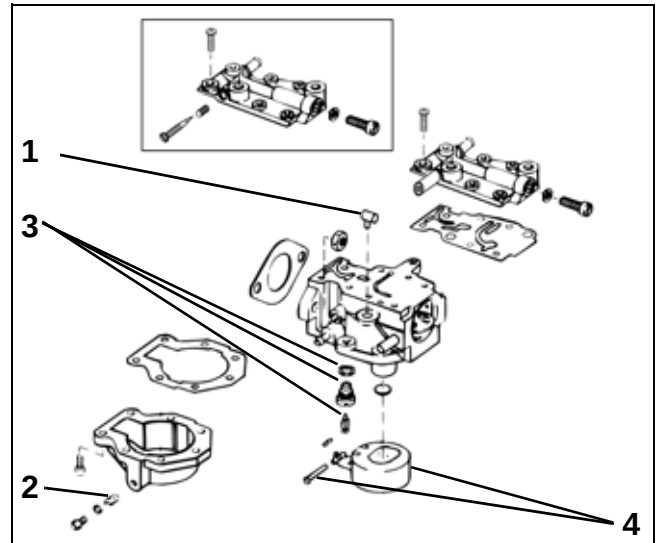

1. *Air vent*
2. *High-speed orifice*
3. *Inlet valve assembly*
4. *Hinge pin and float*

002535

Check for correct positioning of the float level. The float level controls the height of fuel in the float chamber and is essential to carburetor calibration and function.


Turn carburetor body upside down and hold so gasket surface is horizontal. The weight of the float will close the float valve needle. Rest Float Gauge, P/N 324891, on gasket surface and slide

FUEL SYSTEM

CARBURETOR SERVICE

gauge up, next to float. Top of float should be between notches on gauge.

Use notch that is indicated "9.9 & 15 HP." Be certain gauge is not holding down the float.

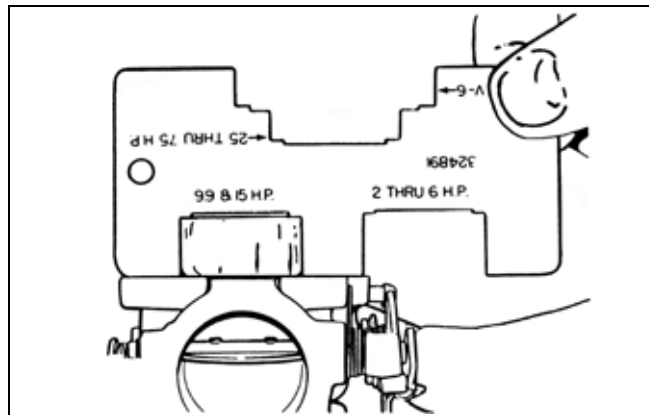

Float Gauge

93328

If float level is not between the notches of gauge, lightly bend metal float arm to adjust level. Be careful not to force float needle valve into seat.


Check for correct float drop setting. This setting affects the full opening of the inlet needle and is critical to correct operation of the carburetor.

With carburetor body in normal running position, the float must drop open from base of carburetor body to setting shown.

Float Drop Setting – 9.9/15

1 in. to 1 3/8 in. (25 to 35 mm)

Bend the float lever tab to adjust float drop.

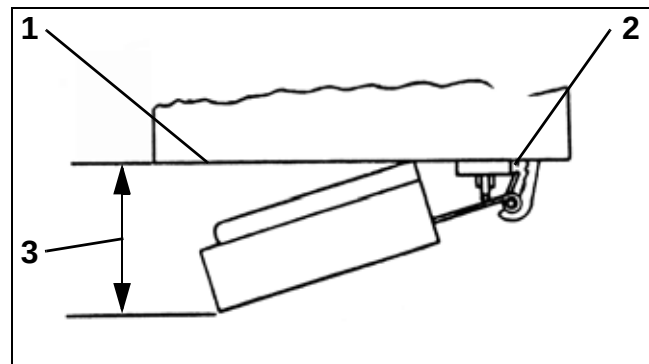

1. Base of carburetor body
2. Float lever tab
3. Float drop dimension


803406

Install the float chamber and a new gasket. Tighten the screws to a torque of 8 to 10 in. lbs. (0.8 to 1.2 N·m), following sequence embossed on float chamber.

Install the carburetor body cover and gasket. Tighten the screws to a torque of 8 to 10 in. lbs. (0.8 to 1.2 N·m), following sequence embossed on cover.

HR Models Only

Install the low-speed needle and spring. Turn needle carefully until it lightly contacts the seat; then back it off three turns.

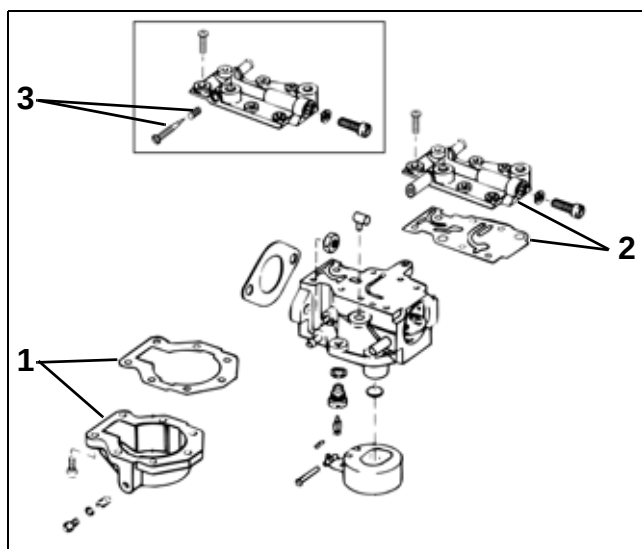

1. Float chamber and gasket
2. Carburetor body cover and gasket
3. Low-speed needle and spring (10RH models only)

002535

Installation


Attach the fuel supply hose, and secure with a tie strap.



35009


Position a new gasket on the intake manifold.

Install the carburetor. Tighten two retaining nuts securely.

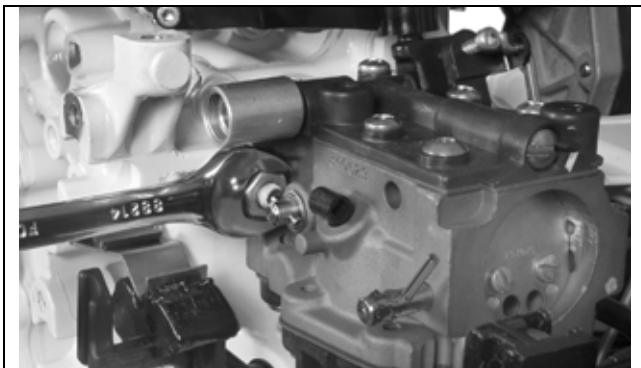


002558

Install cam follower on post. Position O-ring on the post to secure cam follower.

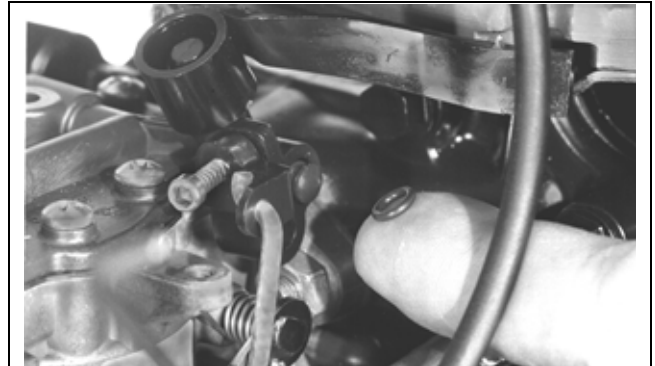

35007

Install the choke lever.

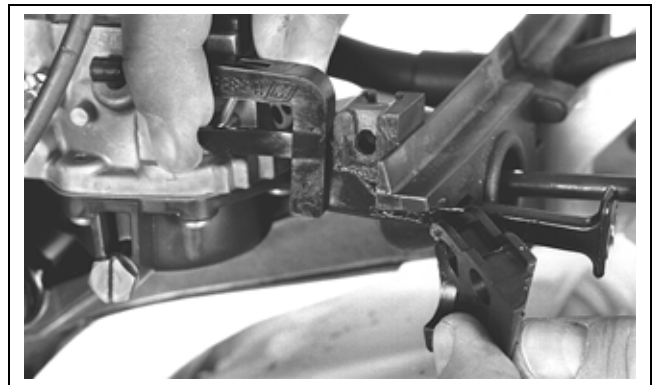

35005

Install the air silencer cover and tighten screws securely.

Install the manual starter. Refer to Manual Starter **INSTALLATION** on p. 190 section.

If the low speed needle adjustment has been disturbed, refer to **CARBURETOR MIXTURE ADJUSTMENT** on p. 114.

FUEL SYSTEM

CARBURETOR MIXTURE ADJUSTMENT

CARBURETOR MIXTURE ADJUSTMENT

IMPORTANT: Changing original factory fuel mixture calibrations beyond the limits allowed by the tamper resistant device is a violation of federal law. Any needle valve adjustments beyond preset limits become the responsibility of the servicing technician and/or the owner. Refer to **Emissions Compliance** on p. 107.


If the carburetor body cover assembly must be replaced; or, if the original calibration settings are lost, the following procedure can be used to make adjustments based on engine performance.

Adjustment of the tamper resistant needle valve requires a special Torx Screwdriver, P/N 351204.

Start the engine and run it in FORWARD at one-half throttle. Allow the engine to reach normal operating temperature.

Tiller Models


Face the steering handle. Turn the idle speed adjustment knob counterclockwise to lowest SLOW speed position.

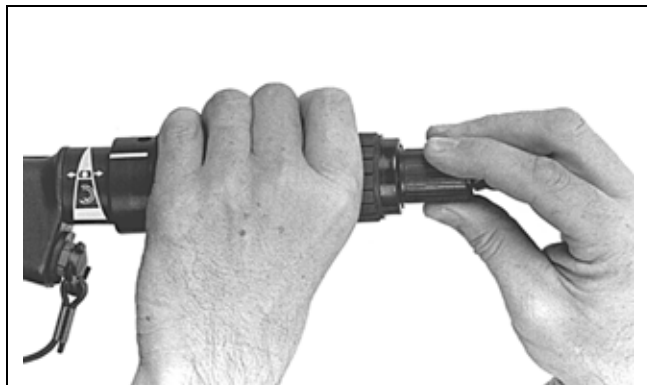

24333

Run the engine at slow speed (700 to 800 RPM) and adjust the low-speed needle until the highest

consistent RPM is attained. Allow 15 seconds after each adjustment for the engine to respond.

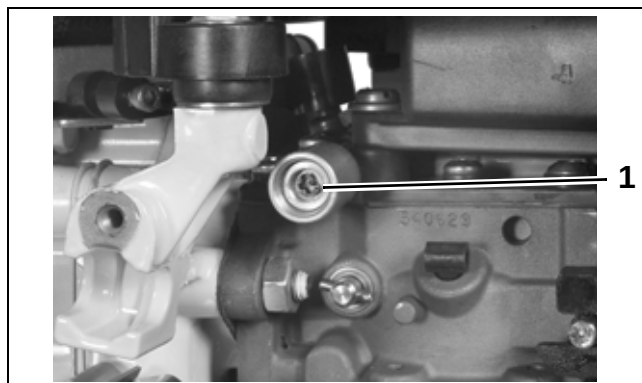

1. Low-speed needle

35008

Reduce engine speed and turn the idle speed adjustment to allow the engine to run at a minimum of 650 RPM in FORWARD.

Run the engine in gear near full throttle for one minute. Quickly reduce speed to SLOW (700 to 800 RPM) and shift into NEUTRAL. The engine should continue to run smoothly.

If the engine stalls or pops, the mixture is too lean. Turn the needle counterclockwise 1/16 turn. Allow 15 seconds after each adjustment for the engine to respond. Do the previous step again to make sure the mixture adjustment is correct.


If the engine does not respond to adjustments, check it for other problems. Make sure gasoline is of good quality and mixed with the proper amount of oil.

INTAKE MANIFOLD

Removal


Remove the powerhead. Refer to Powerhead **REMOVAL** on p. 128.

Loosen and remove six intake manifold screws.

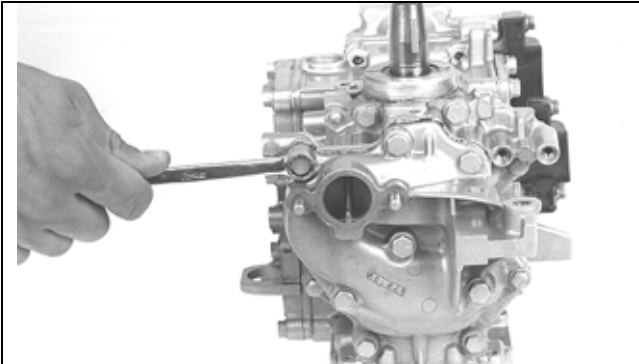

12334

Remove intake manifold, leaf plate, and two gaskets. Discard gaskets.

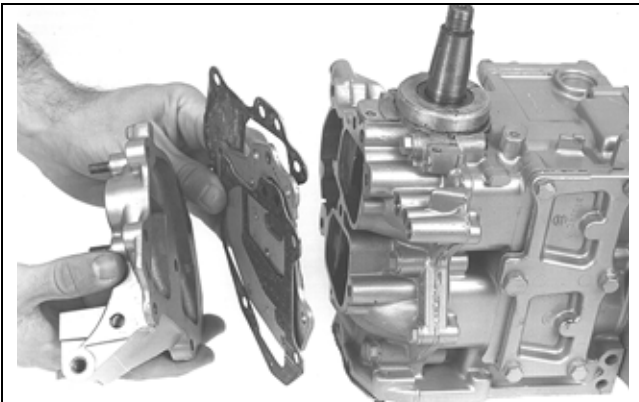


12333

Inspection

IMPORTANT: Do not lift or bend leaf valves by hand. This may damage them so they may not seal properly or may break after the engine is returned to service.

Inspect the leaf plate assemblies for damage:

- The leaf valves and plate must not be distorted.
- The leaf valve tips must not be cracked or chipped.
- The leaf stops must not be distorted or loose.
- Test leaf plate screw tightness. If loose, tighten using *Screw Lock*.
- The check valve disk must be intact and free to move inside the valve. The check valve screen must be clean.

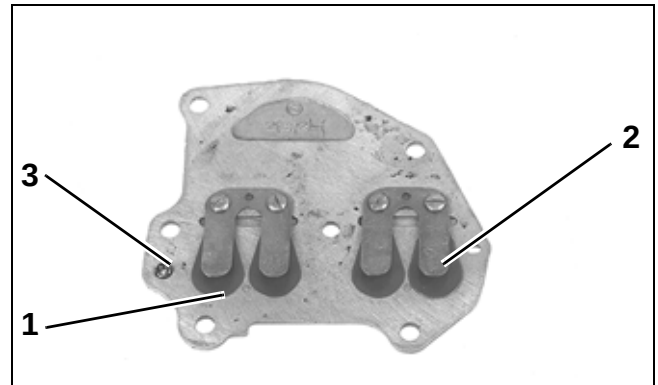


9.9/15 Model

1. Leaf valve tips
2. Leaf stops
3. Check valve disk

12317

- Use a machinist's straightedge to check the flatness of the leaf plate. The gasket surfaces must be flat, ± 0.003 in. (0.08 mm).

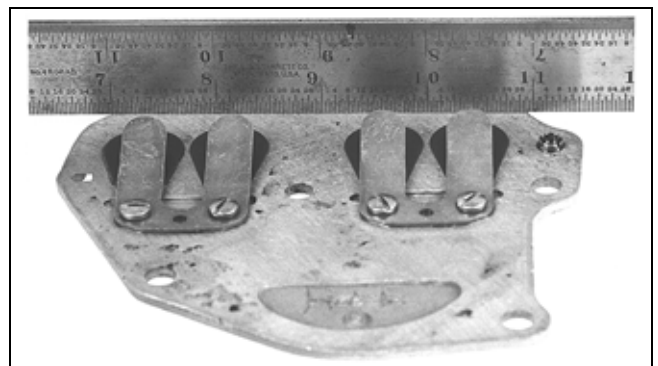

9.9/15 Model


12318

FUEL SYSTEM

INTAKE MANIFOLD

Inspect the intake manifold:

- All gasket surfaces must be smooth and free of nicks.
- Use a machinist's straightedge to check for flatness in all directions. The gasket surface must be flat, ± 0.003 in. (0.08 mm).

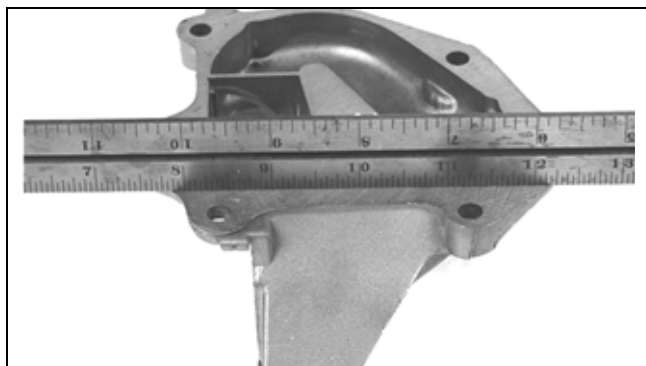

9.9/15 Model

12319

Disassembly

IMPORTANT: Do not disassemble leaf plate assemblies unless leaf plate seats, leaf valves, or leaf stops are damaged or corroded.

Remove two screws per leaf valve and remove the leaf valves as required.



12320

When disassembling leaf plate assemblies, do not lift or bend leaf valves. Remove the leaf stop screws and remove the stops, shims, and leaf valves.


When disassembled, keep the stops, shims, and leaf valves separated by assembly.

IMPORTANT: The 9.9 and 15 leaf valves are not interchangeable. The thickness of the valves is not the same.

Assembly

IMPORTANT: All intake manifold components must be perfectly clean before assembly. Do not use a strong carburetor cleaner or hot soaking tank.

Place leaf valves on leaf plate. If new valves do not seat on the leaf plate, turn the leaf valves over.

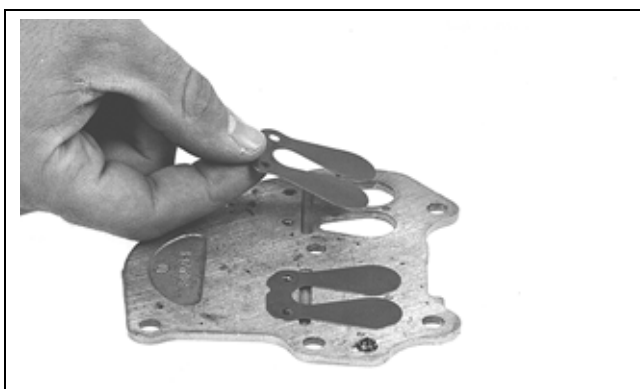

12321

IMPORTANT: Used leaf valves must not be turned over for reuse. Leaf valve may break when returned to service, causing serious powerhead damage.

If any leaf valves are standing open, apply light pressure using a pencil eraser. If leaf valve closes with light pressure, valve is acceptable. If not, inspect leaf plate for high spots or burrs.

IMPORTANT: Do not lap leaf plate. If plate is too smooth, the leaf valves may stick closed after off-season storage.

Apply *Locquic Primer* to mounting screws and allow to air dry.


Apply *Screw Lock* to mounting screws. Wipe off excess adhesive.



12322

Assemble leaf valve shim (if required) and leaf stop. Install screws finger tight.

Center the leaf valves on the plate using index marks.

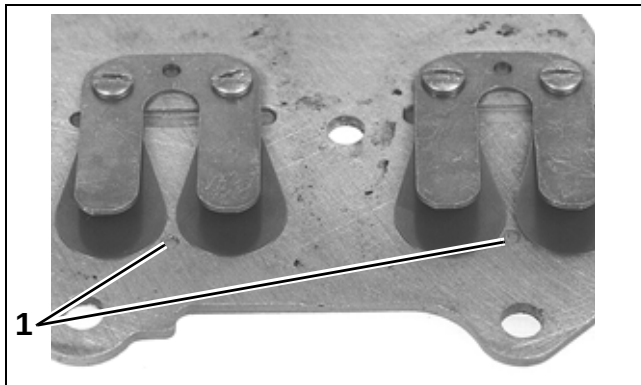

1. Index marks

12331

Tighten screws securely.




12320

Installation

Position leaf plate assembly and new gaskets on powerhead. Install gaskets dry. Use no sealer.

Install intake manifold using six retaining screws. Torque screws 60 to 80 in. lbs. (7 to 9 N·m).

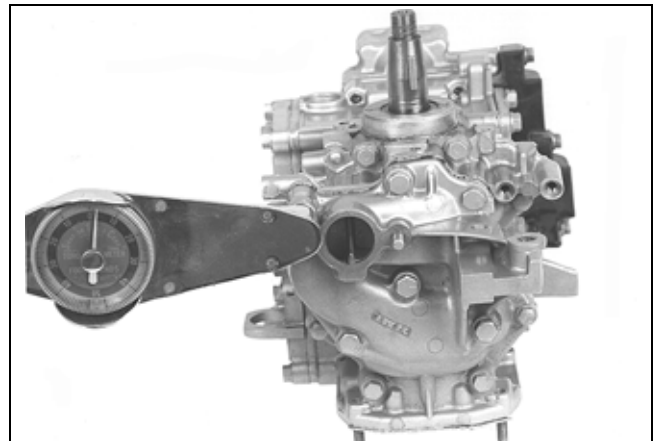

12335

NOTES

Technician's Notes

[illegible]

Related Documents

[illegible]

POWERHEAD

TABLE OF CONTENTS

TORQUE CHART	120
GENERAL	121
CYLINDER COMPRESSION TESTING	121
RETAINING RING PLIERS	121
TAPER PIN TOOL	121
ENGINE TEMPERATURE CHECK	122
UPPER CRANKCASE SEAL	123
GENERAL	123
REMOVAL	123
INSTALLATION	123
SHIFT LINKAGE	124
REMOVAL	124
INSTALLATION	125
START SWITCH	126
NEUTRAL START PROTECTION	127
MANUAL STARTER	127
ELECTRIC STARTER	127
REMOVAL	128
DISASSEMBLY	129
CLEANING	133
INSPECTION	134
ASSEMBLY	136
INSTALLATION	143
POWERHEAD VIEWS	145
PORT/STARBOARD VIEW, MANUAL START	145
REAR VIEW, MANUAL START	146

POWERHEAD
TORQUE CHART

TORQUE CHART

Description	9.9/15	Lubricant
Connecting Rod Cap Screws	60 to 70 in. lbs. (7 to 7.5 N·m)	Apply <i>Evinrude/Johnson</i> Outboard Lubricant to threads
Lower Crankcase Head Screws	60 to 84 in. lbs. (7 to 9 N·m)	Apply <i>Gasket Sealing Compound</i> to threads.
Cylinder Head Screws	216 to 240 in. lbs. (25 to 27 N·m)	Install screws dry. Do not use sealants on threads.
Powerhead Retaining Screws	60 to 84 in. lbs. (7 to 9 N·m)	Apply <i>Gasket Sealing Compound</i> to threads.
Main Bearing Screws	144 to 168 in. lbs. (16 to 19 N·m)	Apply <i>Gel Seal II</i> to threads
Inner Exhaust Tube Screws	60 to 84 in. lbs. (7 to 9 N·m)	
Cylinder Head Cover Screws	60 to 84 in. lbs. (7 to 9 N·m)	Apply <i>Gasket Sealing Compound</i> to threads.
Exhaust Cover Screws	90 to 130 in. lbs. (11 to 14 N·m)	
Bypass Cover Screws	60 to 84 in. lbs. (7 to 9 N·m)	
Intake Manifold Screws and Nuts	60 to 84 in. lbs. (7 to 9 N·m)	

IMPORTANT: For fasteners not listed, refer to **STANDARD TORQUE SPECIFICATIONS** on p. 20.

GENERAL

Cylinder Compression Testing

Start and run outboard until it achieves operating temperature, then shut OFF.

Remove all spark plugs and disconnect the 5-pin power pack connector.


Advance throttle linkage to WOT.

Install compression tester's hose attachment into spark plug hole (14 mm threads).

While cranking outboard with starter, note maximum pressure reading on gauge. Repeat procedure for each cylinder.

Return throttle to idle position and reconnect power pack connector. Replace spark plugs.


Retaining Ring Pliers

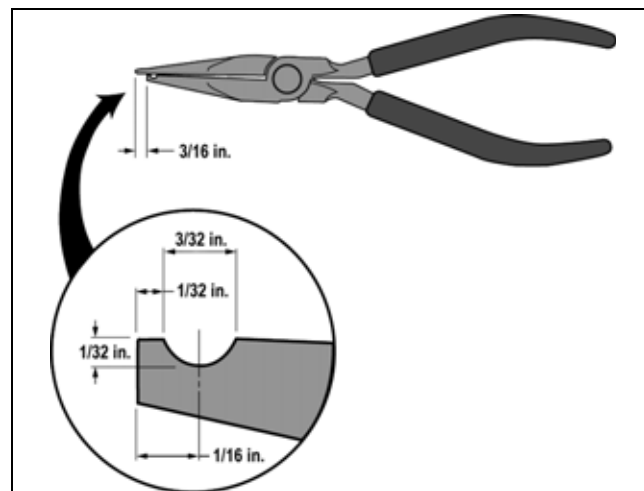

Retaining Ring Pliers

DRC2523

Taper Pin Tool

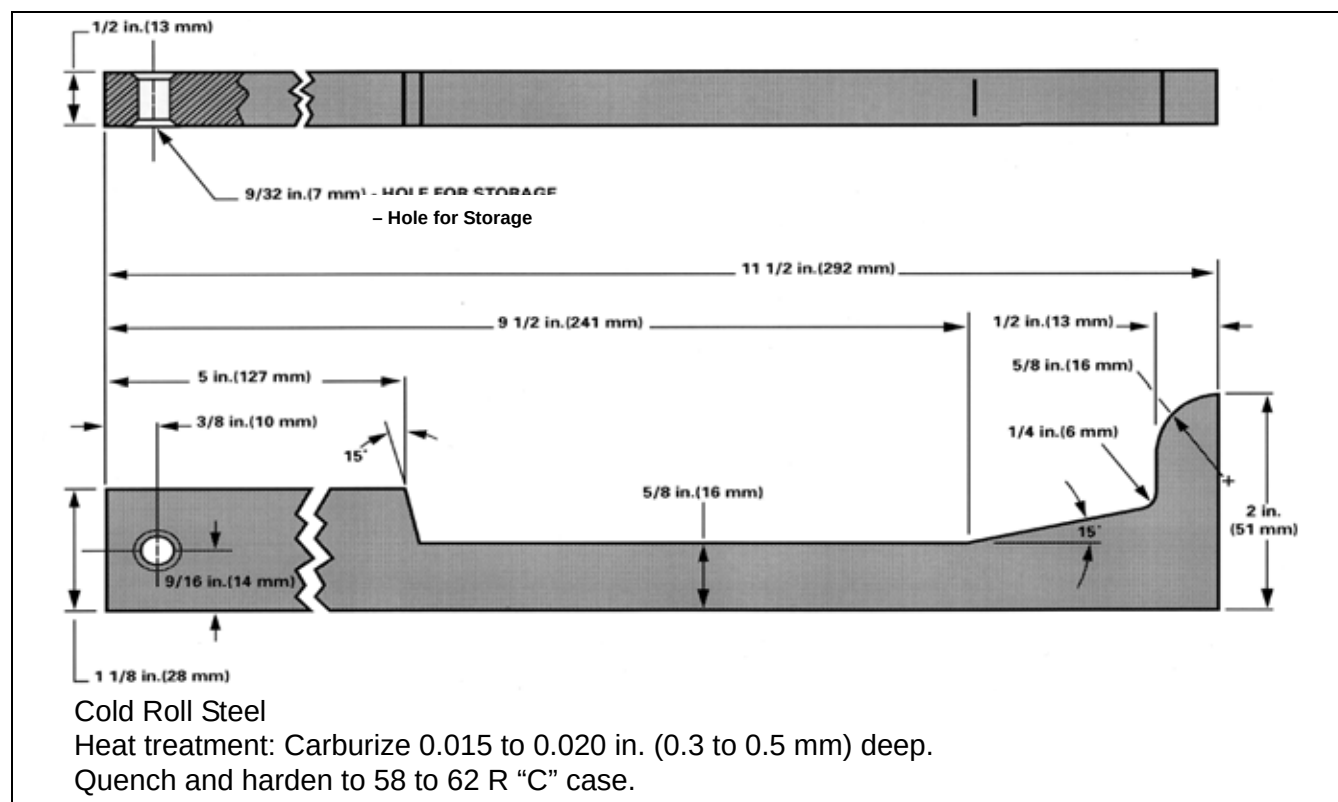

7



WARNING



Striking a steel punch with a steel hammer may produce chips which can cause serious damage to eyes. Safety glasses must be worn to prevent injury.

ENGINE TEMPERATURE CHECK

Temperature Gun, P/N 772018, or a digital pyrometer should be used to accurately determine the engine's operating temperatures.



Temperature Gun

DR6825

To achieve accurate and consistent readings, engine temperature must be gauged at the top of cylinder head.

IMPORTANT: For the following engine operating temperatures and RPM figures to be correct, the inlet water temperature must be $70^{\circ} \pm 10^{\circ}\text{F}$ ($21^{\circ} \pm 3^{\circ}\text{C}$).

STEP 1

Install correct test propeller and place outboard in a test tank.



WARNING



To prevent accidental starting of engine while changing propellers, twist and remove all spark plug leads.

Start outboard and run at 3000 RPM for at least five minutes.

Reduce engine speed to 900 RPM. At 900 RPM, the digital pyrometer or Temperature Gun should indicate $140^{\circ} \pm 15^{\circ}\text{F}$ ($60^{\circ} \pm 7^{\circ}\text{C}$) when checking at top of the cylinder head.

Model	IDLE Temperature
ALL	$140^{\circ} \pm 15^{\circ}\text{F}$ ($62^{\circ} \pm 8^{\circ}\text{C}$)


If engine temperature is not within this range, troubleshoot cooling system to determine problem.

STEP 2

Increase engine speed to 5000 RPM. At 5000 RPM, the digital pyrometer must not indicate more than 160°F (71°C).

Model	WOT Temperature
ALL	Maximum 160°F (71°C)

If engine temperature exceeds 160°F (71°C), troubleshoot cooling system to determine problem.

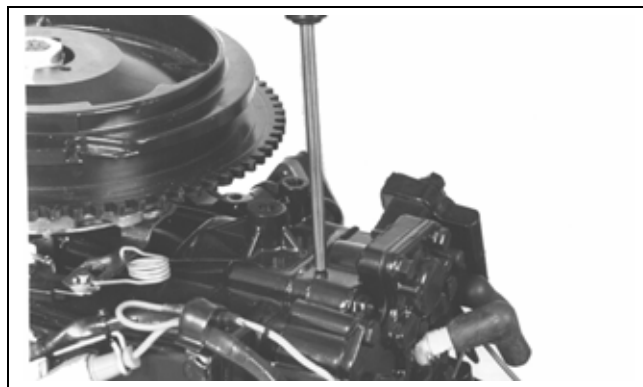

17212

IMPORTANT: If you get low or inaccurate readings during these tests, coat the probe location with a liberal amount of *Thermal Joint Compound*, P/N 322170.

UPPER CRANKCASE SEAL

General


The presence of oil under the flywheel could indicate a leaking upper crankcase seal. The upper crankcase seal can be replaced without disassembly of crankcase. Refer to **FLYWHEEL SERVICING** on p. 97 for flywheel removal.

Removal

Use Remover/Installer Kit, P/N 391060.

To remove seal, install tip "C," P/N 326270, into remover/installer body, P/N 326271. Thread remover/installer body with tip into seal to engage metal case.

While holding remover/installer body, turn pressing screw, P/N 342227, and remove seal.

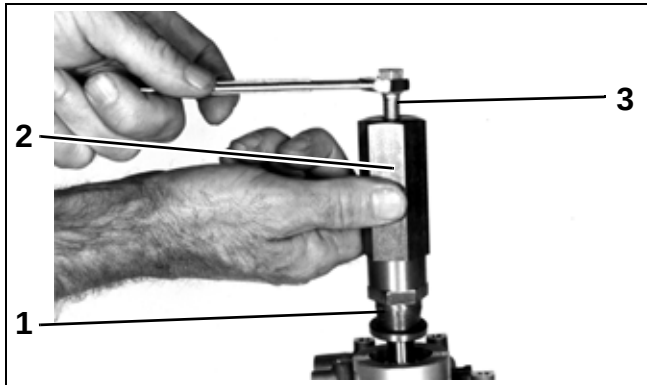

1. Tip
2. Remover/installer body
3. Pressing screw


CO1556

Installation

To install a new seal, apply *Gasket Sealing Compound* to the outside diameter of the metal casing. Position seal on crankshaft with lip facing crankcase assembly.

Upper Crankshaft Seal Installer	
9.9/15	P/N 326271

Use a mallet to install the seal flush with the top of the crankcase flange.

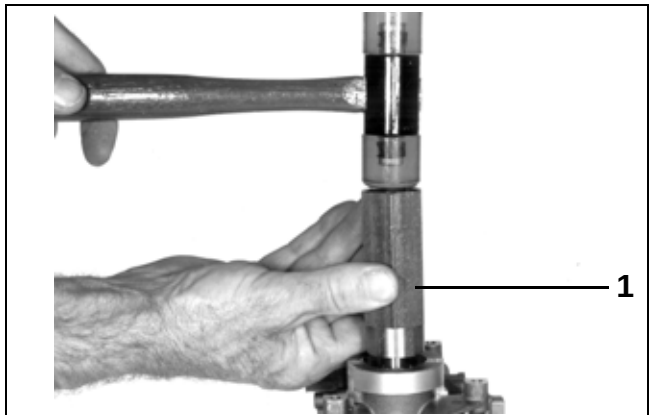

1. Installer

CO1557

SHIFT LINKAGE

Removal


Remove the lower engine covers as described in **REMOVAL** on p. 128.

Remove the clip and drive pin from shift handle.




32338

Remove the screw retaining the shift handle.

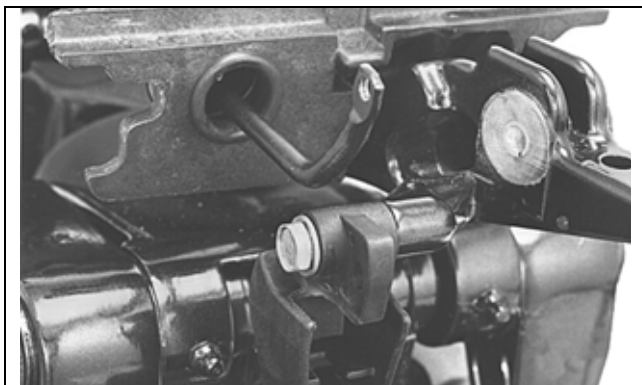

32337

Remove the lockout rod.

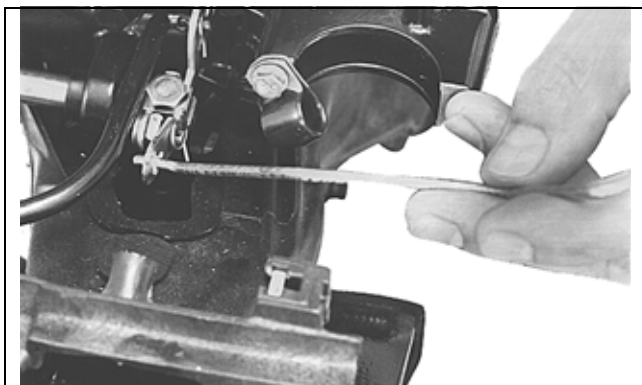


32336

Remove the choke lever and grommet.




32333

Remove the pin, shift rod, and grommet.

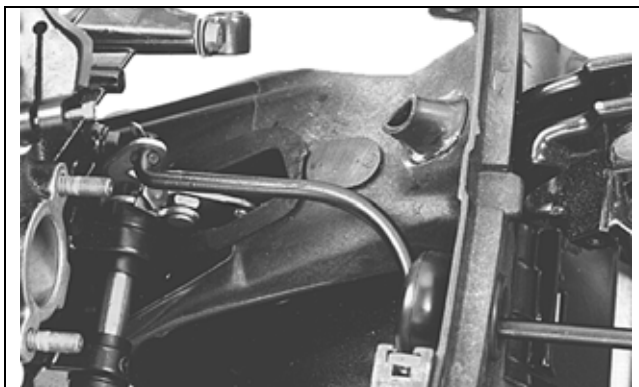


32344

Remove the screw and detent springs.

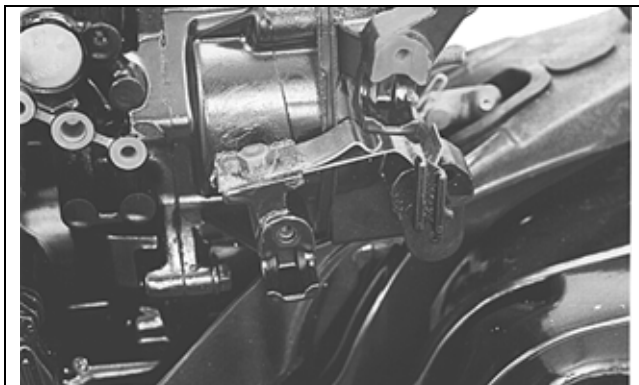


32320

Bend lock tab back and remove screw. Remove lock tab from shift arm.

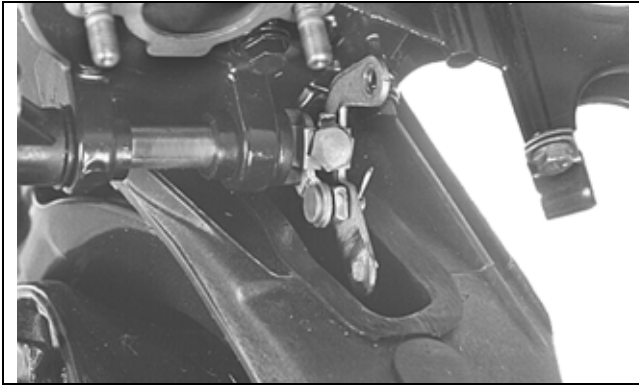

32341

Remove shift arm and spacer.

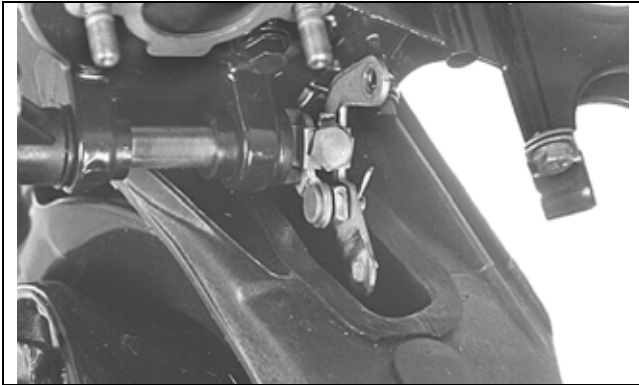

32340

Remove the cotter pin, and pin and shift lever. Remove the two shift arm bushings.



32343

Installation

Installation is essentially the reverse of removal. Pay close attention to any additional task that may be required for installation.

Install the two shift arm bushings. Install the pin and shift lever, and secure with cotter pin.

Install the shift arm and spacer.

Position lock tab on shift arm and install screw securely. Bend tab onto screw.

Place detent springs in position and secure with screw.

Install shift rod and retain with pin. Install grommet.

Attach choke lever to each linkage and install grommet.

Install the lockout rod.

Install shift handle and secure with screw.

Install the drive pin and clip in shift handle.

Install lower engine covers.

POWERHEAD SHIFT LINKAGE

Start Switch

Removal

Remove screw and wave washer retaining the shift handle.



1. Screw and wave washer

32826


Remove adjustment screw and nut from start button and remove.



1. Neutral start button

32823


Remove screw retaining neutral start switch.

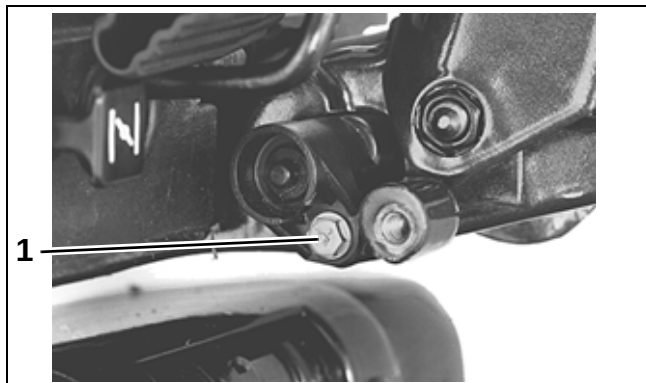

1. Screw

32825

Disconnect the red wires and from the starter motor and electrical box connection.

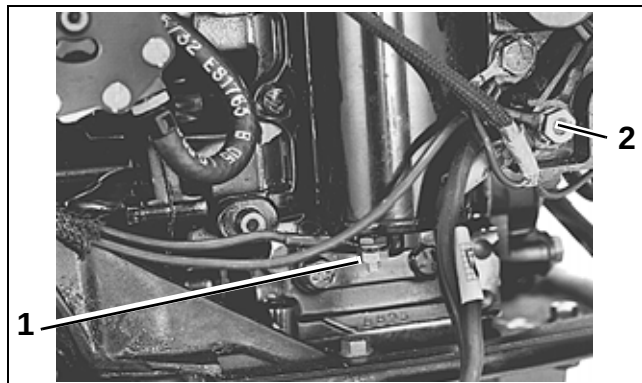

1. Starter wire
2. Start switch wire

32824

Pull wires out of grommet.

Installation

Installation is essentially the reverse of removal. Pay close attention to any **additional** task that may be required for installation.

Install switch wires through grommet. Connect the red wires to the starter motor and electrical box. Apply *Black Neoprene Dip* to the connections.

Install switch to shift bracket and tighten screw securely.

Install start button on shift handle and secure with screw and nut.

Install shift handle on bracket and secure with wave washer and screw.

IMPORTANT: Test neutral start switch in FORWARD and REVERSE. Adjust as required.

NEUTRAL START PROTECTION

Manual Starter

Manual start outboards are equipped with starter lockout mechanisms. Check operation of starter and lockout. Manual starter must NOT operate when shift handle is in FORWARD or REVERSE position. Refer to **MANUAL STARTER** section.

Electric Starter


IMPORTANT: Starter must operate **ONLY** when the outboard's shift handle is in the NEUTRAL position.

Disconnect the battery cables at the battery.

Test / Adjustment Procedure

Shift outboard into NEUTRAL. Disconnect the starter motor red wire at the motor.

Attach a continuity light or ohmmeter between the starter wire and the start switch wire at the electrical box, and press start button. The continuity light or ohmmeter should show continuity.

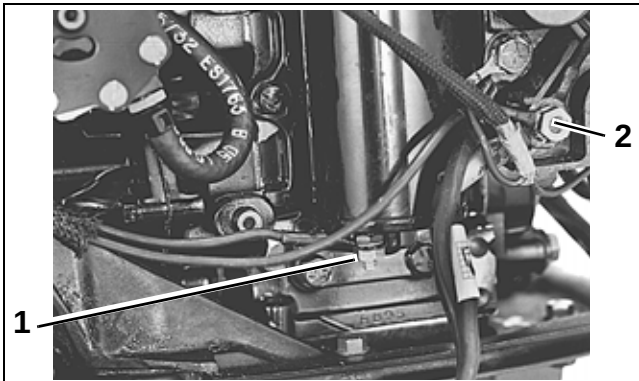

1. Starter wire
2. Neutral start switch wire

32824

Shift outboard into FORWARD and REVERSE and press start button. No continuity should be indicated in either position.

To adjust, loosen the start button screw. With the outboard in NEUTRAL, center the button in the switch recess. Tighten the start button screw.



1. Switch recess
2. Start button screw
3. Button

32826

Connect the starter motor red wire to the starter motor. Tighten the nut securely. Apply *Black Neoprene Dip* to the connection. Reconnect the battery cables.

Check operation of start switch. Shift outboard into FORWARD and REVERSE and press start button. Starter should operate **ONLY** with shift lever in NEUTRAL position.

POWERHEAD REMOVAL

REMOVAL




WARNING




To prevent accidental starting of engine while servicing, twist and remove all spark plug leads. On electric start models, disconnect battery cables at the battery. Disconnect battery positive (+) cable first and then the battery negative (-) cable.

Remove the two screws and nuts from the top rear of lower engine cover.

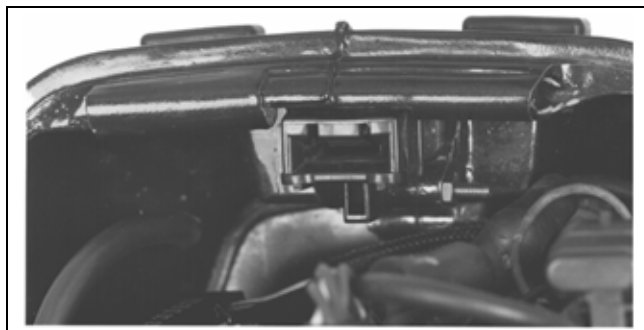


32816

Remove the water indicator hose and remove the screw from the lower rear of the lower engine cover.

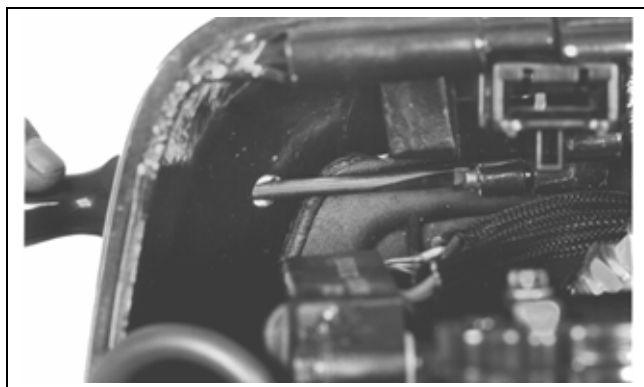

32819

Remove the two screws from the top front of the lower engine cover.

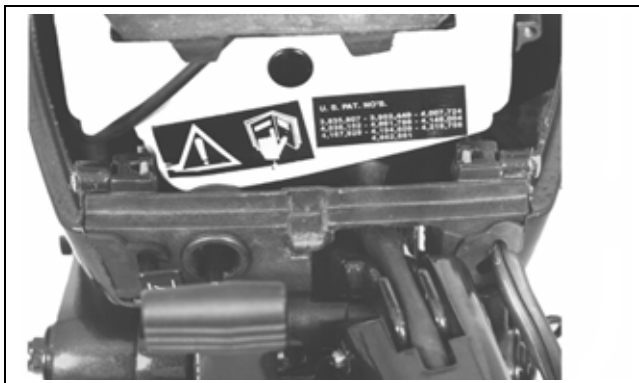

32817

Remove the screw and nut from the lower front of the lower engine cover.



32818

Remove the lower covers.

Remove electrical components. Refer to **ELECTRICAL** section.


Remove the fuel components. Refer to **FUEL SYSTEM** section.

Remove the ignition components. Refer to **IGNITION** section.

Remove the shift lever and linkage. Refer to **SHIFT LINKAGE** on p. 124.


If equipped with a steering handle, remove the handle and components. Refer to **MIDSECTION** section.

Remove the six retaining screws, powerhead to the exhaust housing.

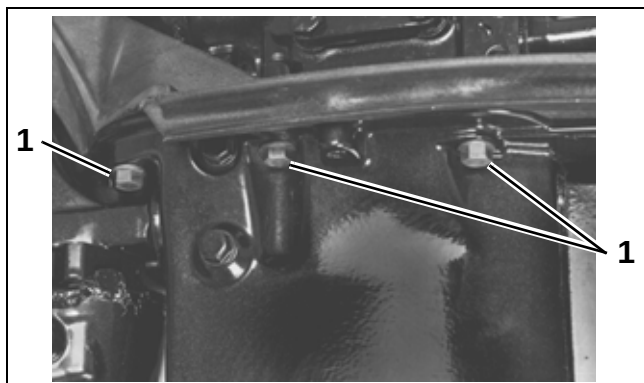


32309

The powerhead can now be removed. Lift the powerhead from the exhaust housing.

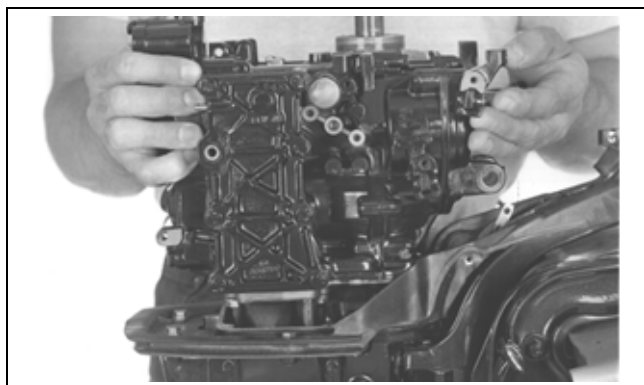

32308

Remove the exhaust and water tube assembly from the powerhead. Remove and discard the gasket.

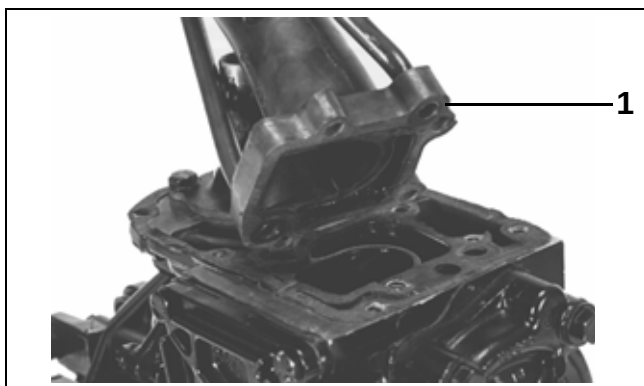


1. Exhaust and water tube assembly

32402

DISASSEMBLY


IMPORTANT: To simplify reassembly, lay out the various screws and clamps in the order of their proper location.

Remove the three screws retaining the crankcase head to the powerhead. Using a mallet and a punch, drive the seals from the crankcase head. Discard the O-ring and seals.

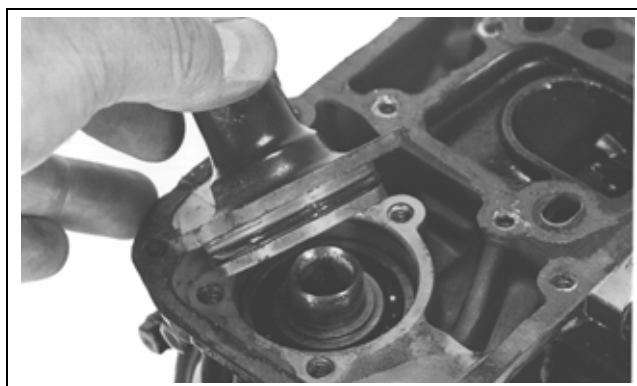

32303

Remove the exhaust cover screws. If necessary, tap the exhaust cover edge with a rawhide mallet. Remove the inner and outer exhaust covers; carefully separate the pieces.

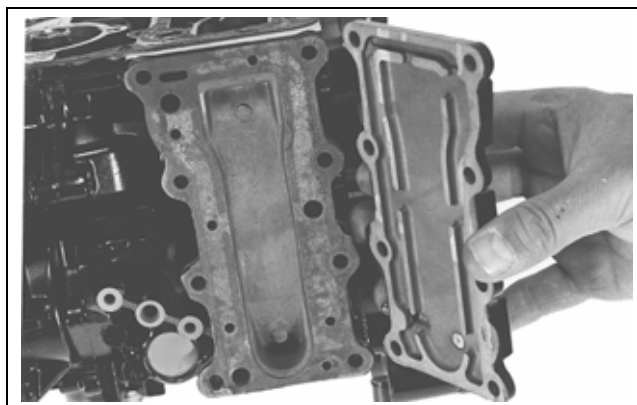


32388

IMPORTANT: Check the inner exhaust cover for pitting and flatness. If pitting exists or the cover is warped, discard it and replace with a new cover during reassembly.


POWERHEAD DISASSEMBLY

Remove the thermostat assembly and temperature switch (if equipped).

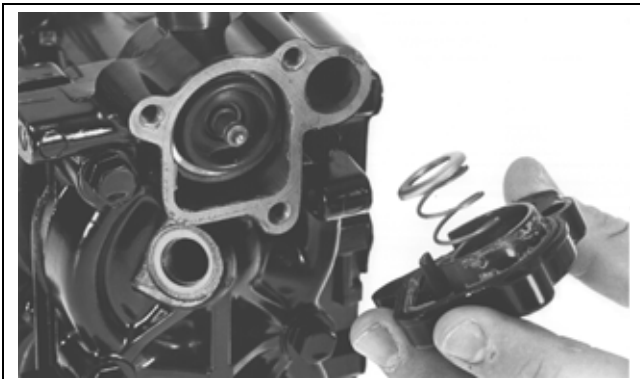


32387

Remove the intake bypass cover from the cylinder block. Clean the gasket surfaces.

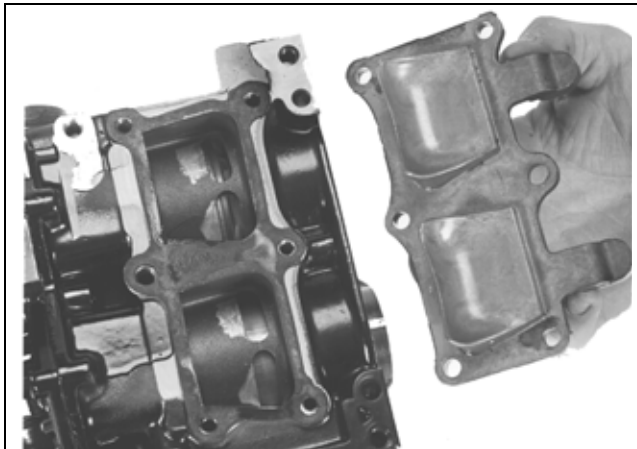


32384

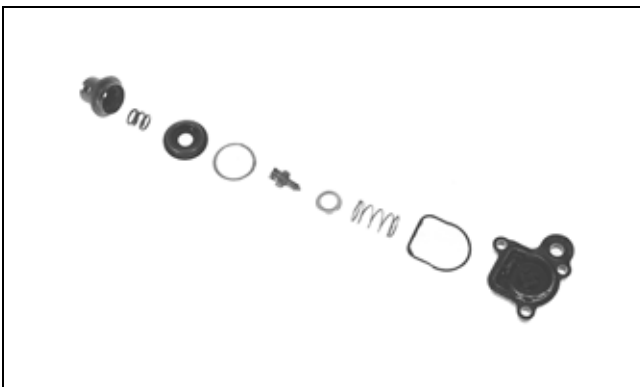

32386


Remove the cylinder head screws.

Remove cylinder head. With number punches, mark the top piston dome number 1 and the bottom piston dome number 2.

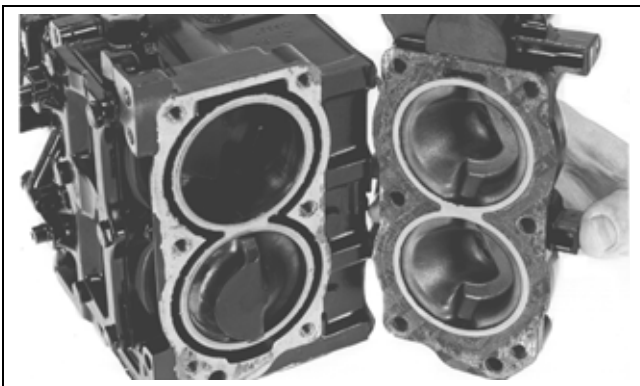

32385


Remove the six intake manifold screws, intake manifold, leaf plate assembly, and gaskets.

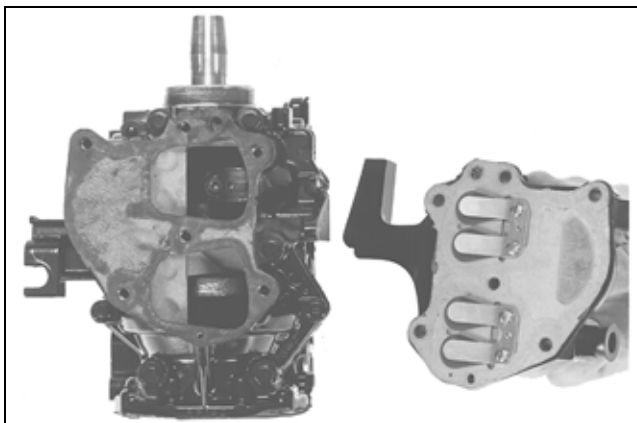

32383

Using the **Taper Pin Tool**, or equivalent, push crankcase taper pin toward intake manifold sur-


face. Do not use any tool smaller than taper pin bore to remove the pin.

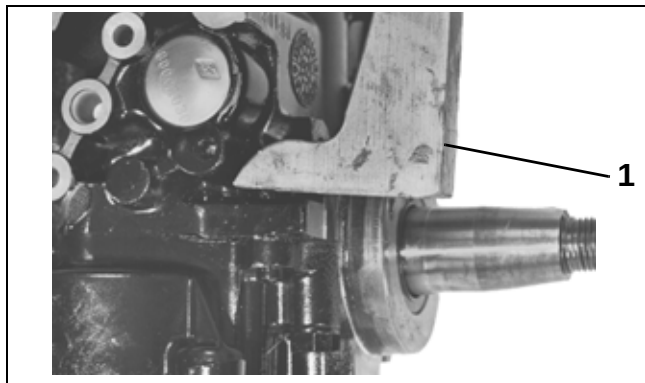

1. Taper Pin Tool

32382


Remove the four crankcase flange screws and six main bearing screws.

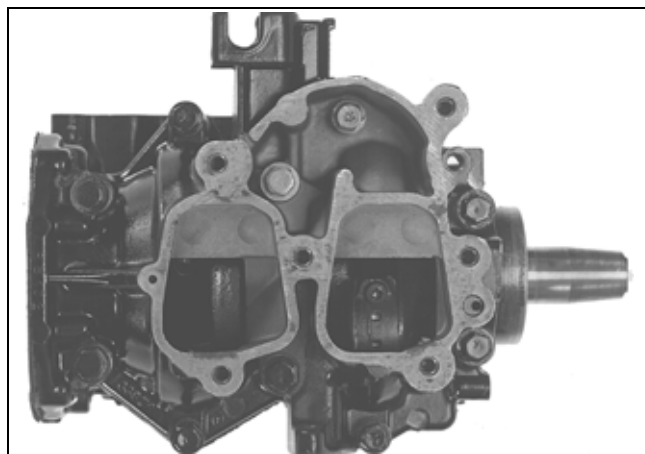

32395

Turn the powerhead so the intake manifold surface faces up.


Using a rawhide mallet, lightly tap upward on the crankshaft until the halves just begin to separate. Lift up and remove the crankcase.

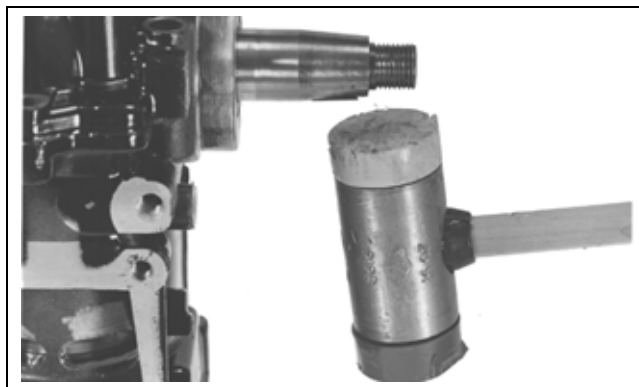

32394

IMPORTANT: Pistons, connecting rods, needle bearings, and liners are wearing parts and seat with the operation of the engine. Because of this, it is essential to maintain their original positions at reassembly.

Use an indelible ink marker to mark each component when it is removed to ensure correct mating. Keep the needles of each cylinder together.

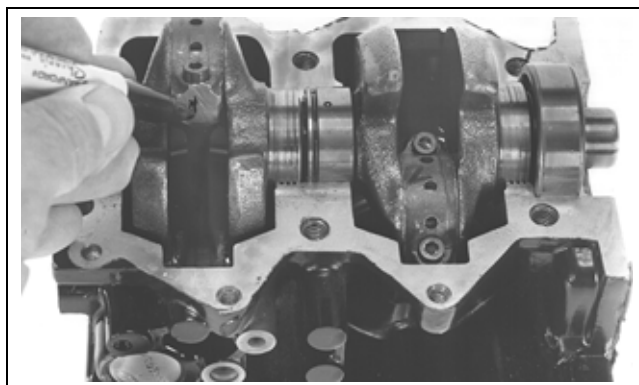


32403

IMPORTANT: Loosely install the cylinder head to prevent the pistons from falling out when the crankshaft is removed.

POWERHEAD DISASSEMBLY

Use a 5/32 in. Allen wrench to remove connecting rod screws. Remove the rod caps and bearing retainers.

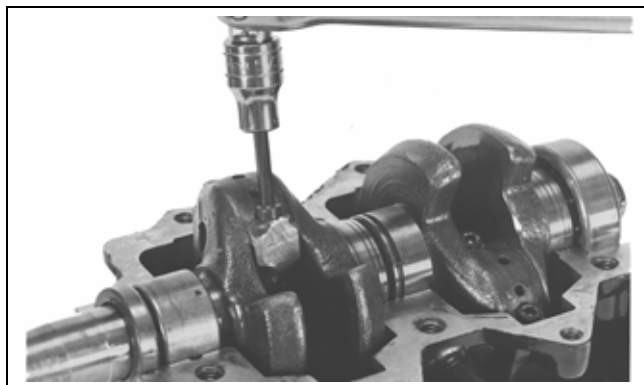


32393

Remove the retaining ring from groove of the center main bearing. Separate the bearing and remove the 23 loose needle bearings.



COB1127

Lift the crankshaft out of the cylinder block. Replace the connecting rod caps on the rods. Orient them exactly as they were before you removed them. Install the screws finger tight.

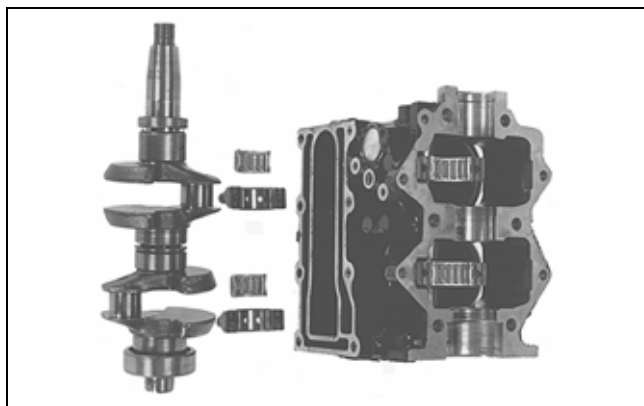

32391

IMPORTANT: Remove the lower main bearing only if it needs to be replaced.

Use external retaining ring pliers to remove the lower bearing retaining ring and a bearing separator to support the bearing. Place the separator flats against the bearing and press the crankshaft from the bearing.

Rotate the powerhead so the cylinder head faces up. Remove the cylinder head and gently push up on the connecting rods to remove number 1 and number 2 piston assemblies.

IMPORTANT: Protect the piston by packing paper towels between the connecting rod and piston. Do not allow the connecting rod to contact the inside of the piston skirt during handling.

Use diagonal-cutting pliers to remove the flywheel key from the crankshaft. Remove the upper seal and main bearing from the crankshaft.



COB1126

Remove the piston rings using an appropriate ring expander. DO NOT try to save the rings. Install a complete set of **new** rings at reassembly.



TYPICAL

22153

Use **Retaining Ring Pliers** or equivalent to remove wrist pin retaining rings. Discard the rings.



COB1129

The fit between the wrist pin to bosses of the piston is loose on both sides. Push the wrist pin through to free the piston from the connecting rod. If necessary, use Wrist Pin Pressing Pin, P/N 392511 and press out the wrist pin using an arbor press. Be careful not to lose any of the 22 needle bearings or the two wrist pin washers. If any of the bearings are worn or lost, replace all the bearings on reassembly.



COB1130

CLEANING

IMPORTANT: Before inspecting or assembling powerhead, all internal components must be perfectly clean and free of contaminants.

Remove any carbon accumulation from exhaust port areas.

Remove any carbon accumulation from cylinder head combustion chambers.

If cylinder walls are glazed from extended use, use a medium grit hone to resurface walls. Use slow RPM to achieve a strong "crosshatch" pattern for best oil retention and ring sealing.



CAUTION



To avoid piston or cylinder block damage, restore the chamfer to all port edges using a ball hone or other suitable tool.




WARNING



To avoid personal injury, wear eye protection and rubber gloves when using Gel Seal and Gasket Remover.

POWERHEAD INSPECTION

Use *Gel Seal and Gasket Remover* to remove all traces of gaskets, adhesives, and *Gel-Seal II* from the cylinder block and crankcase.

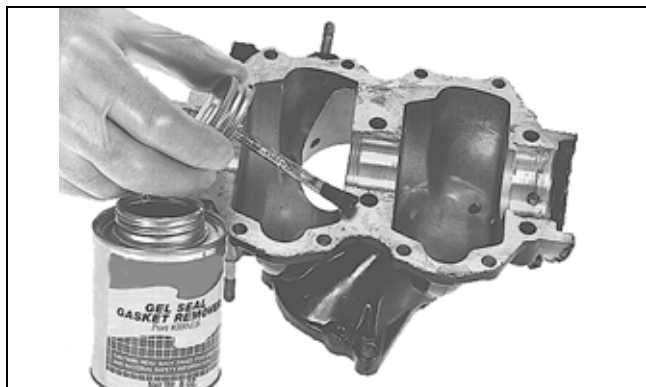

34865

Carefully remove any carbon accumulation from the tops and ring grooves of the piston. A ring groove cleaning tool can be made by breaking an old ring and grinding an angle on its end. Do not damage ring grooves while cleaning.

Thoroughly wash entire cylinder block and crankcase with warm, soapy water to remove all traces of contaminants.



WARNING



To avoid personal injury, wear eye protection and set compressed air pressure at less than 25 psi (172 kPa).

Air dry cylinder block and crankcase. Blow out all holes and passages with compressed air.

Cover the cylinder walls with a liberal amount of *Johnson/Evinrude Outboard Lubricant* to protect them from corrosion.

INSPECTION


Before any inspection process can begin, all internal components must be clean and free of excess oil. Refer to **CLEANING** on p. 133.

Make a visual inspection of all internal components. Check for unusual wear patterns, scuffing or deterioration of aluminum parts, heat-related discoloration of bearings or bearing surfaces, and broken components.

Use a micrometer to measure the diameter of each crankpin and main bearing journal. Measure the lower main bearing journal if the bearing was removed. Refer to **TECHNICAL DATA** on p. 18 for dimensions.

Check for cylinder head warpage using a piece of bar stock or machinist's straightedge and a feeler gauge set.


- Cylinder head warpage must not exceed 0.004 in. (0.10 mm) per inch of measurement. Replace head if warpage exceeds this dimension.

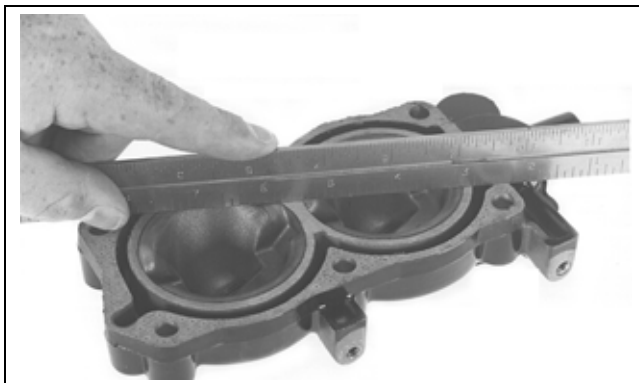

TYPICAL

32389

Use Cylinder Bore Gauge, P/N 771310, to inspect each cylinder bore for an out-of-round, oversize, or tapered condition. Make sure the gauge or micrometer is perfectly square in the bore when measuring.

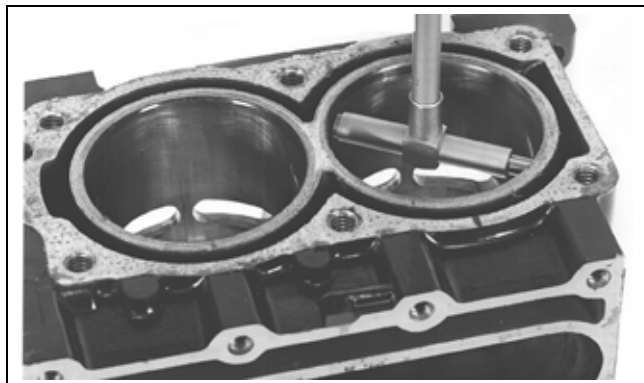


TYPICAL

32409

Measure each cylinder in at least two areas as shown. Each area should be measured twice. The difference between the two measurements in each area is the cylinder out-of-round dimension.

- The cylinder must not be out-of-round by more than 0.003 in. (0.08 mm).

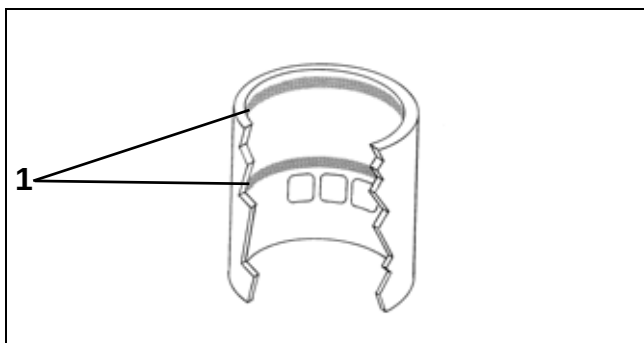

1. Measurement areas

DR1119

The dimensional difference between the two areas is the cylinder taper.

- Cylinder taper must not exceed 0.002 in. (0.05 mm).


The difference between your measurements and standard bore dimension is cylinder oversize. Refer to **TECHNICAL DATA** on p. 18 for dimensions.

- The cylinder must not be oversize by more than 0.002 in. (0.05 mm).

IMPORTANT: If any cylinder is outside these tolerances, it must be bored oversize. One oversize piston is available for this engine 0.020 in. (0.508 mm). To determine oversize bore, add 0.020 in. (0.508 mm) to the standard bore. Refer to **TECHNICAL DATA** on p. 18. It is permissible to have one or more oversize pistons in an engine.


Measure the piston in two locations, 90° apart from each other, 1/8 in. (3 mm) above the bottom of the piston skirt.

- The difference between the two measurements is the out-of-roundness and must be no more than 0.002 in. (0.05 mm).

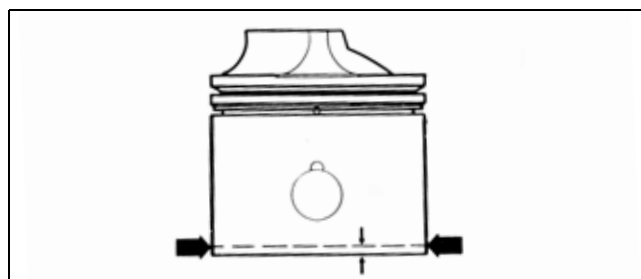

CO3082

Place each ring, separately, in its respective bore. Use a piston to square the ring in the cylinder. Use a feeler gauge to measure the ring end gap. The ring gap must be within 0.005 to 0.015 in. (0.13 to 0.38 mm).

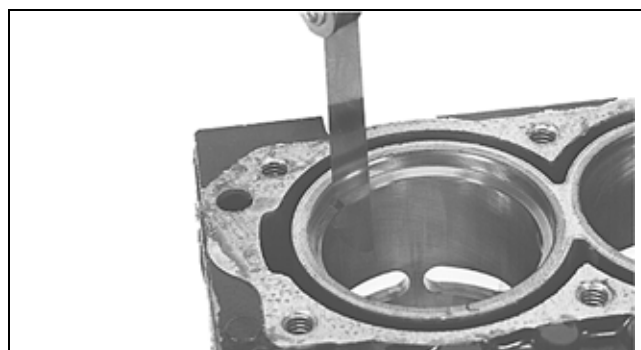


32408

Use a feeler gauge to check groove side clearance on the lower square rings. Install each square ring on its piston. With the ring seated in its groove, make several checks around the pis-

POWERHEAD ASSEMBLY


ton. The side clearance must not exceed 0.004 in. (0.10 mm).

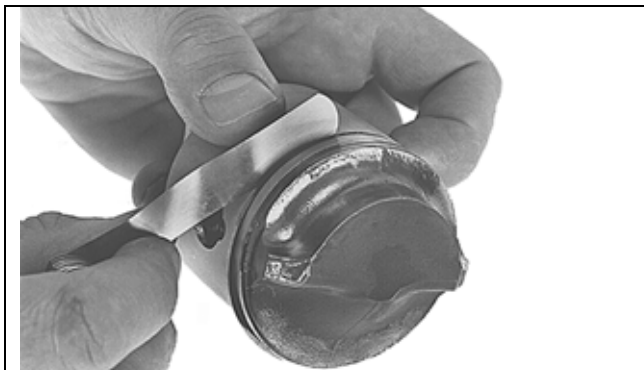

32407

Use a machinist's straightedge to check clearance on the upper tapered rings. Install each ring on its piston. When checked with the straightedge, there should be enough ring clearance to allow the straightedge to touch the piston on both sides of the ring groove. Make several checks around the piston.

- If straightedge does not touch piston, remove the ring and clean ring groove.

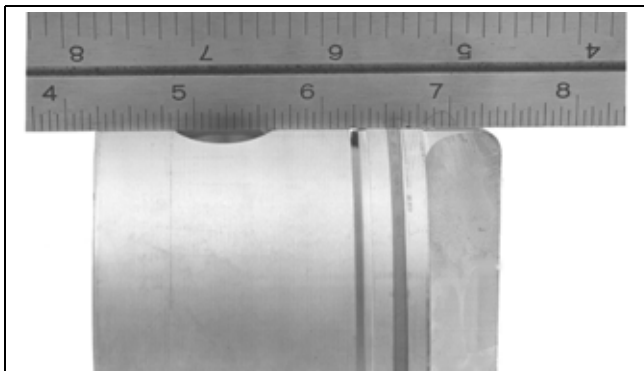


12907

ASSEMBLY

IMPORTANT: Proceed slowly. Make no forced assemblies unless a pressing operation is called for. All internal components must be perfectly clean and lightly coated with *Johnson/Evinrude Outboard Lubricant*.

Using Wrist Pin Pressing Pin, P/N 392511, seat a **new** retaining ring in groove of the piston.

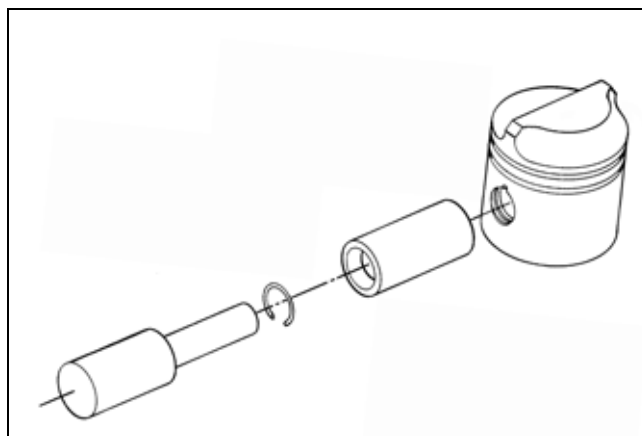

DR2661


IMPORTANT: Gap of the ring must be positioned opposite notch in the piston.



1. Gap of retaining ring
2. Notch in piston


COB1132

Using wrist pin driver, oil and start the wrist pin into the piston wrist pin boss opposite where the retaining ring is installed. Do not allow the wrist pin to enter the piston cavity.

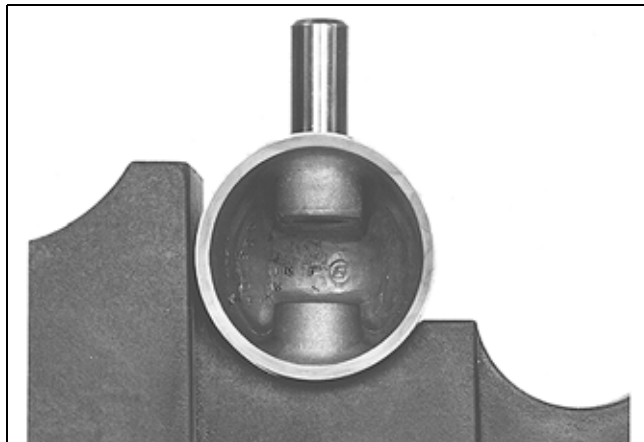


COB1133

Slide one of the wrist pin washers down the wrist pin. Position the top end of the connecting rod over the wrist pin. Apply *Needle Bearing* grease to the 22 needle bearings and install the bearings into the connecting rod.

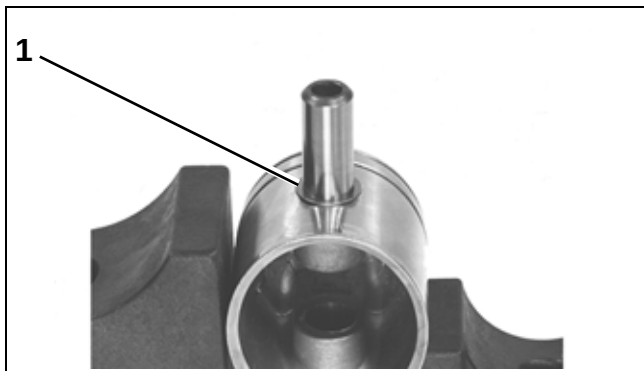

1. Wrist pin washer


COB1134

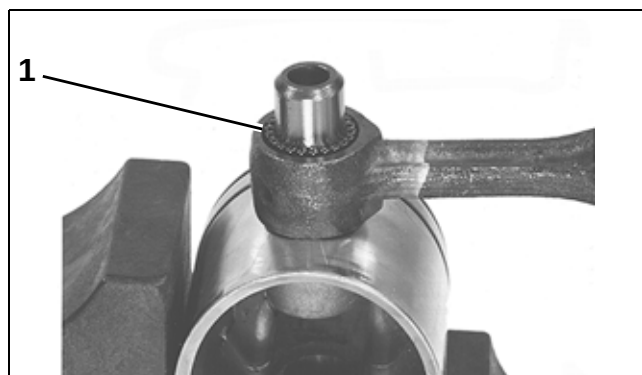

1. Needle bearings

COB1135

Slide the connecting rod with the needle bearings and washer up and off the wrist pin, being careful not to disturb the bearings. Place the connecting rod and the two wrist pin washers in position in the piston cavity, aligned with the wrist pin boss.

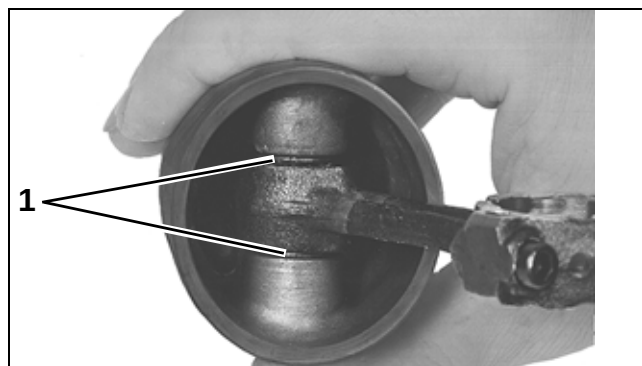

1. Wrist pin washer

COB1137


Finish installing the wrist pin through the connecting rod and the piston until the wrist pin contacts the installed retaining ring. Check to be sure none of the needle bearings have been disturbed and pushed out of the connecting rod. Install a second **new** retaining ring.

Install piston rings on each piston. Tapered ring must be installed in top groove. Spread each ring with a ring expander just enough to slip it over the head of the piston and down into place.

POWERHEAD ASSEMBLY

Coat the piston and cylinder bore with oil.


Place the piston in Ring Compressor, P/N 339754, (P/N 339755 for oversize pistons). Make certain that the rings are correctly positioned in their grooves with respect to the dowel pins. Damaged pistons and broken rings may result from imperfect alignment of the ring gap and the dowel pins.

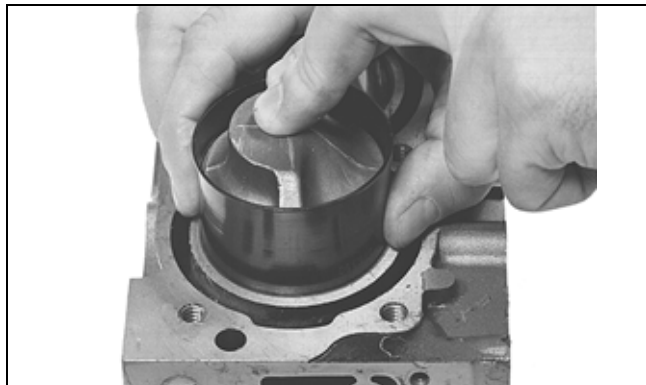

COB1140

IMPORTANT: The piston rings must be correctly located on their dowel pins to prevent permanent powerhead damage.

Start the piston into bore of the cylinder with deflector of the piston (sharp edge) toward intake port side of the cylinder block.

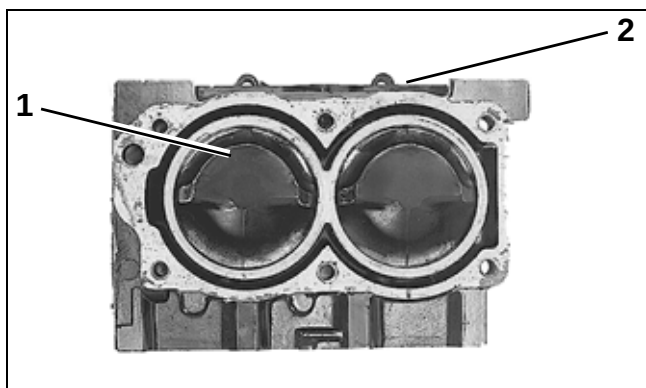

1. Piston, deflector
2. Intake port side

32406

IMPORTANT: Loosely install the cylinder head to prevent the pistons from falling out.

If removed, oil and press a new lower main bearing onto the crankshaft. When pressing on the bearing, support the crankshaft between the two lower counterweights and press against the lettered side of the bearing. Install the retaining ring in groove of the crankshaft with sharp edge of the ring facing away from bearing.



COB1141


Oil the upper main bearing surface of the crankshaft. Slide the upper main bearing onto the crankshaft with lettered side facing the flywheel end of the crankshaft.



COB1142


Install the center main bearing. Apply *Needle Bearing* grease to the 23 needle bearings. Place the bearings around the center main journal of the crankshaft. Place the sleeves around the bearings with retaining ring end of the sleeves facing fly-

wheel end of the crankshaft. Secure sleeves together with the retaining ring.

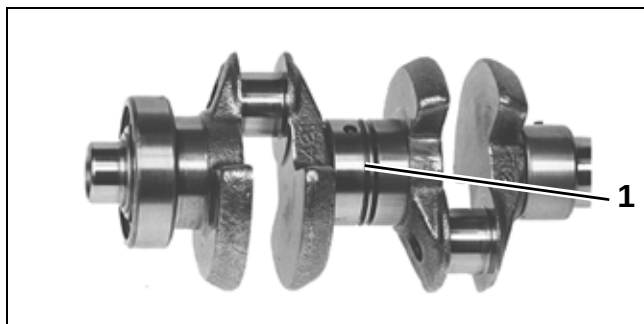

COB1144

Remove the rod caps from connecting rods. Place one retainer half and bearings on each rod.

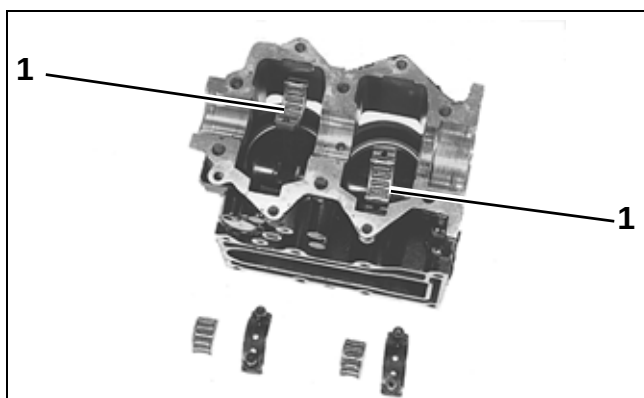


1. Retainer half

32405

Place crankshaft in position on cylinder block.


Align center main bearing dowel pin hole with dowel pin in cylinder block. Roll the upper main bearing pin into groove of the cylinder block.

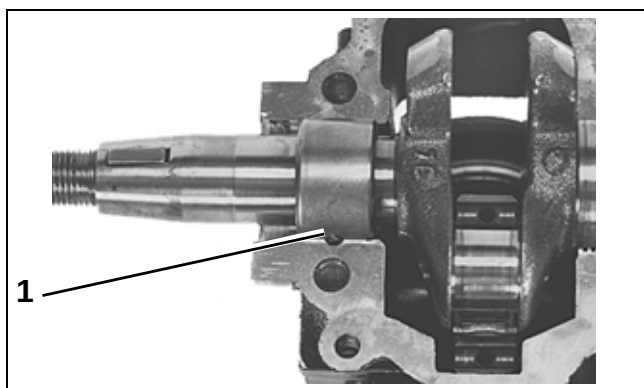

1. Upper main bearing pin


32404

Position the rods on the crankpins at this time. Place other retainer halves and bearings on crankpins.

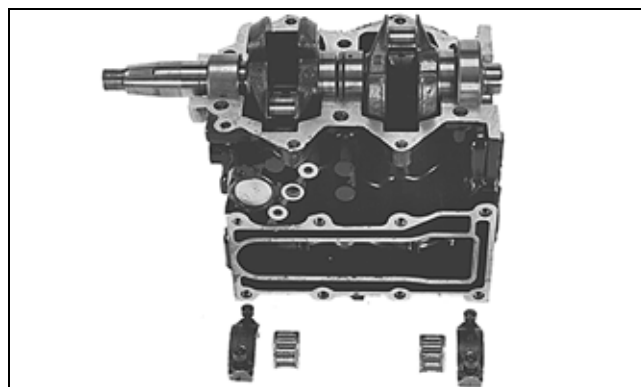

32454


Oil threads of rod cap screws and install each rod cap on the proper connecting rod. Make sure alignment mark on rod cap aligns with mark on rod.

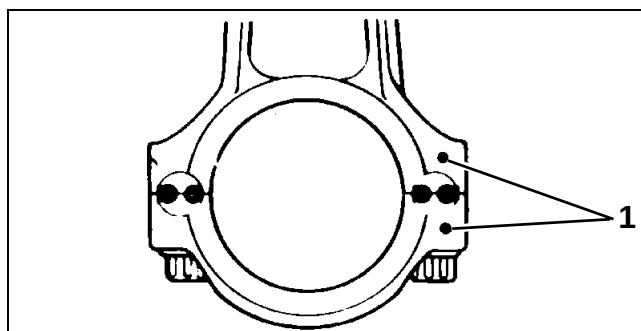

1. Alignment mark

53628

Use your fingernail or pencil lead to determine if the caps are aligned properly by scraping it across the joint between the cap and the rod. If your rod caps are not correctly aligned, lightly tap them into position with an aluminum rod and a mallet.

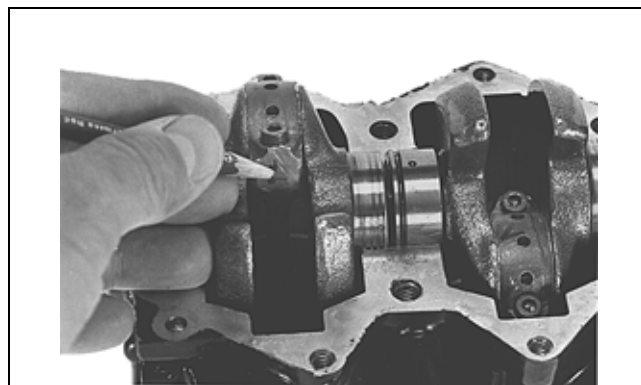


32453

POWERHEAD ASSEMBLY

IMPORTANT: Replace connecting rod assembly if proper cap and rod alignment cannot be achieved.

Tighten the screws in stages to a final torque of 60 to 70 in. lbs. (7.0 to 7.5 N·m).

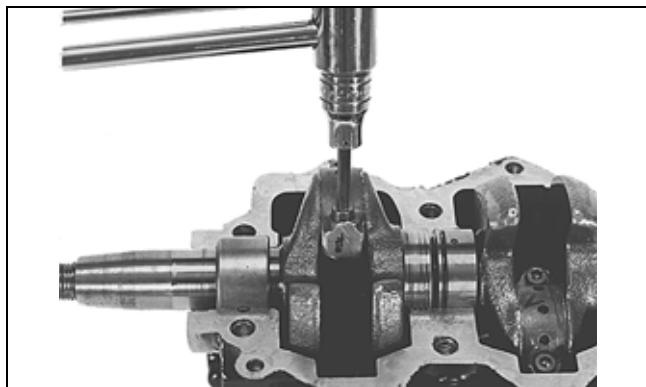


32452

Thoroughly clean and degrease the mating flanges of the crankcase and cylinder block with a non-petroleum based solvent, such as isopropyl alcohol or acetone, and let air dry.

Apply *Locquic Primer* to the mating flange of the crankcase and let air dry.

Use a small brush to dab a thin, even coat of *Gel-Seal II* sealant to the cylinder block mating flange. The application must not come within 1/4 in. (6.4 mm) of the labyrinth seals and bearings.

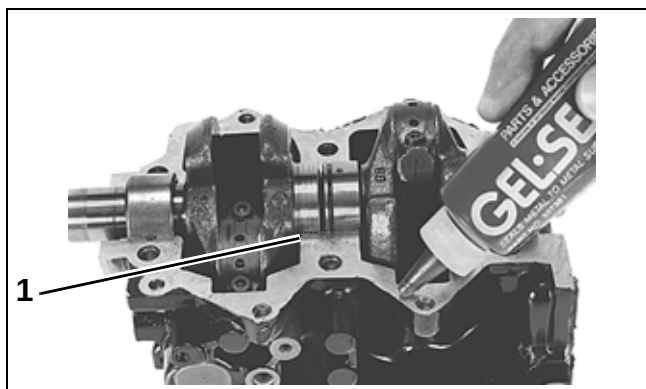

1. Labyrinth seal (grooves)


32451

IMPORTANT: *Gel-Seal II* has a shelf life of at least one year when stored at room temperature. Test the *Gel-Seal II* or replace it if the age of the tube can not be determined. Using old *Gel-Seal II* could cause crankcase air leaks.

IMPORTANT: If *Locquic Primer* is used, crankcase halves must be assembled and tightened within ten minutes after the *Gel-Seal II* has been applied.


Lower the crankcase into place.

Lightly coat threads of the six main bearing screws with *Gel-Seal II*. Install the screws finger tight.

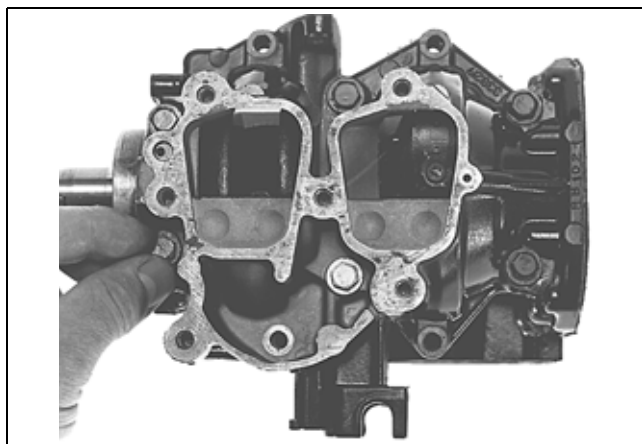

32450


When the crankcase is seated, install and firmly seat the crankcase taper pin.

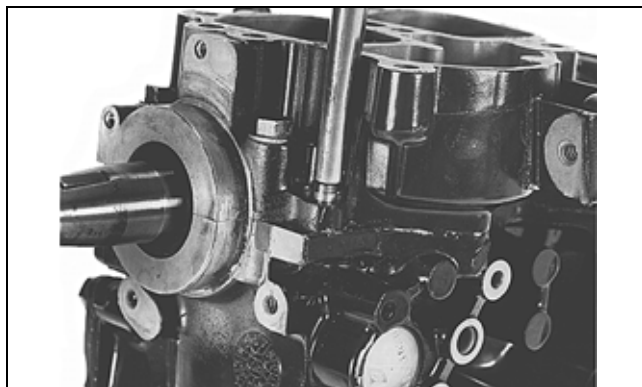

32378


Using a soft face mallet, lightly tap bottom of the crankshaft to seat the lower main bearing.

Apply *Gasket Sealing Compound* to metal case of a new upper main bearing seal. Install seal using Seal Installer, P/N 326271, with lip of seal facing crankcase assembly.

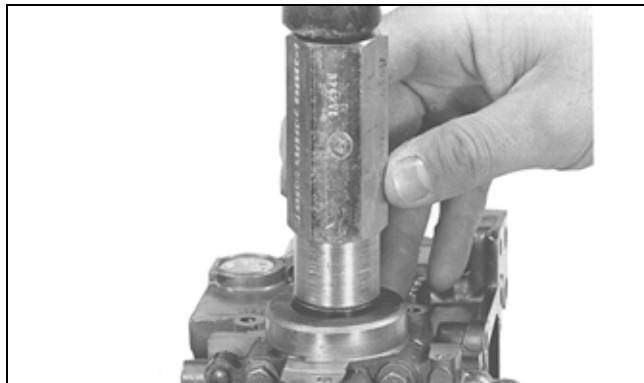


COB1152A

Apply *Gasket Sealing Compound* to metal cases of two new crankcase head seals. Place the small diameter seal on Crankcase Head Seal Installer, P/N 433391, with lip of the seal facing large diameter of the tool. Install the seal until tool contacts the head. Use the opposite side of the tool to install the large diameter seal. Lip of this seal must face away from large diameter of the tool. When installed, both seal lips will face toward each other. Apply approximately 3 cc of *Moly Lube* between the seals.

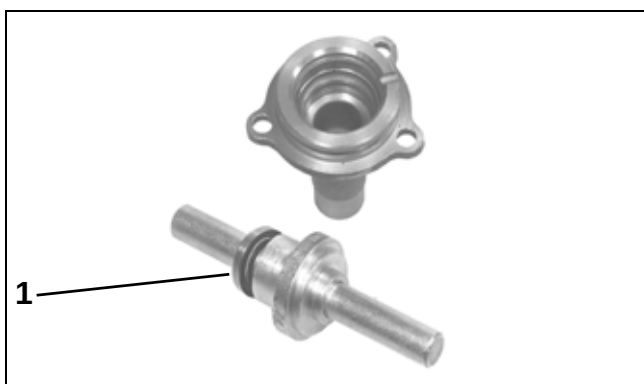

1. Seal (small diameter)

COA6229

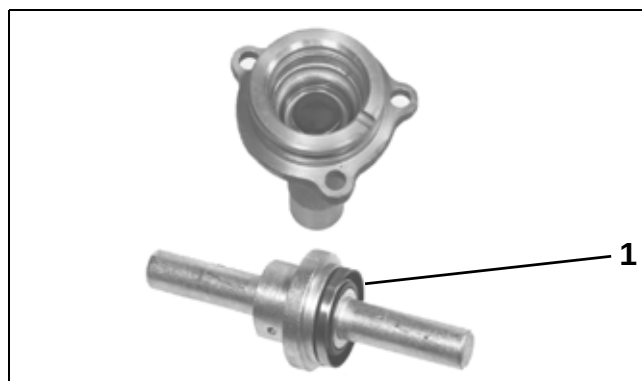

1. Seal (large diameter)


COA6230

Oil and place a new O-ring on the crankcase head. Install the crankcase head. Apply *Gasket Sealing Compound* to threads of crankcase head screws. Install the screws finger tight.

Tighten the six main bearing screws in stages to a final torque of 144 to 168 in. lbs. (16 to 19 N·m). Begin with the center screws and work outward in a spiral pattern. Tighten the smaller crankcase screws to a torque of 60 to 84 in. lbs. (7 to 9 N·m).

Tighten the crankcase head screws to 60 to 84 in. lbs. (7 to 9 N·m).

Apply *Permatex No. 2* to the two ribs in the cylinder head next to thermostat water passage.

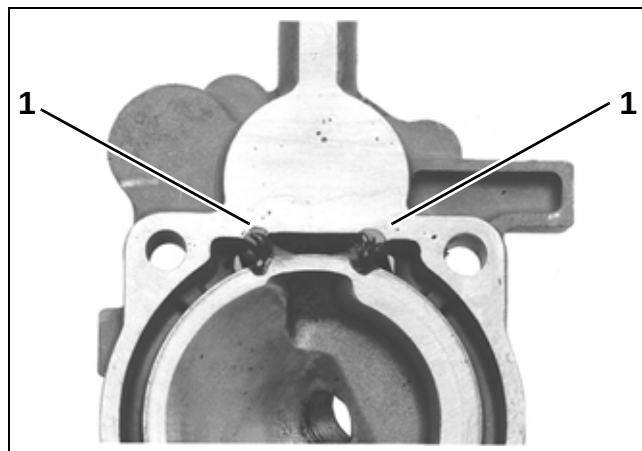


1. Ribs

38609

POWERHEAD ASSEMBLY

Lightly coat both sides of a new cylinder head gasket with *Gasket Sealing Compound*. Install the gasket and cylinder head. Tighten the cylinder head screws in stages to the final torque of 216 to 240 in. lbs. (24 to 27 N·m), following the sequence shown. Install the cylinder head screws dry. Do not use sealant on threads.

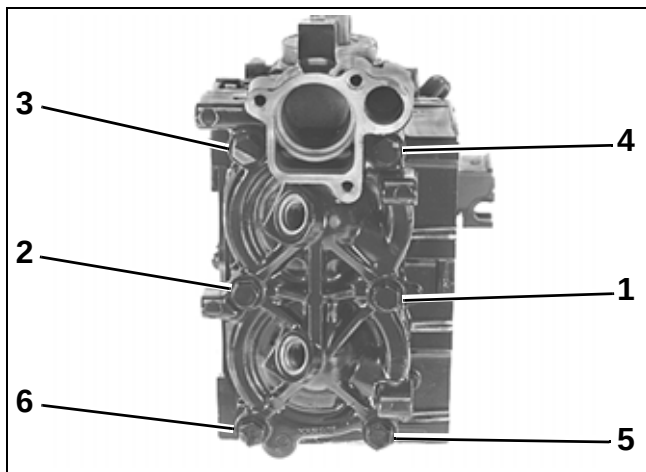

Torque Sequence

32448


Install the thermostat assembly (and temperature switch, if equipped) in the cylinder head.

Install thermostat cover and O-ring. Torque screws 60 to 84 in. lbs. (7 to 9 N·m).




32387

Apply *Gasket Sealing Compound* to both sides of two new exhaust cover gaskets. Install the inner and outer exhaust covers. Tighten the screws to a torque of 95 to 130 in. lbs. (11 to 14 N·m), starting with the center screws.

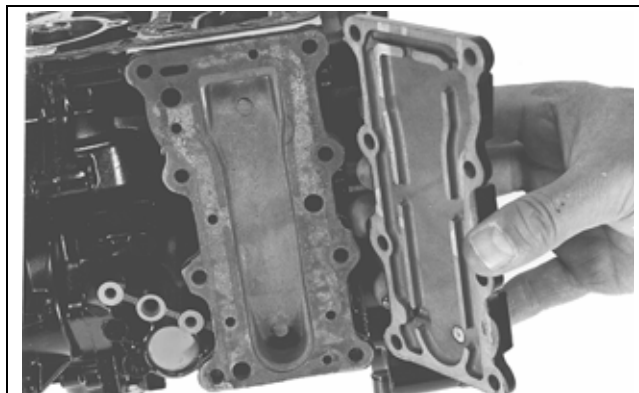


32388

Apply *Gasket Sealing Compound* to both sides of a new bypass cover gasket. Install bypass cover and tighten the screws to a torque of 60 to 84 in. lbs. (7 to 9 N·m), starting with the center screws.

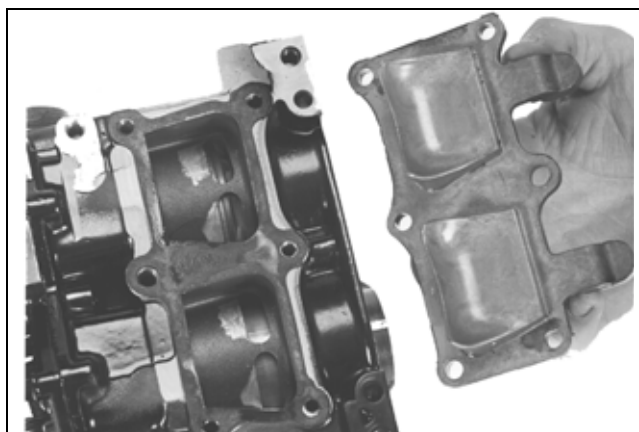

32384

Install the intake manifold and leaf valve assembly using new gaskets. Do not use sealer on these gaskets. Tighten the screws to a torque of 60 to 84 in. lbs. (7 to 9 N·m).

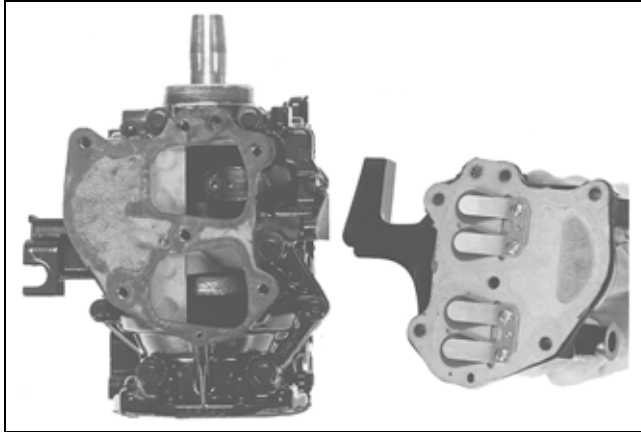

32383

Install the fuel, ignition, and electrical components to the powerhead.



WARNING




To prevent possible fire and explosion under the engine cover, make sure ignition and electrical wires are routed and clamped in original position; away from rotating parts which could cut or abrade wire insulation.

INSTALLATION

IMPORTANT: Remove the gearcase to aid in guiding the water tube into the water pump grommet. Refer to Gearcase **REMOVAL AND INSTALLATION** on p. 167.

Install new powerhead to exhaust housing gasket. Install dry; use no sealer.

Install both grommets and water tubes in inner exhaust tube. Center water tube in grommets. Do not allow water tubes to touch inner exhaust tube. Position inner exhaust tube on powerhead. Tighten the screws and torque 60 to 84 in. lbs. (7 to 9 N·m).

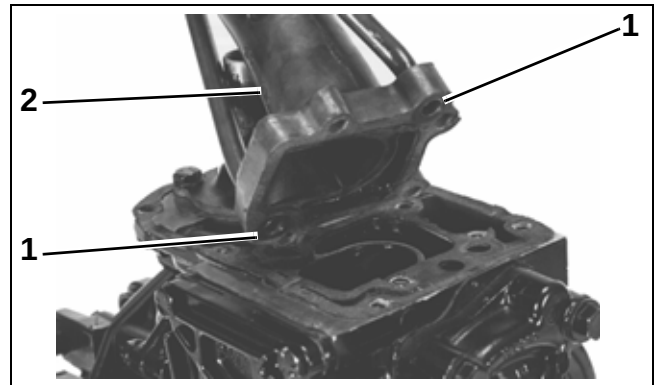

1. Grommets
2. Inner exhaust tube


32402

Apply a liberal amount of *Permatex No. 2* sealer to the machined diameter of lower crankcase head.

Position the long water tube and the short water tube as shown prior to installing the powerhead on the exhaust housing.


Guide the long water tube into the water tube opening in the exhaust housing and the short water tube into the opening in the rear of the exhaust housing as the powerhead is lowered into the exhaust housing.

POWERHEAD INSTALLATION

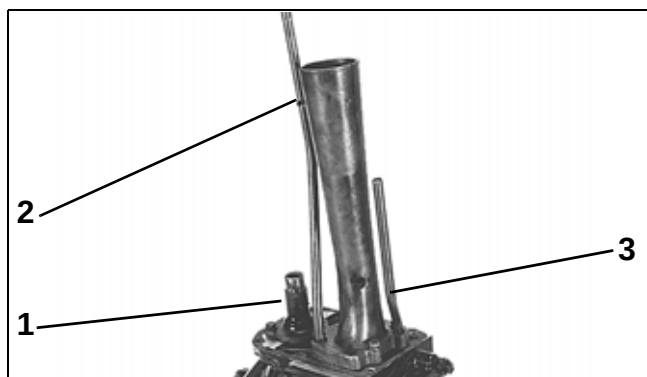

1. Lower crankcase head
2. Long water tube
3. Short water tube

32401

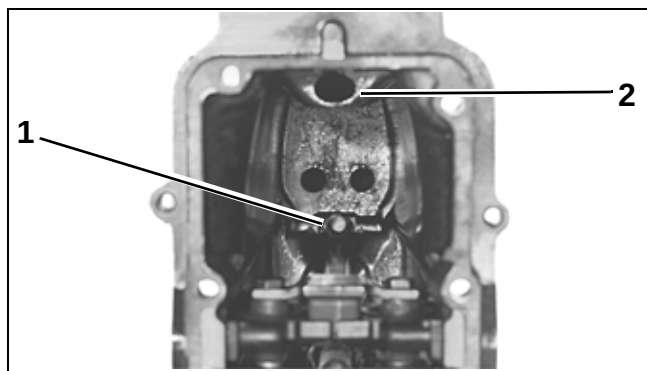

1. Long water tube opening
2. Short water tube opening

32398


Apply *Gasket Sealing Compound* to the six powerhead retaining screws and install the screws. Tighten the six powerhead retaining screws and torque 60 to 84 in. lbs. (7 to 9 N·m).




32309

IMPORTANT: Adjust the start button assembly. See **Start Switch** on p. 126. To avoid permanent powerhead damage, instruct operator to repeat the original outboard break-in procedure as described in the **Operator's Guide**.

Port/Starboard View, Manual Start

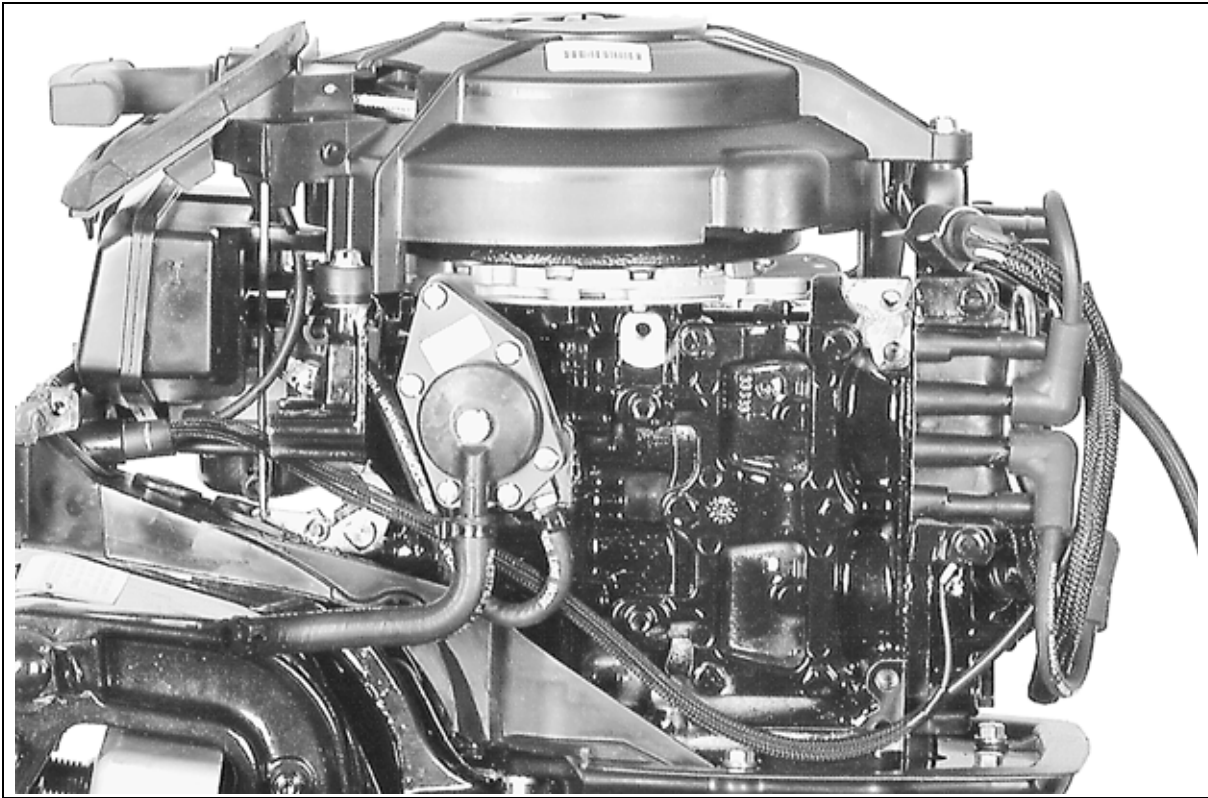


DP0019

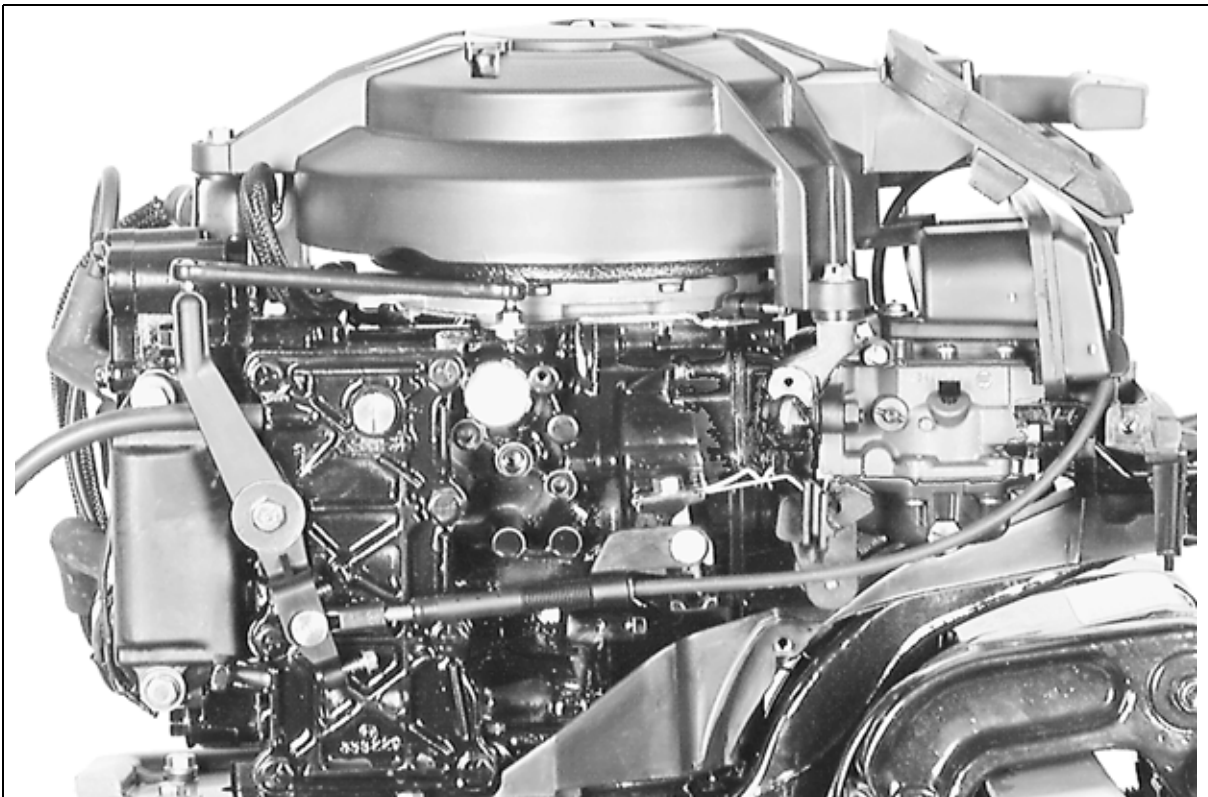

DP0020

POWERHEAD
POWERHEAD VIEWS

Rear View, Manual Start

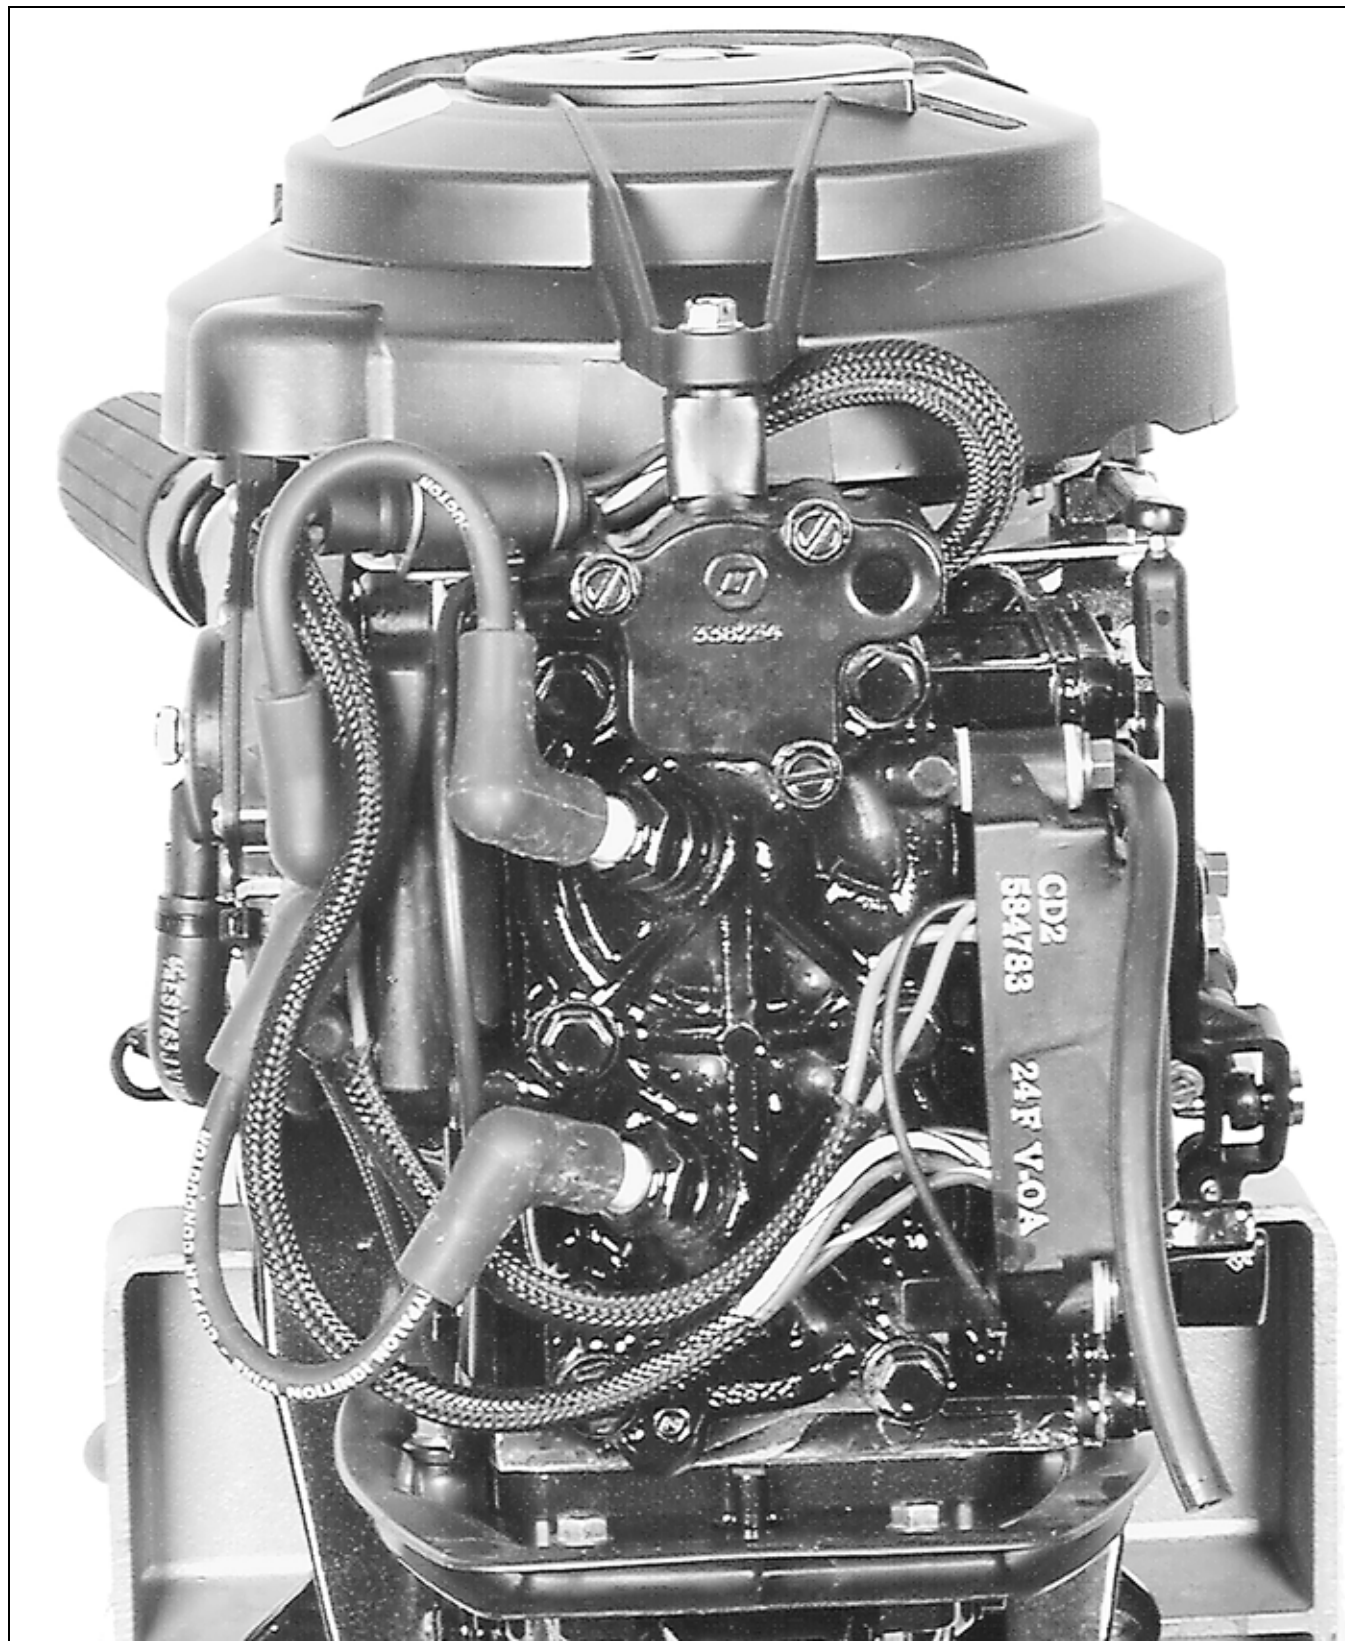

DP0021

MIDSECTION

TABLE OF CONTENTS

TORQUE CHART	148
STEERING HANDLE	149
REMOVAL	149
DISASSEMBLY	150
INSPECTION	151
ASSEMBLY	151
INSTALLATION	153
EXHAUST HOUSING	155
DISASSEMBLY	155
CLEANING AND INSPECTION	156
ASSEMBLY	157
SWIVEL BRACKET	159
DISASSEMBLY	159
ASSEMBLY	160
ADJUSTMENTS	162
TILT FRICTION ADJUSTMENT	162
STEERING FRICTION ADJUSTMENT	162
IDLE SPEED ADJUSTMENT	162
THROTTLE FRICTION ADJUSTMENT	162

MIDSECTION
TORQUE CHART

TORQUE CHART

Description	9.9/15	Lubricant
Upper Mount to Exhaust Housing	60 to 84 in. lbs. (7 to 9 N·m)	<i>Nut Lock</i>
Upper Side Mount to Exhaust Housing		<i>Nut Lock</i>
Upper Mount to Steering Bracket	18 to 20 ft. lbs. (24 to 27 N·m)	<i>Nut Lock</i>
Lower Mount to Exhaust Housing		<i>Nut Lock</i>
Lower Mount Bracket Screws	60 to 84 in. lbs. (7 to 9 N·m)	<i>Nut Lock</i>
Steering Bracket to Pivot Shaft Screws	18 to 20 ft. lbs. (24 to 27 N·m)	<i>Screw Lock</i>
Lower Side Mount Nuts		<i>Gasket Sealing Compound</i>
Upper Side Mount Nuts		<i>Gasket Sealing Compound</i>
Tilt Bolt Nut	60 to 84 in. lbs. (7 to 9 N·m)	
Tilt Tube Nut *	50 to 54 ft. lbs. (68 to 73 N·m)	
Idle Relief Muffler Screws	48 to 60 in. lbs. (5 to 7 N·m)	<i>Nut Lock</i>

* Back off nut 1/4 turn after torquing.

IMPORTANT: For fasteners not listed, refer to **STANDARD TORQUE SPECIFICATIONS** on p. 20.

STEERING HANDLE

Removal



WARNING




To prevent accidental starting while servicing, twist and remove all spark plug leads.

Remove the lower motor covers, manual starter, and air silencer.


Remove the throttle cable pin from the throttle lever.

Remove the shoulder screw and washer retaining the throttle cable anchor to the powerhead. Remove the cable end connector and throttle cable anchor from the cable.

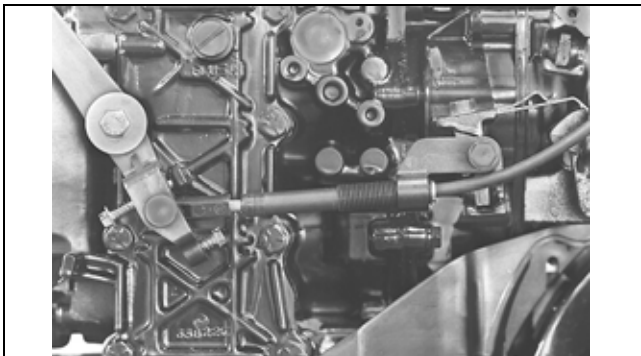

35281

Remove the stop button ground lead from the ignition coil.

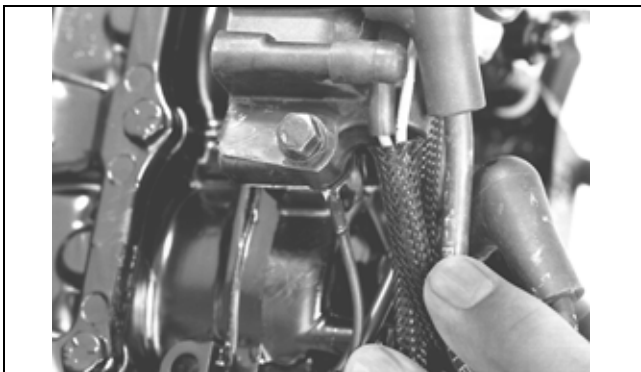

35282


Cut tie strap and separate the 5-pin *Amphenol* connector. Remove the stop button black wire

from the plug using Socket Removal Tool, P/N 322699.




35283

Remove the steering handle screw, nut and sleeve. Lift the handle from the steering bracket.

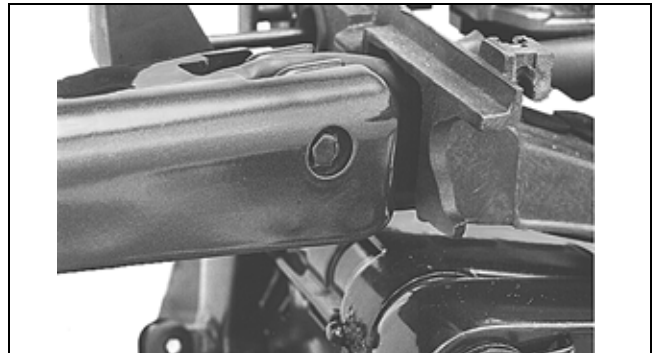

32282

Pull the throttle cable and stop button leads through the grommet in the lower motor cover. Use isopropyl alcohol on the sleeve to ease removal.

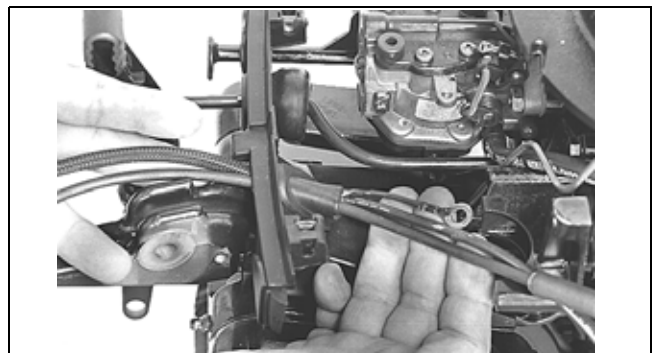


35285

MIDSECTION

STEERING HANDLE

Disassembly


Using *Twist-Grip Remover*, P/N 390767, depress the grip detents. Tighten screw and remove the grip by pulling grip and turning the idle adjustment knob clockwise.

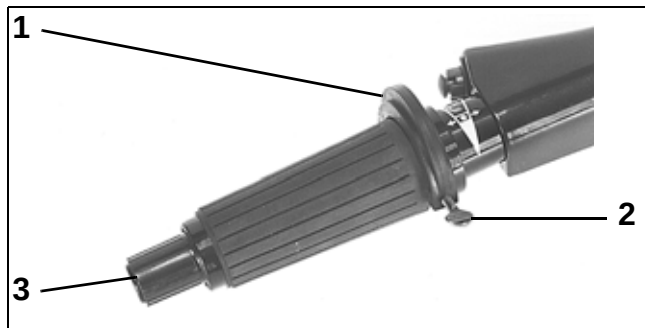

1. *Twist-Grip Remover*
2. *Screw*
3. *Idle adjustment knob*

32290


Remove the helix halves, rollers, and guides.

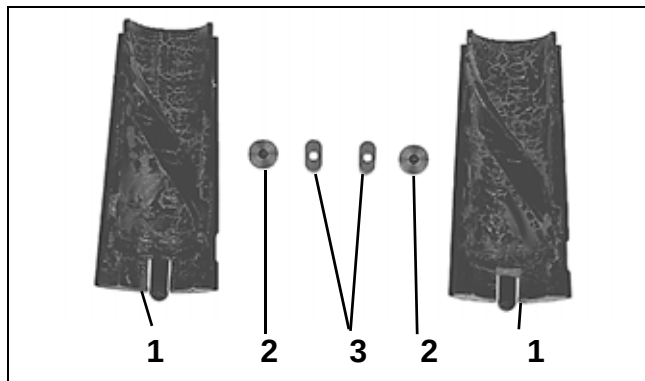

1. *Helix halves*
2. *Rollers*
3. *Guides*

COA2674

Pull the throttle pin out of the cable.

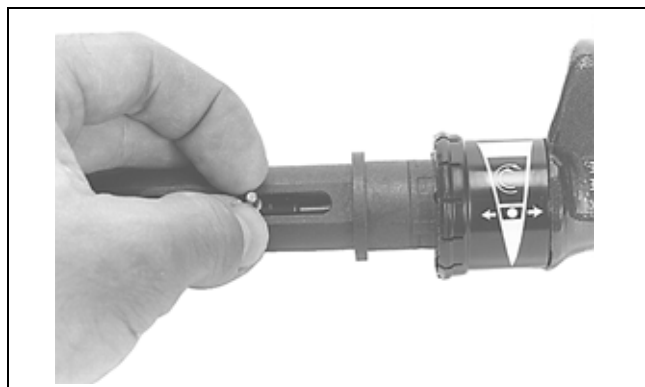

24294

Remove throttle end cap from inner handle.



24298

Remove stop switch cover screws and cover/stop switch assembly.



9.9/15 Model


32292



25/30 Model

24288


Remove the throttle control plate.

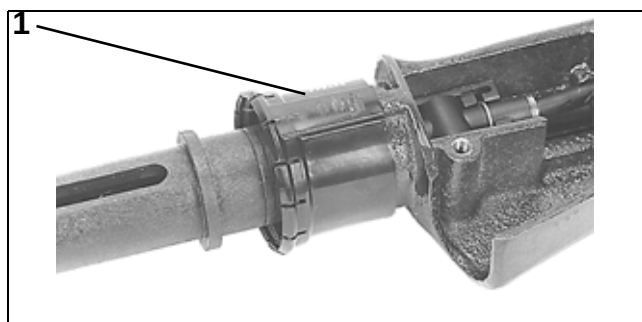

TYPICAL
1. *Throttle control plate*

24287

Remove throttle cable from the steering handle.

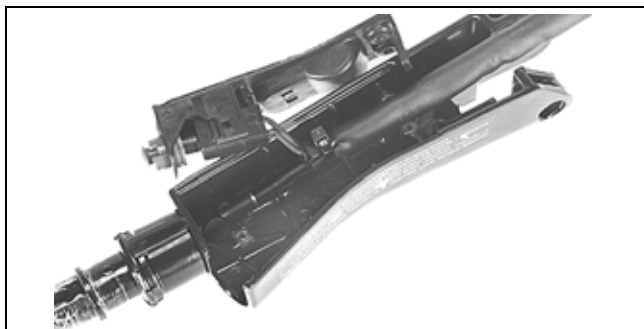

32293

Remove stop switch assembly with throttle cable from cover.



32294

Remove throttle cable seal from the inner handle.

Inspection

Inspect the throttle cable for kinks and wear. Replace if necessary.

Inspect the steering handle components for wear, cracks, or damage. Replace parts if necessary.

Refer to **Stop Circuit Tests** on p. 89 to test stop switch.

Assembly


Install the throttle cable seal in inner handle.

Snap the stop switch assembly with the throttle cable into the cover. Be sure the protective sleeve covers the stop switch wires and throttle cable.




32295

Place the throttle cable into the inner handle and align the cover with the handle. Install the throttle control plate on outer handle.

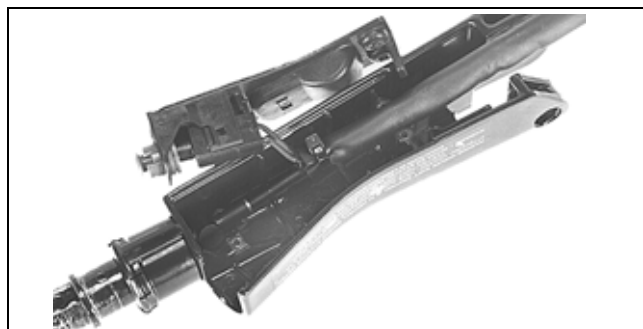

32293

Install the throttle control plate on outer handle.

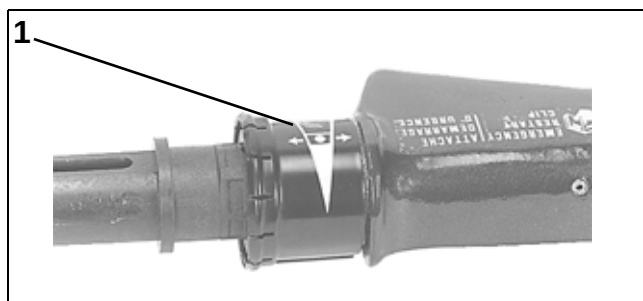

TYPICAL
1. Throttle control plate

24295

MIDSECTION


STEERING HANDLE

Place the throttle end cap into inner handle. The tab on the cap goes into the recess of the inner handle.




24298

Push the throttle cable pin through the end of the throttle cable.

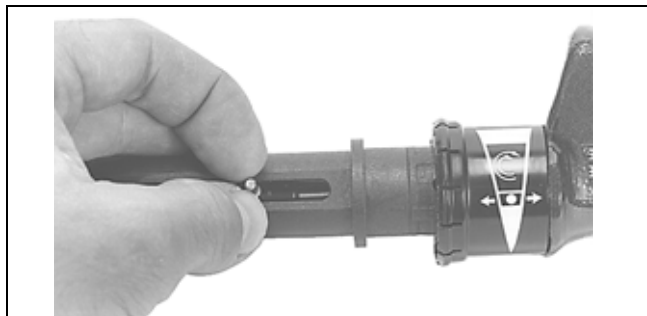


24294

Lubricate end of the pin, guides, rollers, helix grooves, and inner handle guide slot with *Moly Lube*. Place the guides over the roller pin and into the slots of the inner handle. Place the rollers on the ends of the roller pin. Assemble helix halves on the handle and slide the grip over the helix.

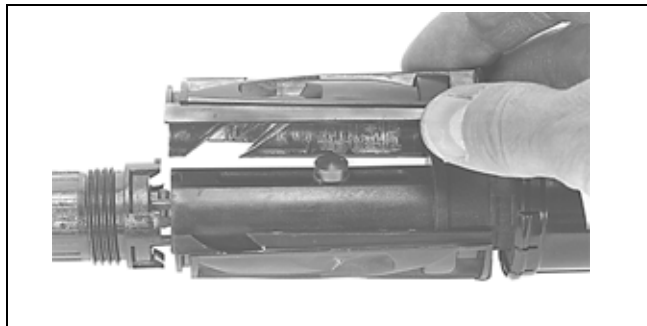

24293

Be sure the twist-grip's speed indicator line is positioned with the speed range symbol on the handle. Snap the grip into place. Turn the idle speed adjustment knob counterclockwise to the minimum slow speed position.

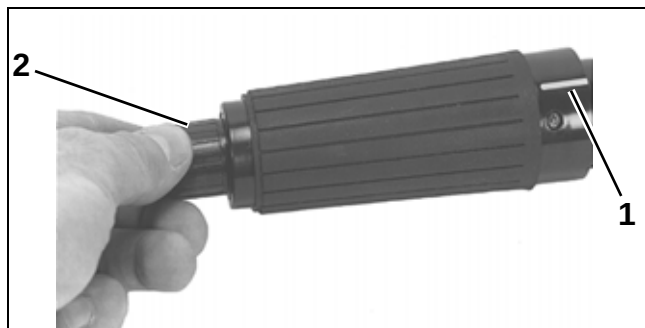

1. Indicator line
2. Idle speed adjustment knob

24292

Install stop switch cover onto handle.



32292


Installation

Insert the throttle cable and stop switch wires through the lower motor cover grommet. Use isopropyl alcohol to ease assembly.

IMPORTANT: Make sure the protective sleeves are on the throttle cable and stop switch wires. Apply *Triple-Guard* grease to the steering handle sleeve, and place the sleeve into the steering bracket.

Apply *Triple-Guard* grease to the steering handle sleeve. Place the sleeve into the steering bracket. Attach the steering handle to the steering bracket.

Tighten the screw and nut so the steering handle can pivot and maintain any position.

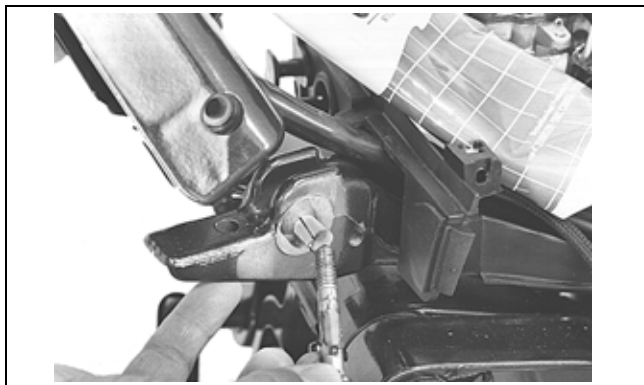

35286

Tighten the nut so the steering handle can be pivoted and maintain any position.




WARNING




Replace the steering handle locknut if it has lost its locking action.

Secure the stop button ground lead behind the ignition coil on the lower screw, with starwasher next to block.

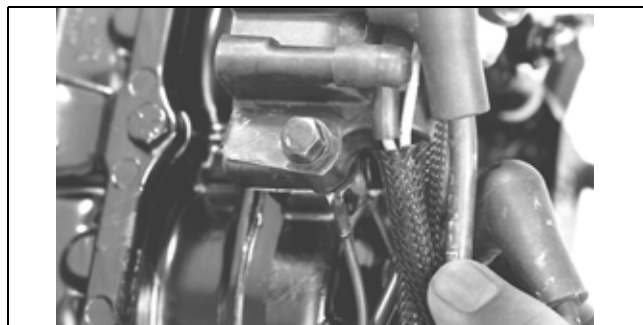


35282

Use Pin Insert Tool, P/N 322697, to install the stop button black wire into the 5-pin *Amphenol* plug.

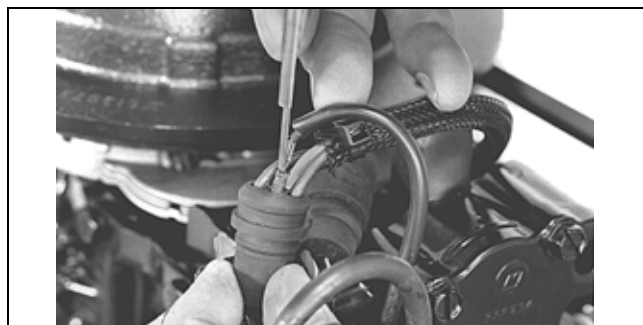

35279

Connect the *Amphenol* connector. Secure the connector to the ignition coil post with a tie strap.

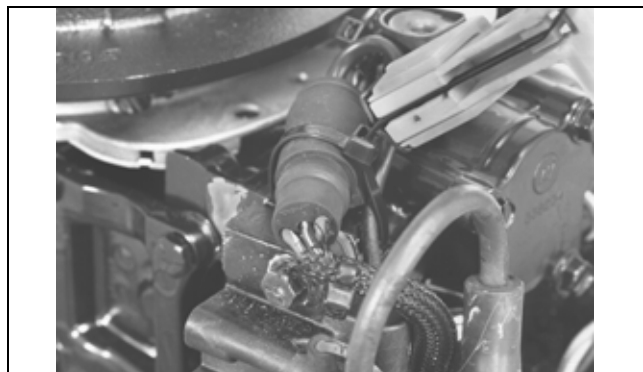


35289

MIDSECTION

STEERING HANDLE


Thread the throttle cable anchor onto the cable housing until anchor is flush with end of threads. Thread the cable end connector on the cable until seated.

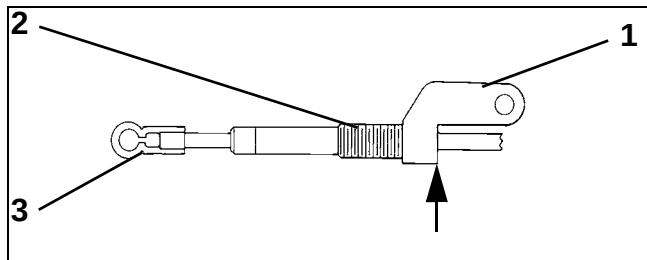

- 1. Throttle cable anchor
- 2. Threads
- 3. Cable end


DR4947

Position the throttle cable connector into throttle lever and insert pin. Position throttle cable anchor on powerhead and secure with shoulder screw and washer.

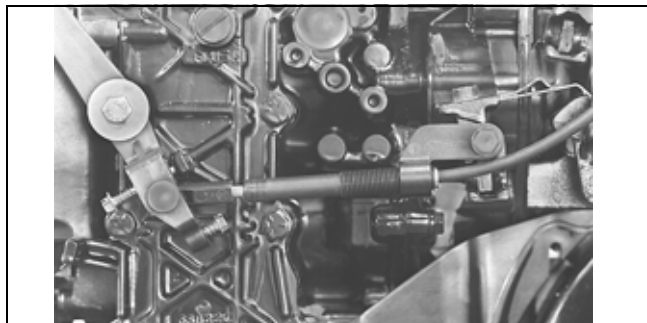

35281

Hook cable retainer around throttle cable and install air silencer.

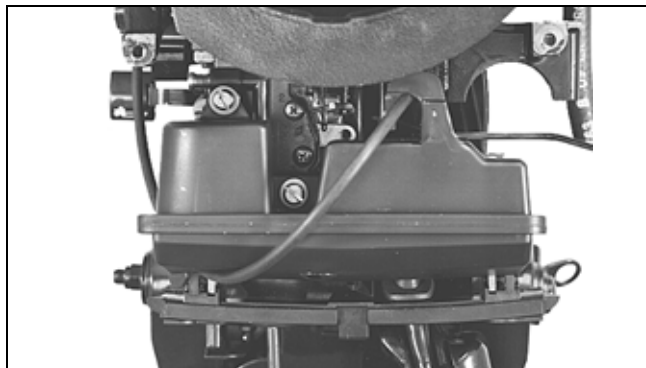

35300

Install manual starter and lower motor covers.

To adjust the throttle cable, refer to **SYNCHRONIZATION AND LINKAGE ADJUSTMENTS** on p. 59.


EXHAUST HOUSING

Disassembly

Remove the following:


- Powerhead; refer to Powerhead **REMOVAL** on p. 128.
- Gearcase; refer to Gearcase **REMOVAL AND INSTALLATION** on p. 167.

.Remove the exhaust housing baffle.

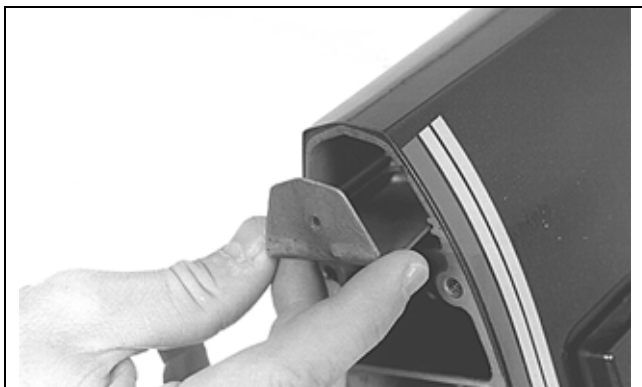

32419

Remove the cotter pin. Remove the shift arm pin to disengage the shift rod from the shift arm, and remove the rod.

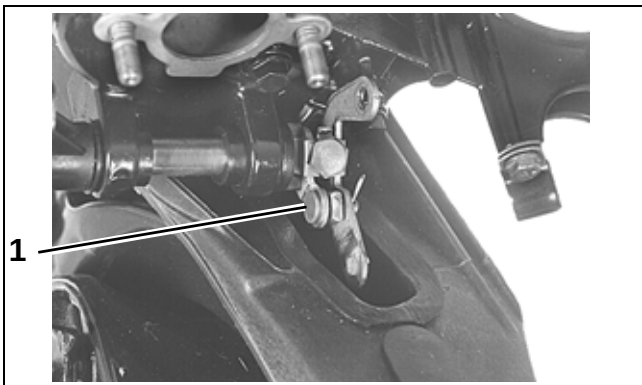

1. Shift arm pin


32341

Remove the five screws and lift the lower engine cover support off the exhaust housing.



32305


Remove the two lower mount bracket screws. Remove the port and starboard lower mount brackets with two lateral mounts.

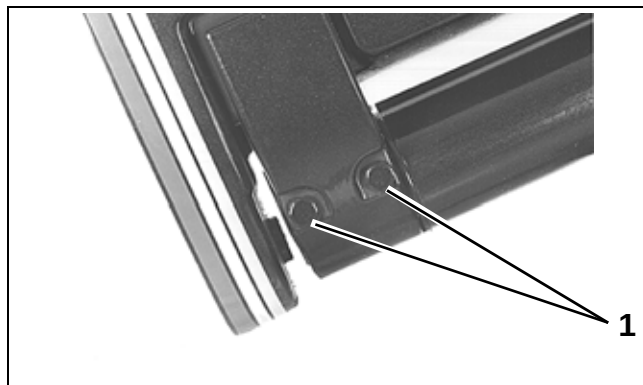

1. Bracket screws

32469

Remove the two idle relief muffler screws. Remove the muffler and discard gasket.

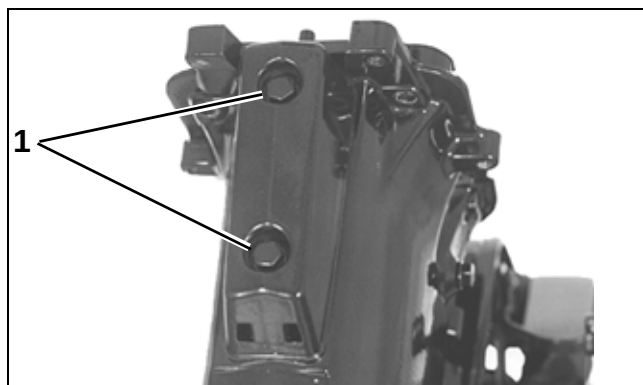


1. Idle relief muffler screws

32468

MIDSECTION

EXHAUST HOUSING


Remove the two upper mount to steering bracket screw caps and discard O-rings. Remove the two upper mount screws. Separate the exhaust housing from the swivel bracket assembly.

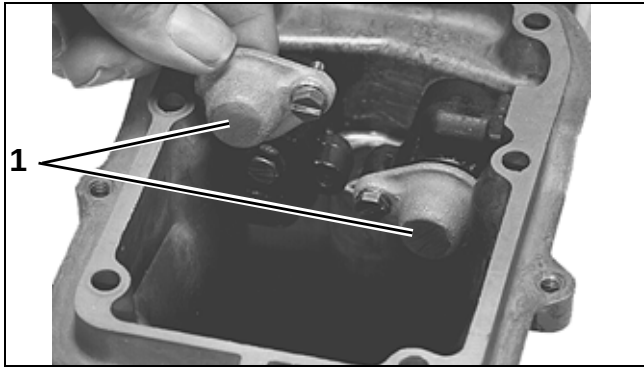

1. Screw caps

33356


Remove the upper thrust mount and plate from the swivel bracket assembly.

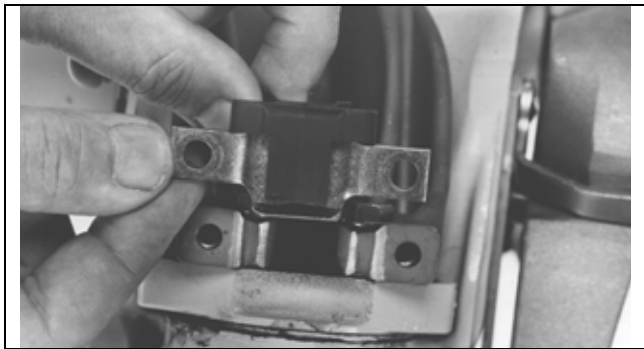

33355

Remove the four screws (two port and two star-board) retaining the two upper mounts to the exhaust housing. Remove the two upper mounts.

Remove the lower thrust mount and shift rod grommet.

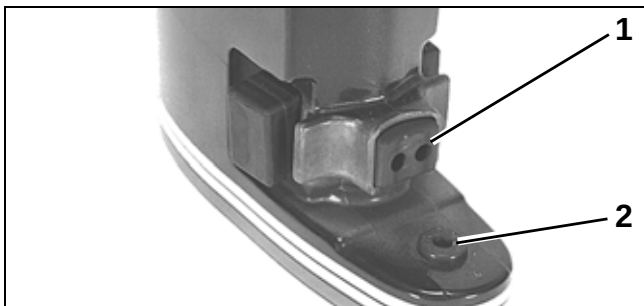

1. Lower thrust mount
2. Shift rod grommet

32470

Cleaning and Inspection

Clean all parts with parts cleaning solvent and dry with compressed air. All nut and screw threads coated with *Screw Lock* or *Nut Lock* must be thoroughly cleaned before reassembly. When using a thread locking product, be sure to prime the threads with *Locquic Primer*.

Examine the rubber motor mounts and replace if deteriorated or damaged.

Inspect water tube for obstructions or kinks which may restrict water flow.

Inspect shift components for wear. Replace if deteriorated or damaged.

Clamp Screw


Inspect clamp screw assembly(s). Replace swivel plate and retainer if bent or loose. To install a new swivel plate, remove screw and old plate. Apply *Locquic Primer* to the threads of the screw and allow it to dry four to five minutes. Then apply *Ultra Lock* to threads. Install a new swivel plate with screw and tighten securely.

Exhaust Housing

Before checking the exhaust housing for distortion, thoroughly clean the top and bottom mating surfaces and remove all sealer and corrosion.

Check the exhaust housing for distortion. Place the housing on a surface plate. Using a dial indicator, check flatness by measuring the run-out on the top edge of housing. The maximum allowable run-out is 0.009 in. (0.228 mm). If you do not have access to a dial indicator and surface plate, seek the services of a machine shop. DO NOT attempt to straighten a distorted housing; replace it.

IMPORTANT: A distorted exhaust housing will cause the upper driveshaft splines to wear excessively and will damage the crankshaft splines.

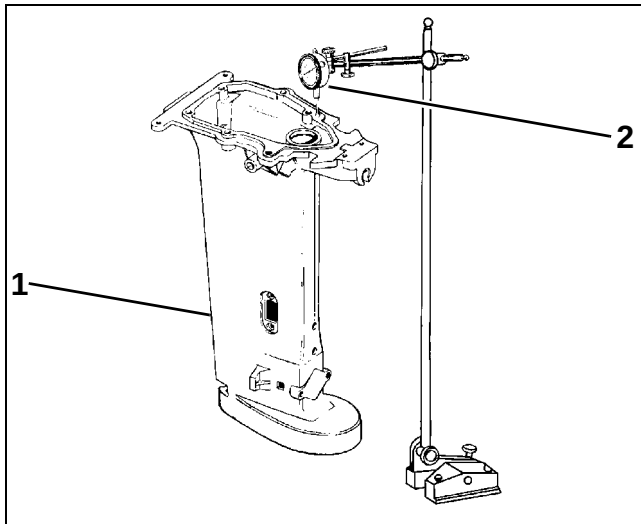


1. Exhaust housing
2. Dial indicator

DRC2351

Assembly

Install the lower thrust mount and shift rod grommet.

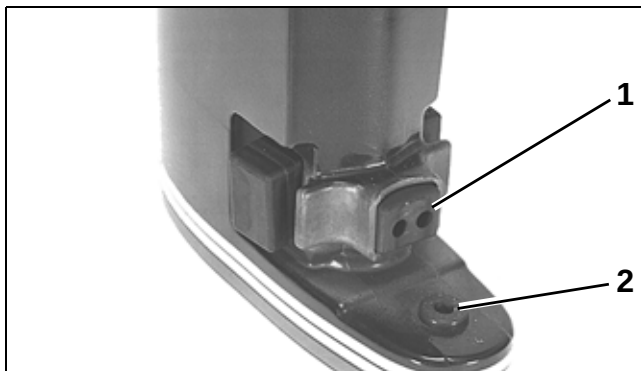

1. Lower thrust mount
2. Shift rod grommet

32470


Apply *GE RTV* adhesive and install the two upper mounts. Apply *Nut Lock* to the four upper mount

retaining screws and torque to 60 to 84 in. lbs. (7 to 9 N·m).




33363

Place the upper thrust mount and plate in position on the swivel bracket assembly.

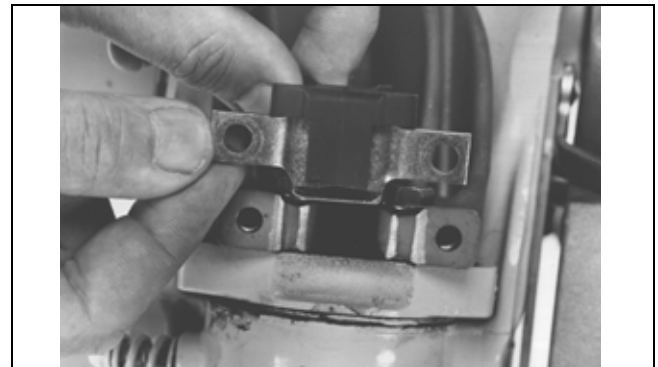

33355

Clean all sealant from the threads on the two upper mount to steering bracket screws. Apply *Nut Lock* to threads of screws. Position the swivel bracket assembly on the exhaust housing. Install the two upper mount screws and tighten to a torque of 18 to 20 ft. lbs. (24 to 27 N·m). Install caps with new O-rings and torque screws to 60 to 84 in. lbs. (7 to 9 N·m).

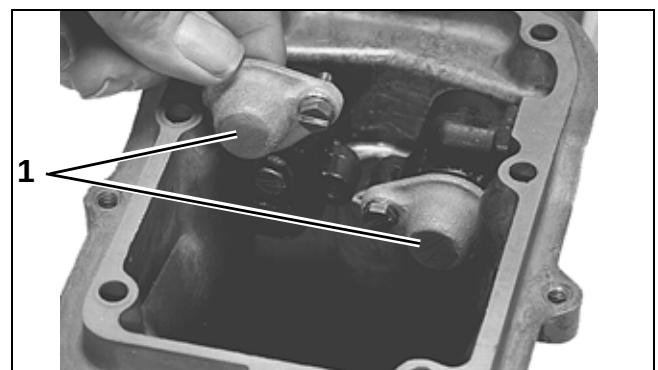


1. Screw caps

33356

MIDSECTION

EXHAUST HOUSING


Place the lateral mounts in the lower mount brackets. Apply *Nut Lock* to threads of lower mount bracket screws. Install the lower mount brackets. Tighten screws to a torque of 60 to 84 in. lbs. (7 to 9 N·m).

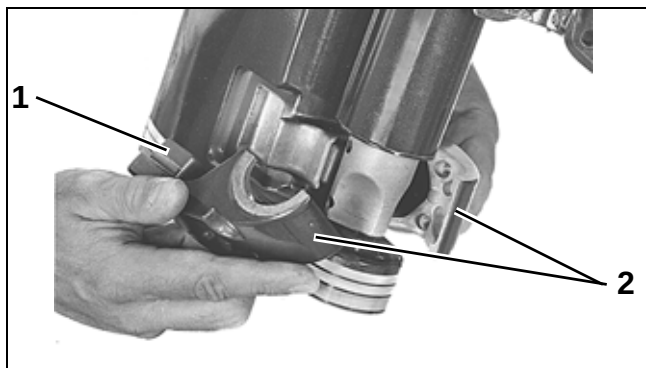

1. Lateral mount
2. Lower mount brackets

32465

Position a new idle relief muffler gasket. Install the muffler to the exhaust housing. Apply *Nut Lock* to the muffler's retaining screw threads. Tighten the screws to a torque of 48 to 60 in. lbs. (5 to 7 N·m).

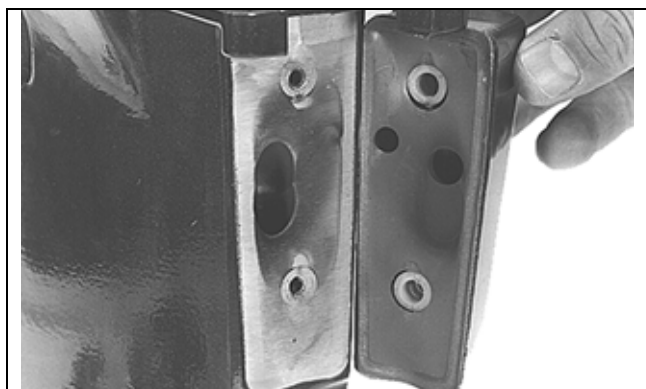


32464

Position the lower engine cover support on the exhaust housing and torque the five screws to 60 to 84 in. lbs. (7 to 9 N·m).



32305


Lubricate the upper shift rod with *Triple-Guard* grease. Install the shift rod into the shift arm with a pin and a **new** cotter pin.

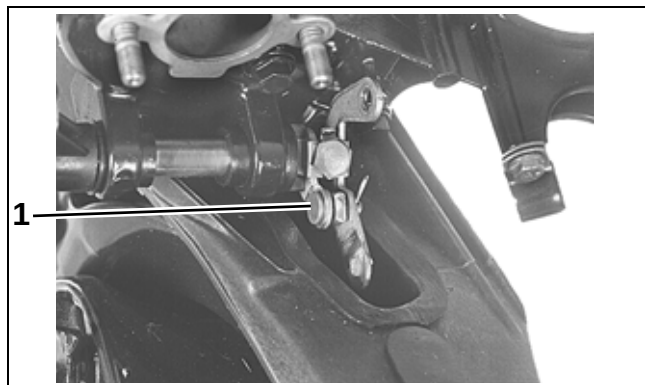

1. Shift arm pin

32341

Place exhaust housing baffle in position.

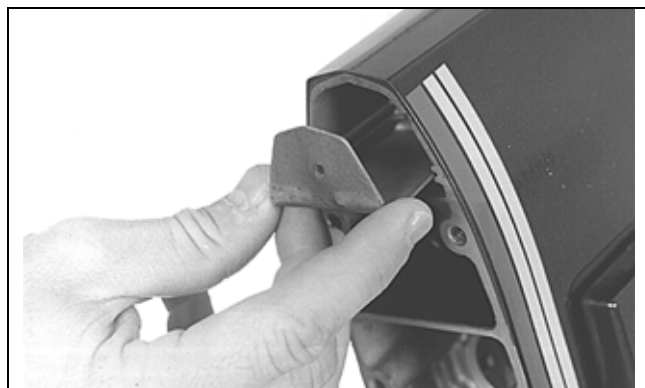

32419


Install the following:

- Gearcase; refer to Gearcase **REMOVAL AND INSTALLATION** on p. 167.
- Powerhead; refer to Powerhead **INSTALLATION** on p. 143.

SWIVEL BRACKET

Disassembly


Loosen the swivel bracket adjustment screw. Lift the steering bracket and pilot shaft from the swivel bracket. Remove the upper thrust washer/seal.

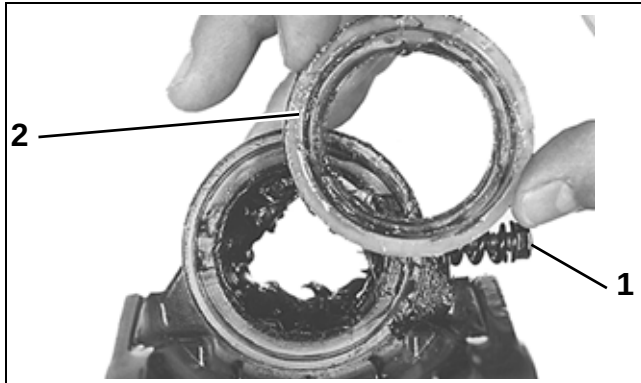

1. Swivel bracket adjustment screw
2. Upper thrust washer

32481


Remove liner and friction block from top of the swivel bracket.

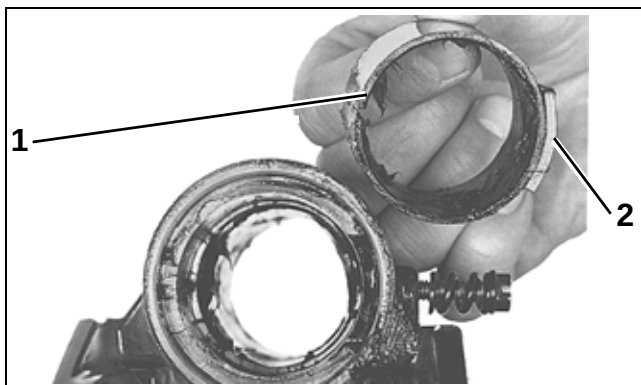

1. Liner
2. Friction block

32480


Remove the thrust washer, O-ring, and bushing from bottom of swivel bracket.

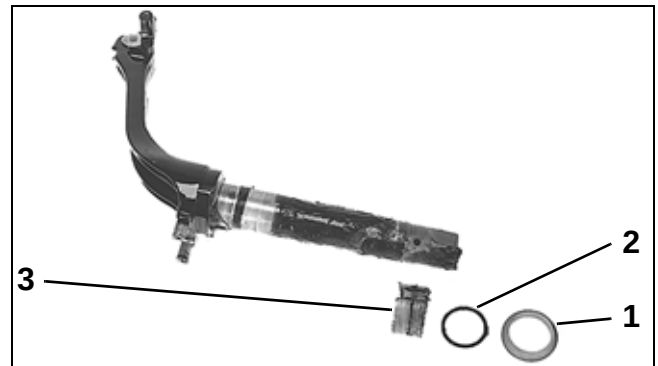

1. Thrust washer
2. O-ring
3. Bushing

32483


If necessary, disassemble the steering bracket from the pilot shaft by removing the three screws.

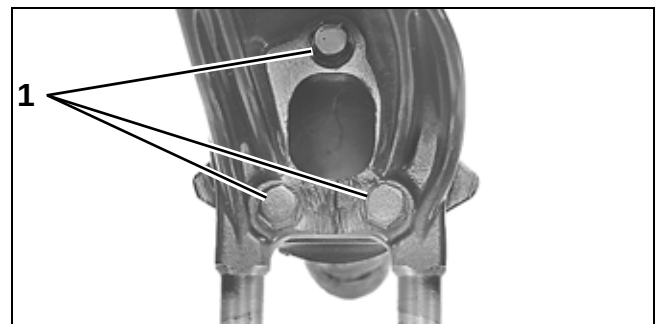

1. Screws

32482

If necessary, service the components of the stern brackets.

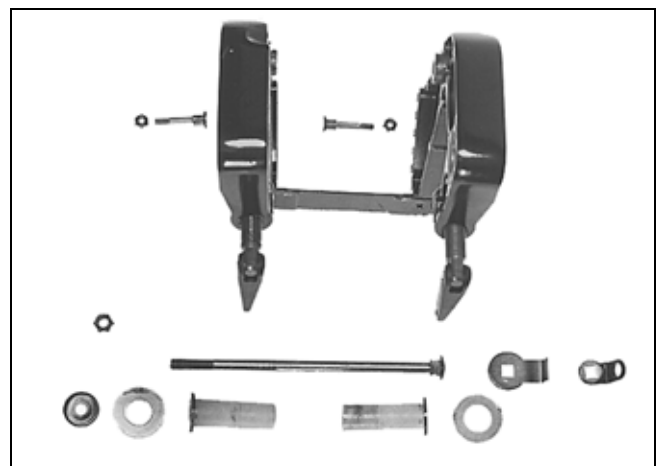

TYPICAL

32471

MIDSECTION

SWIVEL BRACKET



TYPICAL


32478

If the tilt bolt is removed, tighten the bolt to a torque of 60 to 84 in. lbs. (7 to 9 N·m) when assembled.

Assembly


IMPORTANT: Lubricate pilot shaft and bushings with *Triple-Guard* grease.

If any of the swivel bracket components were removed, refer to the two reference pictures for correct reassembly.

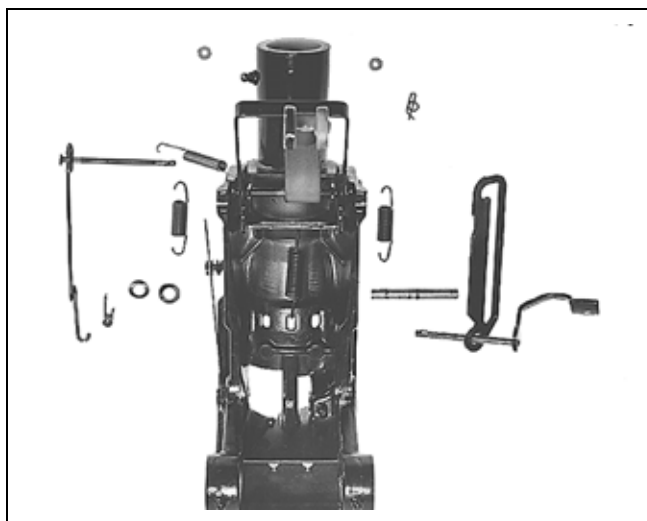

TYPICAL

32473

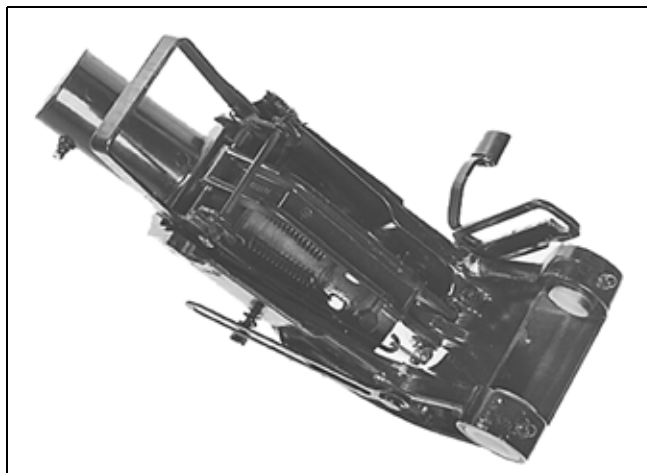


TYPICAL

32472

If removed, install the steering bracket to the pilot shaft with the three screws. Apply *Screw Lock* to


the threads. Torque screws to 18 to 20 ft. lbs. (24 to 27 N·m).

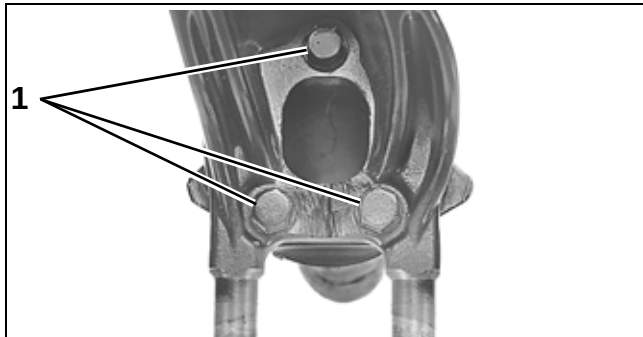

1. Screws


32482

Assemble the friction block and liner. Lubricate and place the liner and friction block in the swivel bracket.

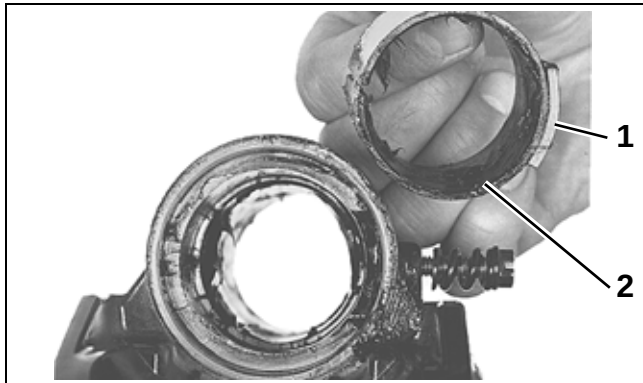

1. Friction block
2. Liner


32480

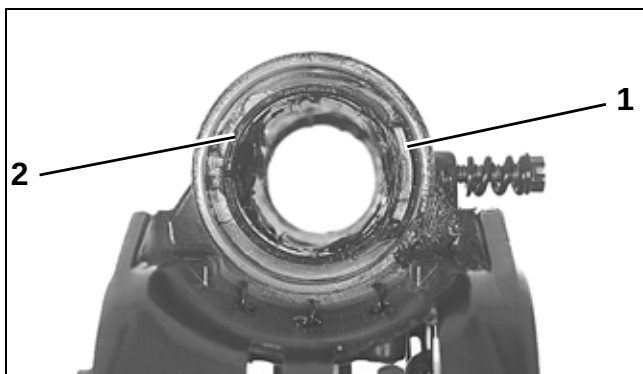

1. Friction block
2. Liner

32479

Install the upper thrust washer on the swivel bracket.

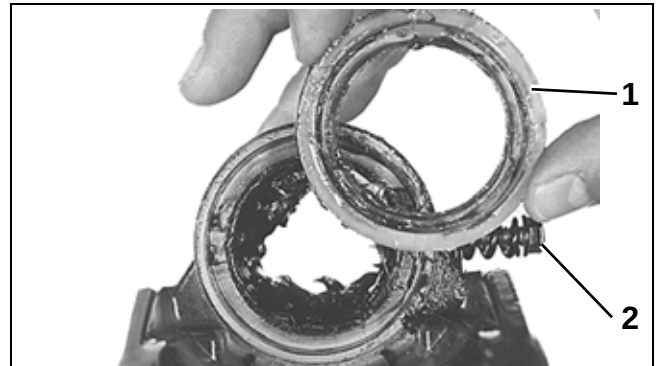

1. Upper thrust washer
1. Friction adjustment screw

32481

Apply *Triple-Guard* grease to the lower bushing. Install the lower bushing, O-ring, and lower thrust washer.



32483

Apply *Triple-Guard* grease to the pivot tube. Install the pivot tube and steering bracket into the swivel bracket. Thread the friction adjustment screw with spring into the swivel bracket to retain the steering bracket.

ADJUSTMENTS

Tilt Friction Adjustment

Use 9/16 in. wrench to tighten the tilt shaft nut only enough to control the return of the gearcase from TILT to RUN position.



32925

Steering Friction Adjustment

Adjust steering friction with outboard mounted to boat by loosening or tightening screw with screwdriver. Steering friction should be adjusted so that a slight drag is felt when turning. Minimum friction is required when remote steering is used.



WARNING



Do not overtighten. The steering friction screw is not intended to allow "hands off" steering.




TYPICAL

32926

Idle Speed Adjustment

The idle speed adjusting knob is located on the steering handle. Turning the knob clockwise increases idle speed, turning it counterclockwise decreases idle speed. Make certain that throttle is in SLOW position and the outboard is at normal operating temperature before making the idle speed adjustment. Outboard should idle at recommended RPM in gear. Refer to **SYNCHRONIZATION AND LINKAGE ADJUSTMENTS** on p. 59.

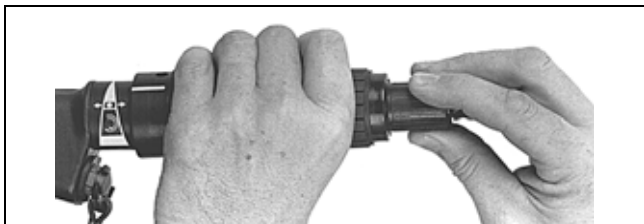

24333

Throttle Friction Adjustment

Some models are equipped with a throttle friction adjustment knob located on the steering handle. Tighten the knob to reduce the effort required to hold a throttle setting.

Turn the knob clockwise to **increase** friction or counterclockwise to **decrease** friction.



WARNING



Tighten knob only enough to hold throttle at a constant engine speed. Overtightening will prevent quick throttle change in case of emergency.




25749

GEARCASE

TABLE OF CONTENTS

SERVICE CHART	164
PROPELLER	165
INSPECTION	165
LUBRICANT	165
DRAINING	165
INSPECTION	166
FILLING	166
LEAK TEST	166
REMOVAL AND INSTALLATION	167
REMOVAL	167
INSTALLATION	168
WATER PUMP	169
DISASSEMBLY	169
INSPECTION	169
ASSEMBLY	169
DISASSEMBLY	171
BEARING AND SEAL REMOVAL	172
DRIVESHAFT SEALS	172
DRIVESHAFT BEARING	172
PINION BEARINGS	173
FORWARD BEARING	173
SHIFT ROD BUSHING AND O-RING	173
PROP SHAFT BEARING HOUSING SEALS AND O-RING	174
PROP SHAFT BEARING HOUSING BEARINGS	174
CLEANING AND INSPECTION	175
SEAL AND BEARING INSTALLATION	176
PROPELLER SHAFT BEARING HOUSING BEARINGS	176
PROPELLER SHAFT BEARING HOUSING SEALS AND O-RING	176
SHIFT ROD BUSHING AND O-RING	176
FORWARD BEARING	177
PINION BEARINGS	177
DRIVESHAFT BEARING	178
DRIVESHAFT SEALS	178
ASSEMBLY	179
NOTES	182

SERVICE CHART

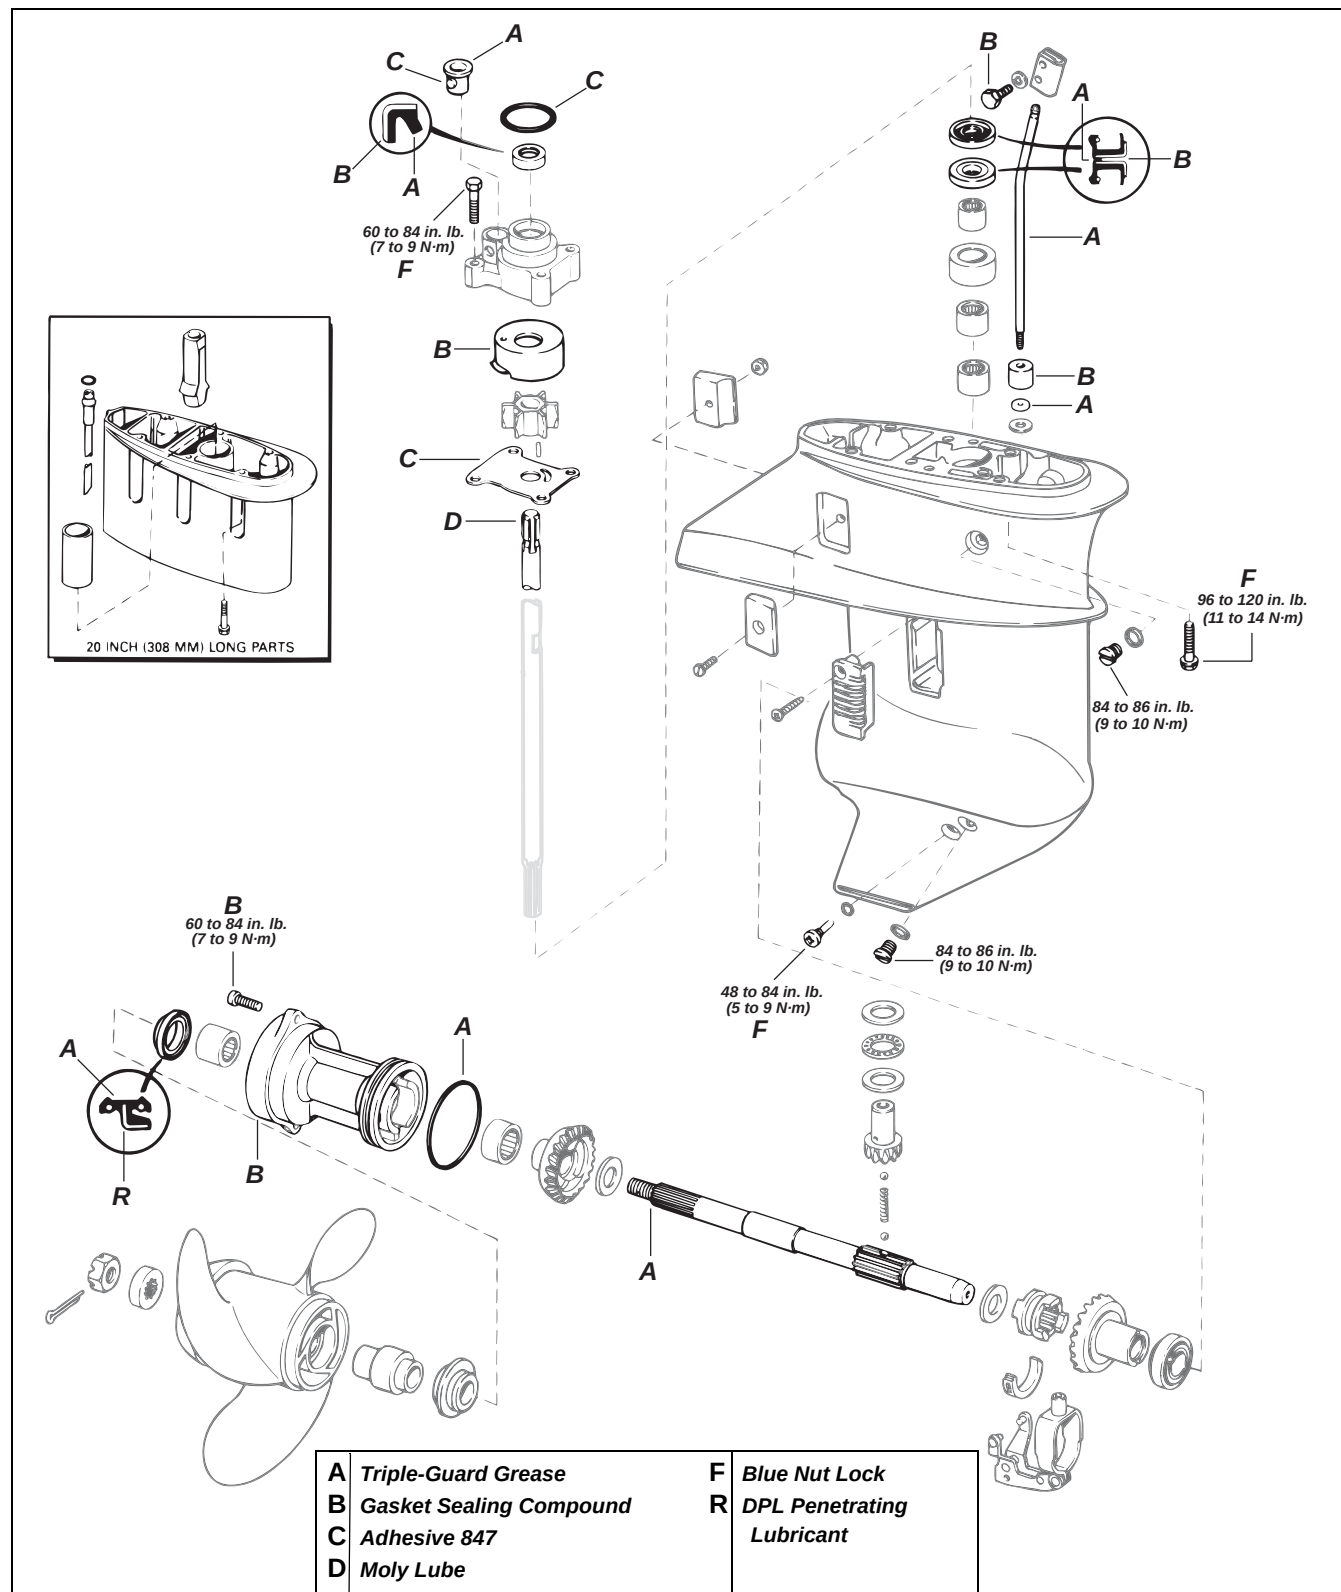

PROPELLER

Inspection

- Damaged blades and signs of propeller cavitation (burned paint, etc.)
- Spun or overheated inner hub
- Worn or twisted splines and inadequate lubricant
- Damaged or missing converging ring (if applicable)
- Damage to outer hub area
- Worn, missing, or incorrect thrust washer and spacer
- Correct size
- Check for bent or damaged propeller shaft and twisted splines

Refer to **Propeller Hardware Installation** on p. 47.



WARNING



When servicing the propeller, always shift the outboard to **NEUTRAL**, turn the key switch **OFF**, and disconnect the battery positive (+) cable so the outboard cannot be started accidentally.

LUBRICANT

Draining




WARNING



Gearcase lubricant may be under pressure and/or hot. If plug is removed from a recently operated outboard, take precautions to avoid injury.

Remove the lubricant level plug, then the lubricant drain/fill plug, and drain the lube from the gearcase into a container. Inspect the lubricant for metal chips.

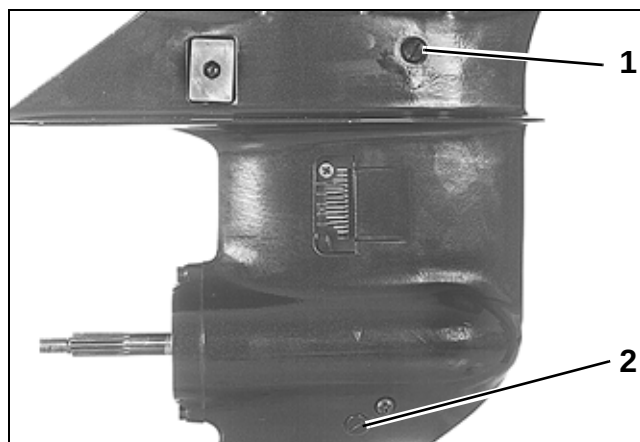

TYPICAL

1. Lubricant level plug
2. Lubricant drain/fill plug

32396

The presence of metal **fuzz** can indicate normal wear of the gears, bearings, or shafts within the gearcase. Metal **chips** can indicate extensive internal damage.

GEARCASE LEAK TEST

Inspection

Inspect the lubricant for water contamination. Water can make the lubricant milky in appearance. However, normal aeration can also cause the same appearance.

To check for water contamination, drain lubricant into a suitable glass container. Allow the drained oil to settle for a minimum of one hour to determine if there is an abnormal amount of water in the oil. Some gearcase lubricants are designed to mix with a small amount of water from normal water vapor condensation within the gearcase.

Refer to **LEAK TEST**.

Overheated lubricant will have a black color and burned odor.


Internal gearcase inspection is recommended when lubricant is contaminated or shows signs of failure.

Filling

Secure the gearcase in a vertical position.

Remove the lubricant level plug and the lubricant drain/fill plug.

Slowly fill the gearcase with *HPF XR* gearcase lube through the drain/fill hole until it appears at the oil level hole. Filling the gearcase too quickly can cause air pockets and the gearcase may not fill completely. Clean plug seal area and install the lubricant level plug and **new** seal, then the lubricant drain/fill plug and **new** seal. Tighten them to a torque of 60 to 84 in. lbs. (7 to 9.5 N·m).

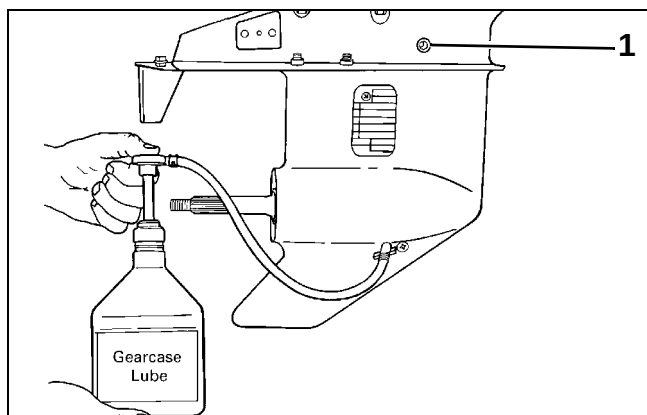

TYPICAL
1. Oil level hole

DR33673

LEAK TEST

Drain lubricant before testing.

STEP 1

Install lubricant drain/fill plug and seal, thread pressure test gauge fitting and seal in lubricant level fill hole.

Pressurize 3 to 6 psi (21 to 42 kPa).

If pressure gauge indicates leakage, submerge the gearcase in water to determine source of leak.

If the gearcase pressure gauge does not indicate leakage, increase pressure to 16 to 18 psi (110 to 124 kPa). Check for leakage.

Make necessary repairs and repeat test.

STEP 2

Complete successful **STEP 1** before proceeding.

Install vacuum test gauge. Apply 3 to 5 in. of vacuum (76 to 127 mm) Hg. with pump.

Check for leakage.

If leakage occurs, apply oil around suspected seal. If leak then stops or oil is drawn in, that seal is defective.

Repeat test. Gearcase must hold minimum of 15 in. Hg. (kPa).



32569

REMOVAL AND INSTALLATION

Removal




WARNING



During service, the outboard may drop unexpectedly. Avoid personal injury; always support the outboard's weight with a suitable hoist or the tilt support bracket during service.

Remove the propeller from the gearcase. Inspect the condition of the propeller hub.

Drain the gearcase by first removing the oil level plug, then the oil fill/drain plug.

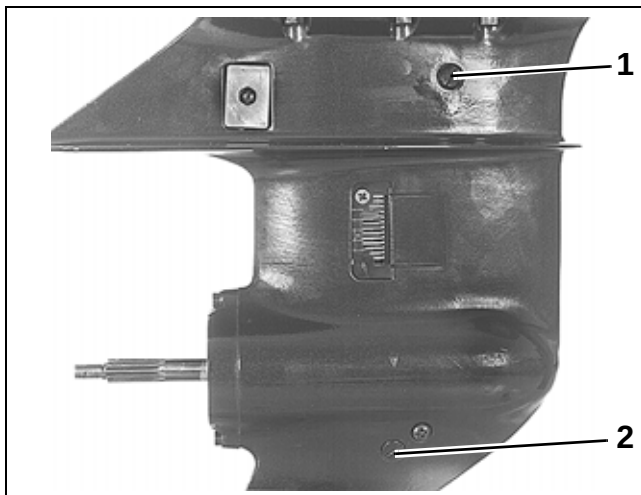

TYPICAL

1. Oil level plug
2. Oil fill/drain plug

COA3264
32396


Remove six screws attaching gearcase to exhaust housing.



1. Screws

32397

Separate gearcase and exhaust housing to expose the shift rod connector. Remove the upper connector screw.

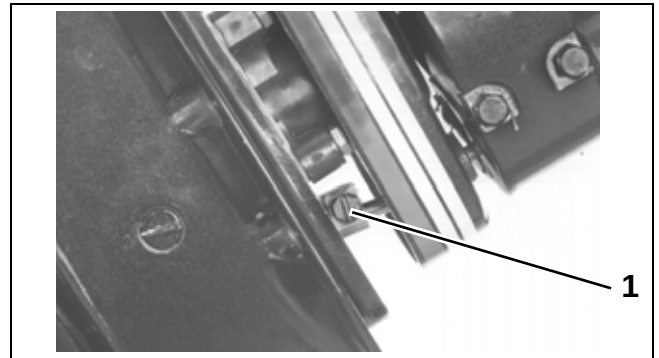

1. Upper screw, shift rod connector

32566

Remove gearcase from the exhaust housing and place in a suitable holding fixture.

GEARCASE REMOVAL AND INSTALLATION

Installation

IMPORTANT: On models with a gearcase extension kit, make sure the driveshaft tube extension, water tube extension, and gearcase exhaust seals are in place.

Coat the driveshaft splines with *Moly Lube*. DO NOT coat top surface of the driveshaft because lubricant may prevent seating of the driveshaft in the crankshaft.



1. Driveshaft splines

32568

Pull up on the shift rod and engage REVERSE gear. Move the shift lever on the outboard to REVERSE position.


Lightly apply *Triple-Guard* grease to lower outside diameter of the water tube.

Install the gearcase onto the exhaust housing. Guide the water tube into the water tube grommet and see that the driveshaft engages the crankshaft. Rotate the flywheel, if necessary.

Make sure the upper shift rod enters the shift rod connector.

Align the groove in the lower shift rod with the screw hole in the connector. Apply *Gasket Sealing Compound* to shift rod connector screw. Install

and tighten the screw with washer to a torque of 60 to 84 in. lbs. (7 to 9 N·m).

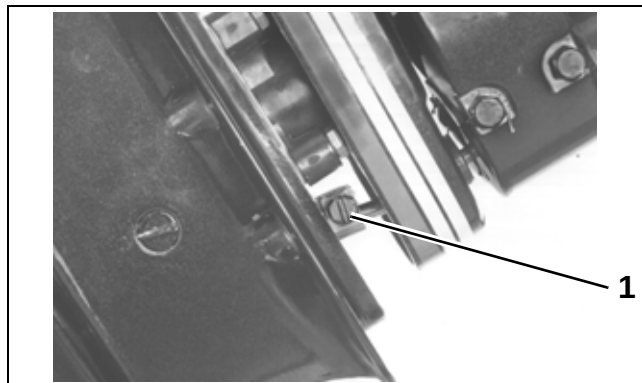


1. Screws

32566

Apply *Nut Lock* to the threads of the gearcase (and extension) retaining screws. Install and tighten the screws to a torque of 96 to 120 in. lbs. (11 to 14 N·m).

IMPORTANT: When installing a gearcase to a gearcase extension, do not tighten the retaining screws until the gearcase and the extension have been placed in proper position with the exhaust housing and powerhead assembly.

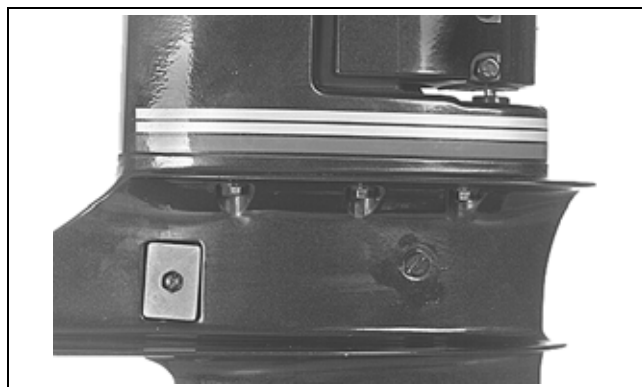

32397


Install propeller and check proper shift control operation. Refer to **Propeller Hardware Installation** on p. 47.

WATER PUMP

Disassembly

Remove gearcase from exhaust housing as described in **REMOVAL AND INSTALLATION** on p. 167.


Remove the impeller housing screws.

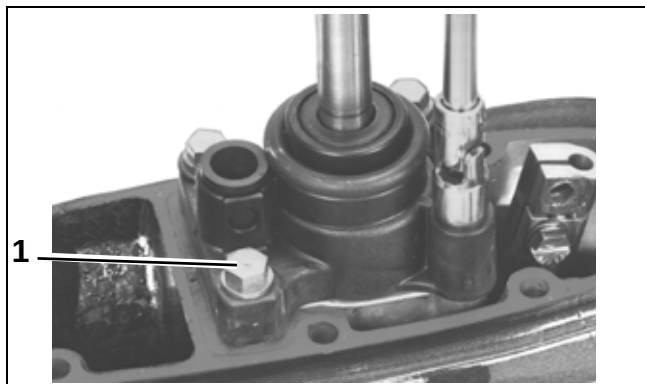

9.9/15 Model
1. Screws, four (4)

16306

Remove the impeller housing and impeller by sliding them up and off the driveshaft. Then remove the impeller drive pin and impeller plate.

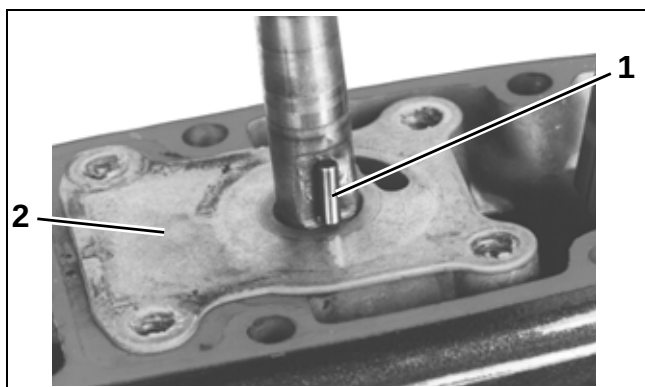

1. Drive pin
2. Impeller plate

16307


Remove and discard the water tube grommet, O-ring, and seal in the impeller housing.

Inspection

Check impeller for overheating, hub separation and visible signs of wear or damage. Check impeller cup and plate for scoring, distortion, and impeller material transfer. Inspect housing for cracks or melting.

Assembly


Apply *Gasket Sealing Compound* to the metal casing of a new driveshaft seal. Install the seal in the impeller housing with lip of seal facing into the housing.

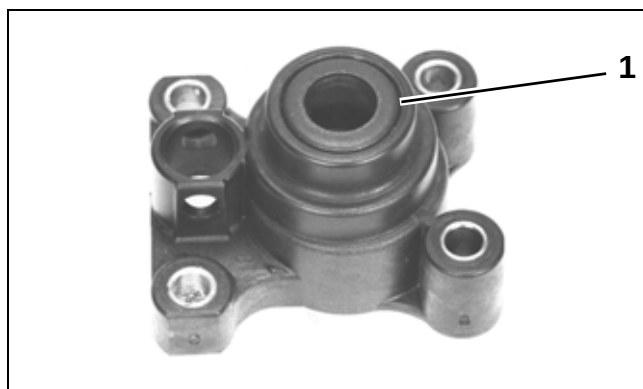

1. Seal

16312

Apply *Adhesive 847* to the impeller housing O-ring and install it on the housing.

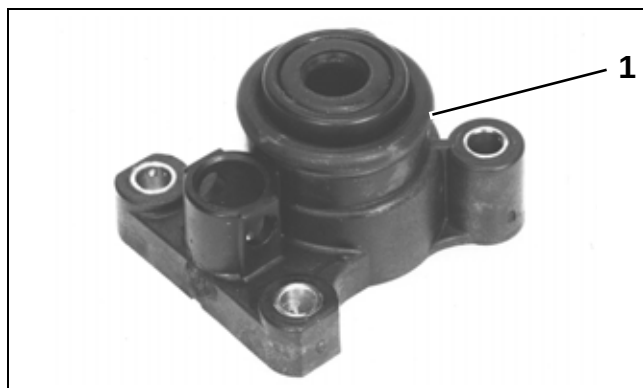


1. O-ring

16315

Apply *Adhesive 847* to outside surface of the water tube grommet. Install the grommet in the impeller housing with bosses of grommet seated

GEARCASE WATER PUMP


in housing. Coat the inside surface of grommet with *Triple-Guard* grease.

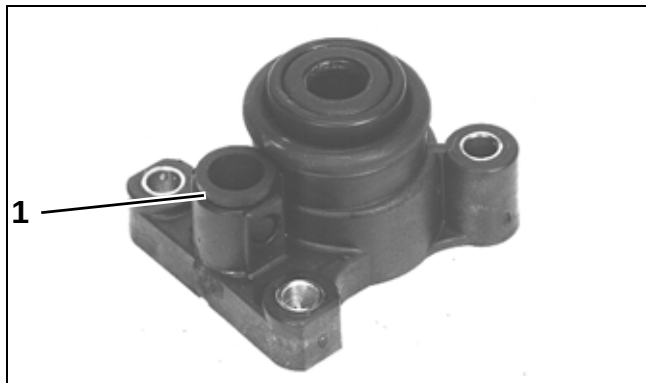

1. Grommet

16308


Lightly coat the exterior of the impeller cup with *Gasket Sealing Compound*. Position the impeller cup in the impeller housing as shown.

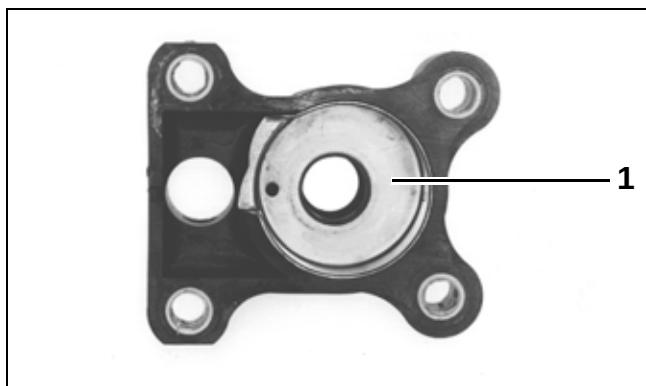

1. Impeller cup

16313

Lightly coat the inside of the impeller cup with oil. With a counterclockwise rotation, install the impeller into the impeller cup.

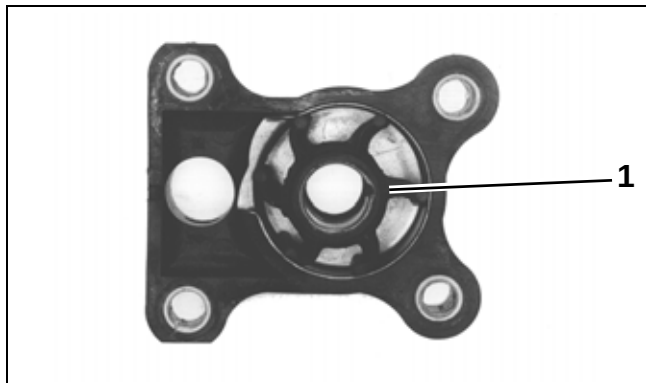

1. Impeller


16314

Apply a thin bead of *Adhesive 847* to the machined surface, on the top of the gearcase that contacts the impeller plate. Slide the plate down over the driveshaft and position it.

Apply *Needle Bearing* grease to the impeller drive pin and position it on the flat of the driveshaft.

Apply a thin bead of *Adhesive 847* to the impeller housing mounting surface.

Slide the impeller housing into position while rotating the driveshaft to engage the impeller with the drive pin. Apply *Nut Lock* to the threads of the four impeller housing screws. Tighten the screws to a torque of 60 to 80 in. lbs. (7 to 9 N·m)

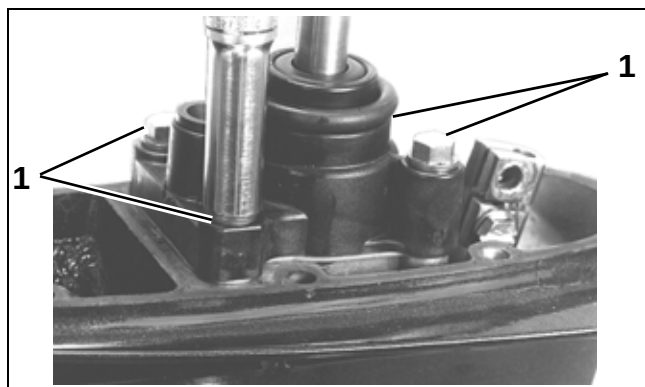


1. Screws

16310

DISASSEMBLY

Remove gearcase. Refer to **REMOVAL AND INSTALLATION** on p. 167.


Remove water pump and driveshaft from gearcase. Refer to **WATER PUMP** on p. 169.

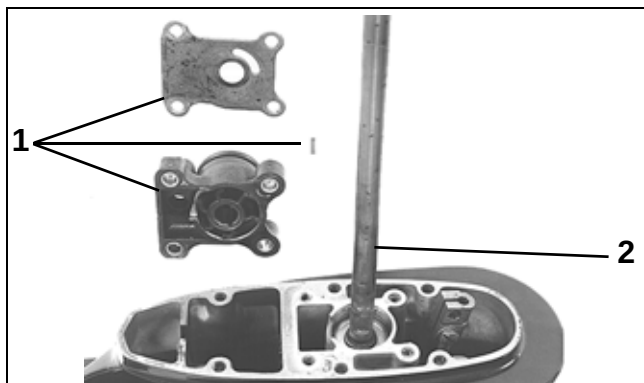

1. Water pump assembly
2. Driveshaft

32539

Remove the propeller shaft bearing housing retaining screws. Using Gearcase Bearing Housing Puller, P/N 386631, and a propeller nut, remove the propeller shaft bearing housing.

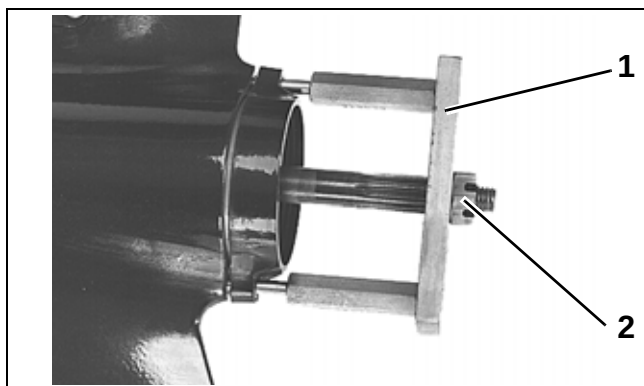


1. Gearcase Bearing Housing Puller
2. Propeller nut

32534


Remove the propeller shaft, with thrust washers, and reverse gear components. If forward thrust washer is not on propeller shaft, check for it in the relieved area of the forward gear. Use a magnetic

tool to locate and remove the two shifter detent balls and one detent spring from the gearcase.

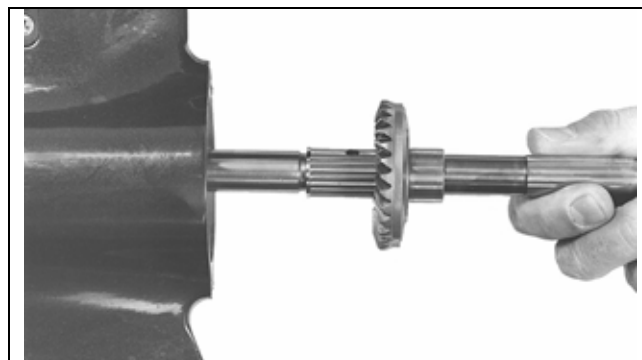

44107

Remove shift lever pivot pin from gearcase. Discard the O-ring.

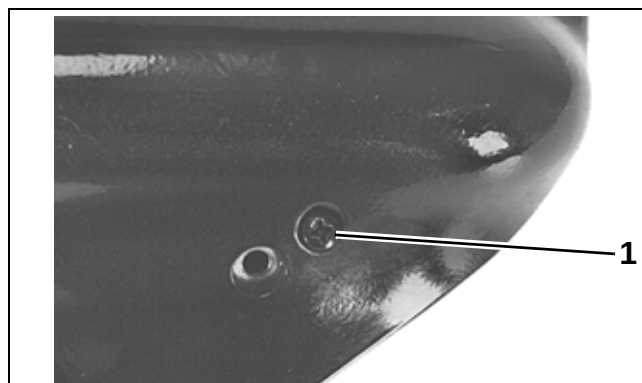

1. Shifter lever pivot pin

32536

Unscrew the shift rod and remove it from the gearcase.




32575

GEARCASE

BEARING AND SEAL REMOVAL

Use long-nose pliers to remove the clutch dog from the gearcase.

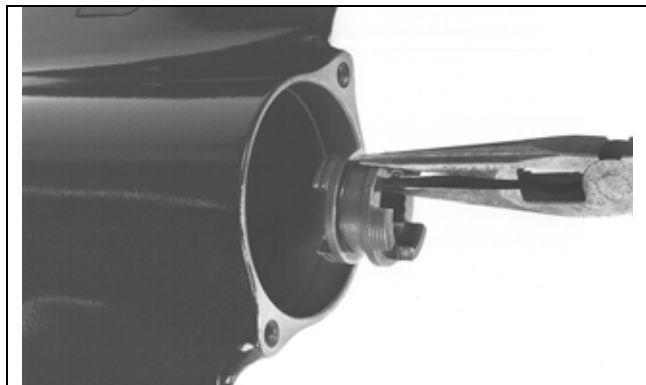


32577

Use long-nose pliers to remove the forward gear and shifter lever assembly. Use no force. Tilting the shifter lever slightly will allow you to remove it from the gearcase. Remove the forward gear roller bearing.



32542

Remove the pinion gear, two thrust washers, and thrust bearing.

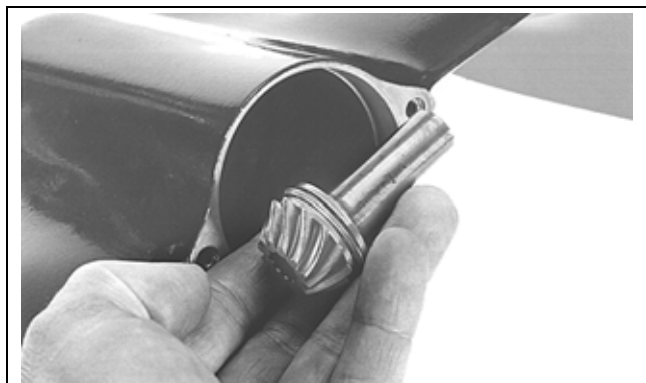


32558

BEARING AND SEAL REMOVAL

IMPORTANT: Inspect bearings for damage while in place. If bearing is damaged, remove and discard. If the bearing is removed for any reason, it must be replaced.

Driveshaft Seals

Use Puller Bridge, P/N 432127, and Small Puller Jaws, P/N 432131, to remove the two driveshaft seals. Discard the seals.

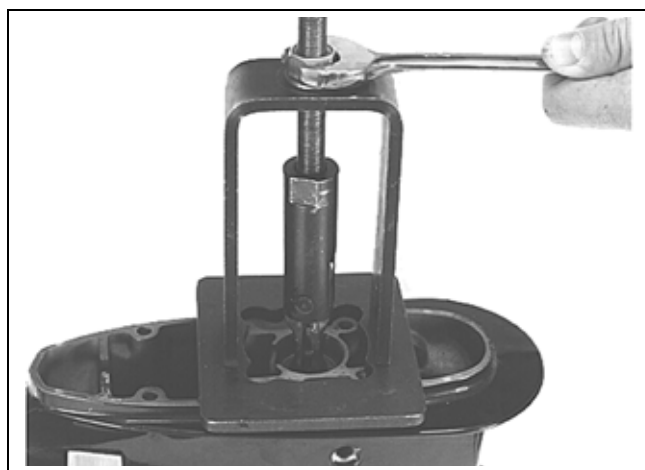


9.9/15 Model

32545

Driveshaft Bearing

Use Puller Bridge, P/N 432127, and Small Puller Jaws, P/N 432131 to remove the driveshaft bearing and sleeve from the gearcase. Discard the bearing.

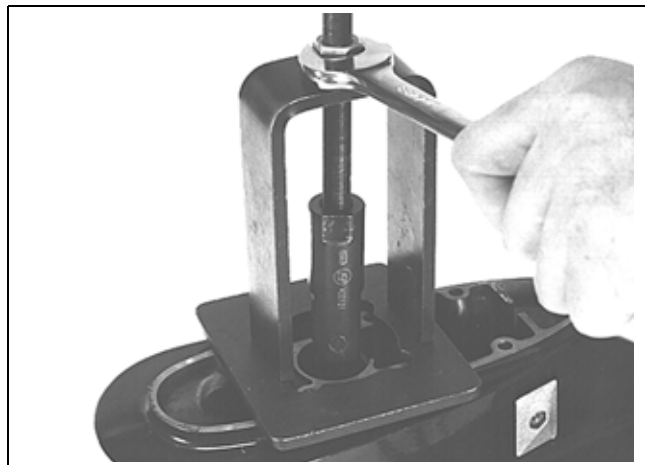


9.9/15 Model

32531

Pinion Bearings

Place bearing removal tool in the driveshaft cavity. Use a mallet to drive the two pinion bearings into the propeller shaft cavity of gearcase. Discard the bearings.

Use Bearing Remover, P/N 319880.

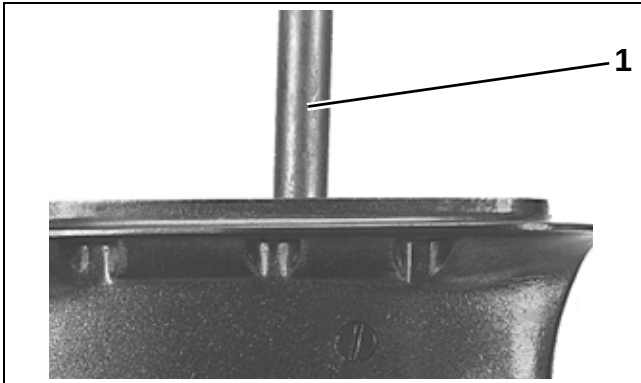


1. Bearing remover

33239

Forward Bearing


Using Slide Hammer, P/N 432128, and Bearing Puller, P/N 432130, remove the forward bearing cup from the gearcase.

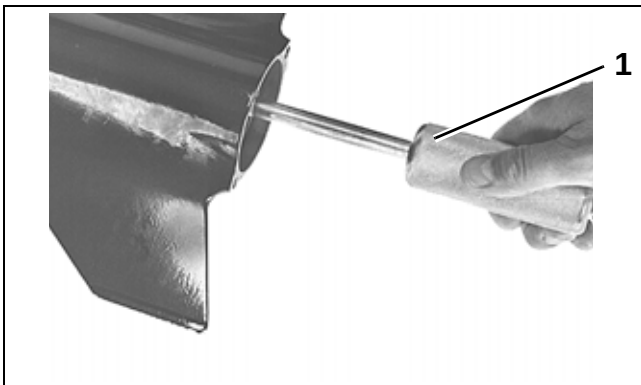

1. Slide hammer

32548

Secure the puller jaws into grooves behind the cup. Use Wrench, P/N 334359, to hold the puller while tightening the jaws.

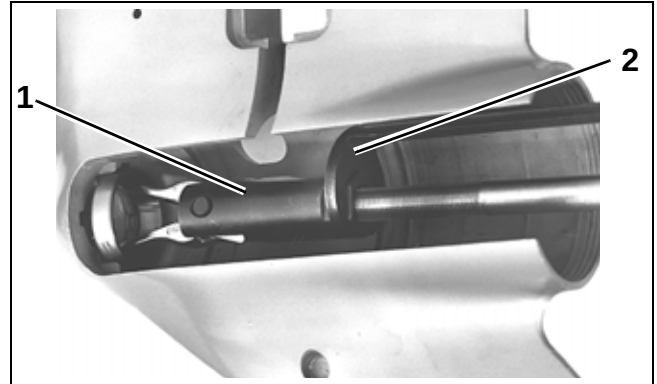

1. Bearing puller
2. Wrench

21789

Shift Rod Bushing and O-ring

Position Shift Rod Bushing Remover, P/N 327693, under the shift rod bushing.

Thread the adapter of the Slide Hammer, P/N 391008, in the slide hammer. Place the adapter through the shift rod bushing and thread into the remover tool.


Remove the handle from the remover tool. Then remove the bushing from the gearcase.

Once the bushing has been removed from the gearcase, examine the bushing for damage. If damaged, replace the bushing on reassembly.

GEARCASE

BEARING AND SEAL REMOVAL

Remove and discard the O-ring(s) and washer from the bushing.

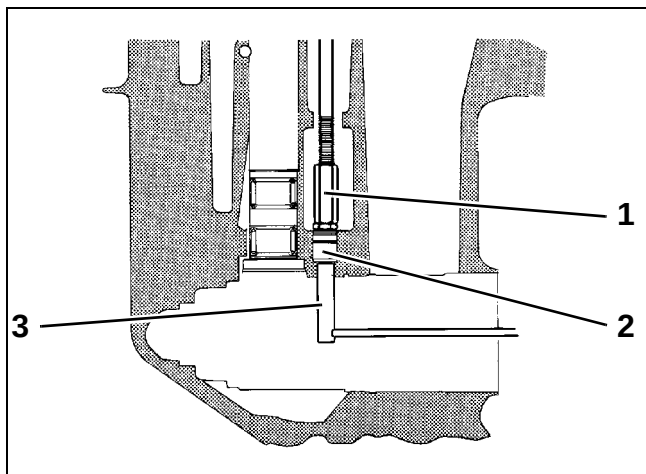


- 1. Adapter
- 2. Shift rod bushing
- 3. Remover tool, P/N 327693

DRC1505

Prop Shaft Bearing Housing Seals and O-ring


Remove and discard the propeller shaft bearing housing O-ring.

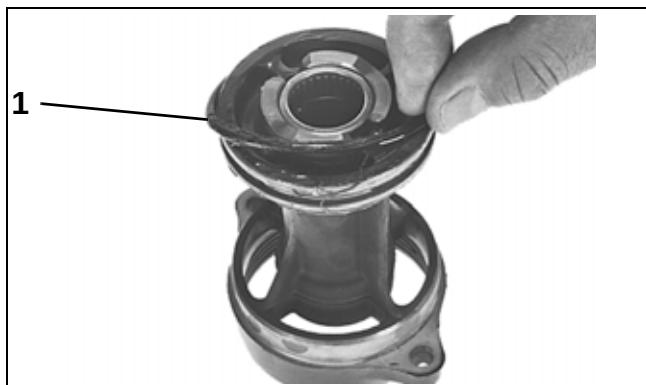

- TYPICAL**
- 1. O-ring

32547

Using Puller Bridge, P/N 432127, and Small Puller Jaws, P/N 432131, remove seal(s). Discard seal(s).

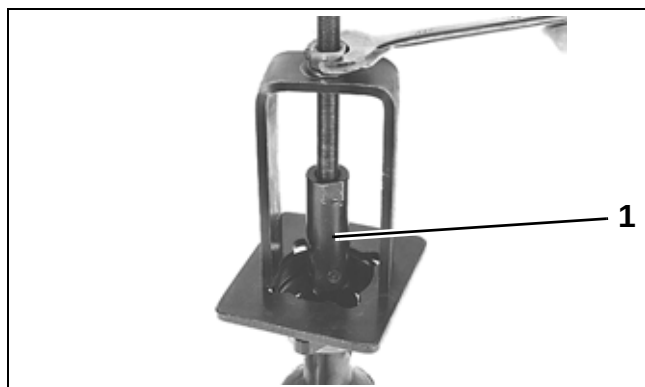


- 1. Small puller jaws

32555

Prop Shaft Bearing Housing Bearings


Using Bearing Remover, P/N 319880, and a mallet, remove the smaller propeller shaft bearing located in the aft end of the bearing housing. Discard the bearing.

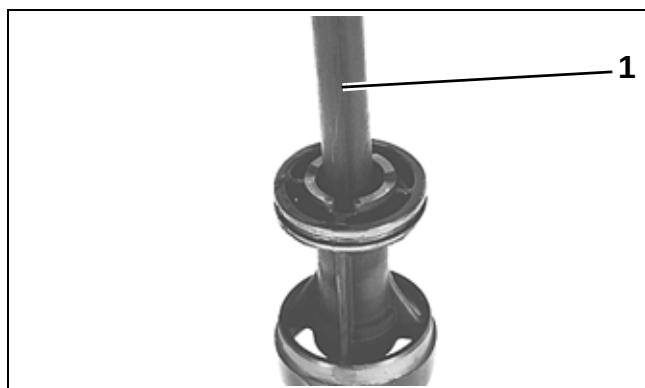

- 1. Bearing remover

32554

Using Puller Bridge, P/N 432127, and Bearing Puller, P/N 432130, remove the larger propeller shaft bearing located in the front of the bearing housing. Discard the bearing.

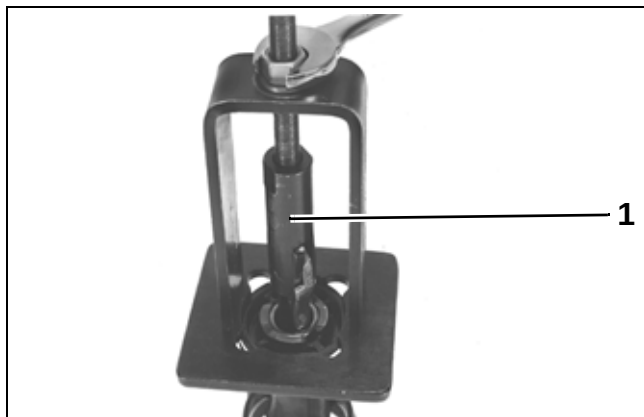

1. Bearing puller

32546

CLEANING AND INSPECTION



WARNING



Replace damaged components. Shift system failure could cause loss of control over direction of engine thrust.



WARNING



To avoid personal injury, wear eye protection and regulate air pressure to not more than 25 psi (172 kPa).

Discard all seals, O-rings, gaskets, and clutch dog spring.

Clean all gearcase components in solvent and dry with compressed air. After cleaning, coat all internal components with *HPF XR* gearcase lubricant to prevent rusting.

Perform the following inspections:

- **Gearcase housing** — all gasket surfaces must be free of gasket material. All threaded holes must be free of corrosion and sealer.
- **Gearcase anode** — if anode has been reduced to two-thirds of its original size, it must be replaced. Refer to **Anode Testing Procedure – Continuity** on p. 52.
- **Driveshaft** — check splines for chips, wear, and cracks. Bearing and gear surfaces must not show signs of metal transfer, corrosion, or discoloration. Severe spline wear might indicate an exhaust housing or gearcase has been distorted by impact damage.
- **Water intake screen** — must be clear. If screen can't be cleaned, it must be replaced.
- **All internal components** — must be visually inspected for signs of wear, distortion, chipping, metal transfer, pitting, galling, and discoloration due to improper lubrication.
- **Water pump** — check impeller for wear, crumbling, and hub bonding. Check impeller cup and plate for scoring and distortion.

SEAL AND BEARING INSTALLATION

IMPORTANT: Make no dry assemblies. Lubricate all bearings, shafts, and gears with *HPF XR* gearcase lubricant.

Press the bearings into the housings until the tools are seated on the housing.

Propeller Shaft Bearing Housing Bearings

Install **new** aft bearing (small) from the forward end of the bearing housing. Use Bearing Installer, P/N 339751. Position installer against the lettered side of bearing.



32560


Install **new** front bearing (large) from the forward end of bearing housing. Use Bearing Installer, P/N 339751. Position installer against the lettered side of bearing.



32559

Propeller Shaft Bearing Housing Seals and O-ring

Use Seal Installer, P/N 342663, to install a new seal in the rear of the bearing housing. Apply *DPL Penetrating Lubricant* to the casing of the seal before installing. Install the seal with the exposed lip facing away from the bearing housing. Press the seal into the housing until the tool seats. Apply *Triple-Guard* grease to seal lips after installing.

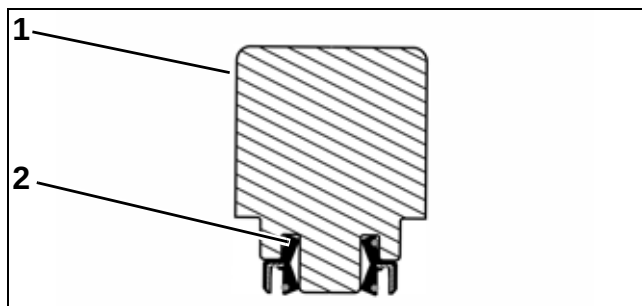

1. Seal installer
2. Exposed lip of seal


DR6186

Apply *Triple-Guard* grease to **new** bearing housing O-ring. Place O-ring in groove.

Shift Rod Bushing and O-ring

Coat the shift rod O-ring with *Triple-Guard* grease and install in shift rod bushing.

Place a **new** washer and bushing on Shift Rod Bushing Installer, P/N 304515. Apply *Gasket Sealing Compound* to the outside diameter of the shift rod bushing.

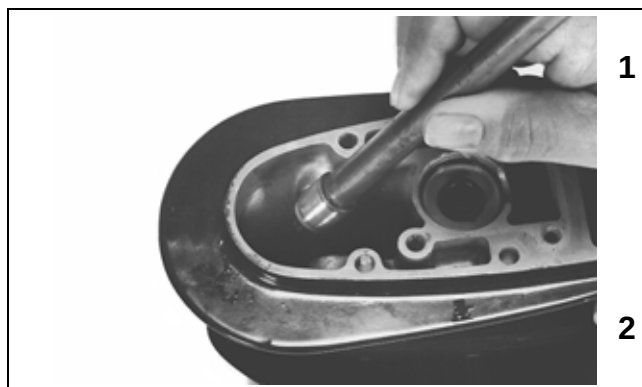


9.9/15 Model

32562

Use a mallet to drive the bushing into the gearcase housing.


Forward Bearing

Remove the gearcase from the holding fixture, and place the nose of it on a wooden block on the floor. Use Drive Handle, P/N 311880, Bearing Cup Installer, P/N 319929, and a mallet to drive the bearing cup into position in the gearcase housing. Oil the forward bearing cup and seat it firmly in the housing.

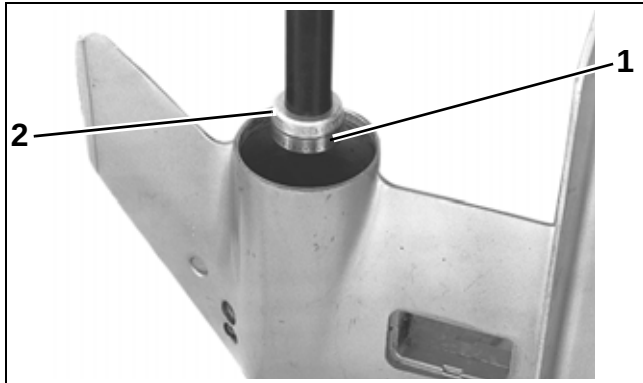

1. Forward bearing cup
2. Bearing cup installer

21791

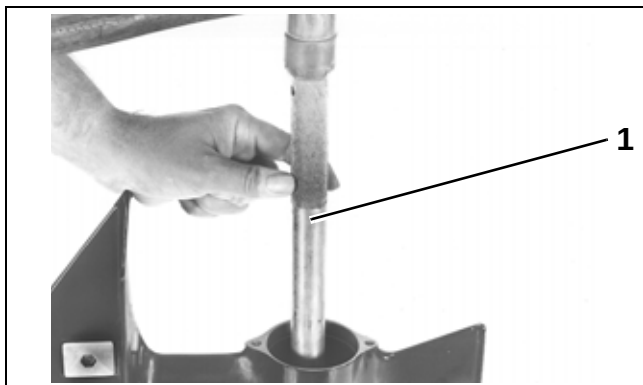


1. Drive handle

32551

Pinion Bearings

Install the pinion bearings using the following components of the Universal Pinion Bearing Remover and Installer, P/N 391257. Use the remover/installer and spacers for the specific out-board model.

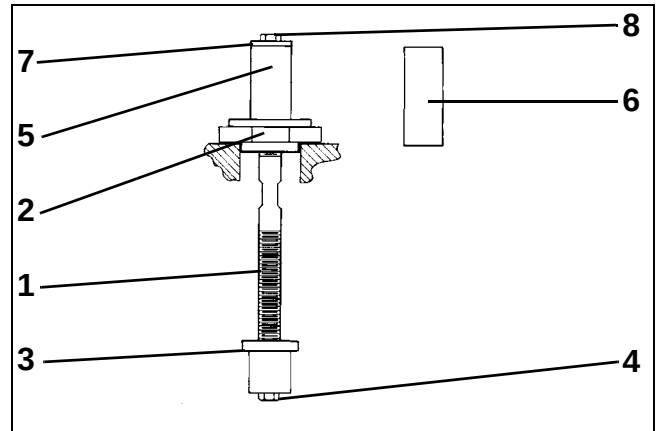

1. Rod, P/N 326582
2. Plate, P/N 326583
3. Remover/Installer
9.9/15 Model: P/N 326578
4. 1/4-20 x 1 1/4 in. screw
5. Spacer, Short
9.9/15 Model: P/N 326585
6. Spacer, Long
9.9/15 Model: P/N 339753
7. 1 in. flat washer
8. 1/4-20 x 1/2 in. screw

DR4692

IMPORTANT: To ensure accurate bearing location, washer must be flat and screw must be tight.

Install **lower** pinion bearing. Assemble tool using **short** spacer, P/N 326585, and remover/installer, P/N 326578. Position installer against the lettered side of bearing. Drive bearing into gearcase housing until washer contacts spacer.


Install **upper** pinion bearing. Assemble tool using **long** spacer, P/N 339753.

GEARCASE

SEAL AND BEARING INSTALLATION

Driveshaft Bearing


Oil and install a new driveshaft bearing in the bearing sleeve using Bearing Installer, P/N 319931, and an arbor press. Press against the lettered side of bearing until the tool is seated in the bearing sleeve.

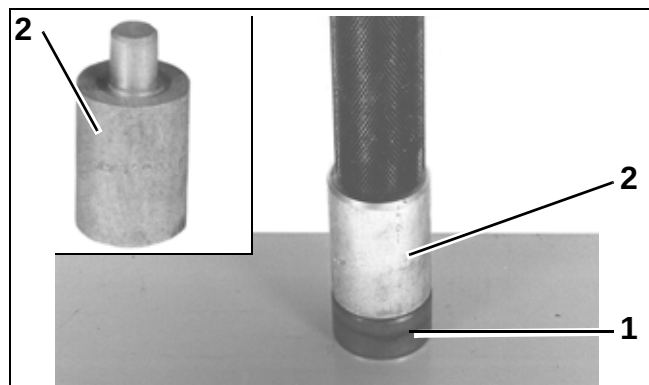

1. Bearing sleeve
2. Bearing installer

32550/32639

Oil the bearing sleeve and install with the bearing into the gearcase housing using Bearing Installer, P/N 319931. Position lettered side of bearing towards gearcase and press the bearing sleeve assembly into the gearcase until seated at bottom of bore.

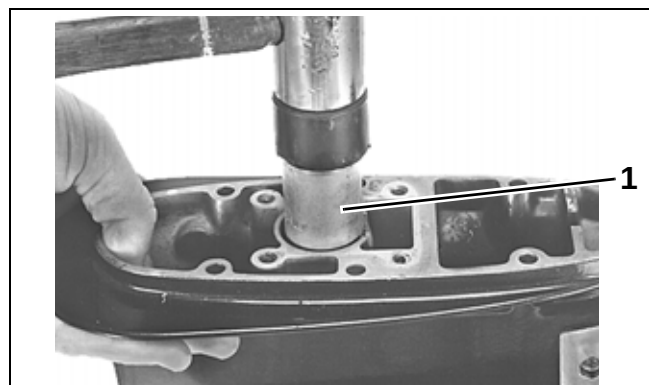

1. Bearing installer

32549

Driveshaft Seals


Install **new** seals, back to back, in the driveshaft bore using the appropriate seal installer.

Apply *Gasket Sealing Compound* to the metal casing of the seals before installing.

Install the inner seal with flush lip facing into the gearcase, then the outer seal with extended lip facing out of the gearcase.

Apply *Triple-Guard* grease to the seal lips after installing.

Use Seal Installer, P/N 326554. Install the inner seal with lip of the seal facing into the gearcase, then the outer seal with lip of the seal facing out of the gearcase.

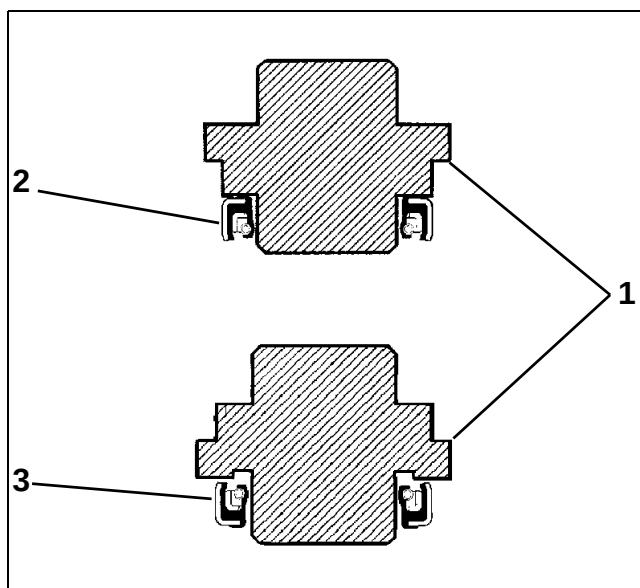

TYPICAL
1. Seal Installer
9.9/15 Model: P/N 326554
2. Inner seal
3. Outer seal


DR2061
DR2062

ASSEMBLY

IMPORTANT: Make no dry assemblies. Lubricate all bearings, shafts, and gears with *HPF XR* gearcase lubricant.

Oil and place the forward bearing cone and roller assembly in the forward bearing cup.


To install the forward gear and the shifter lever and yoke assembly, begin by threading Yoke Locator, P/N 319991, through the shift rod bushing and threading it into the shifter yoke. Remove the cradle from the yoke. Then, while pulling on the yoke locator, guide the assembly into the gearcase. The forward gear should come to rest against the forward bearing, and the shift lever should be located in the slot at the bottom of the gearcase.

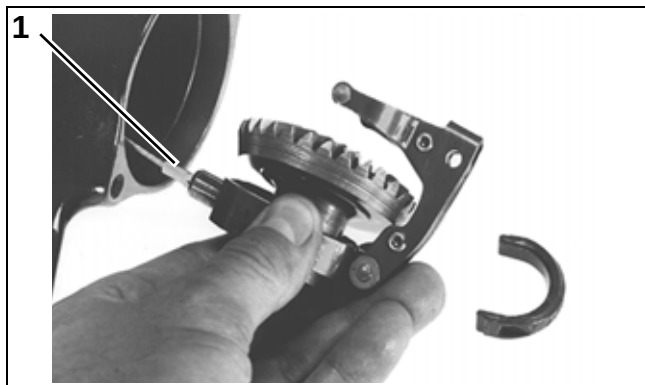

1. Yoke Locator

32557

Position one pinion thrust washer on the pinion. Oil and install the thrust bearing. Install the other thrust washer on the pinion.

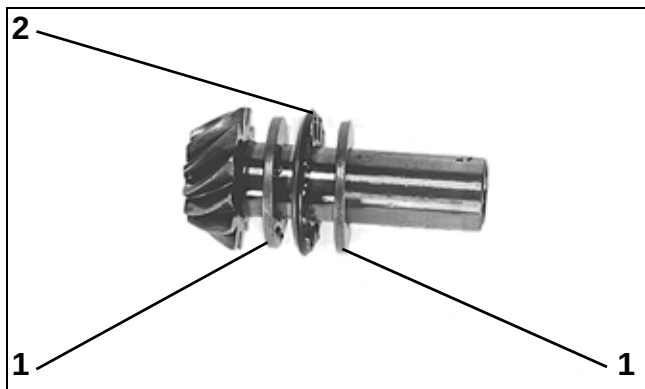

1. Thrust washer
2. Thrust bearing

32544


Install the pinion in the gearcase.



32558

IMPORTANT: If the pinion binds upon assembly, angle the forward gear to allow engagement. If binding is still present, the forward bearing cup is not properly seated.

Oil a **new** O-ring and install on the pivot pin. Apply *Nut Lock* to the threads of the pivot pin. Use the yoke locator to locate the pivot pin hole in the yoke. Install and tighten the pivot pin to a torque of 48 to 84 in. lbs. (5 to 9 N·m).

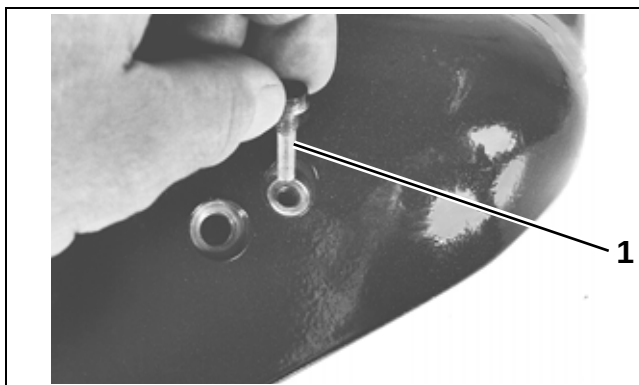

1. Pivot pin

32576

Coat the threaded area of the shift rod with *Triple-Guard* grease. Slide the shift rod down through the shift rod bushing and thread it into the yoke


GEARCASE ASSEMBLY

until seated. Then back out shift rod until slotted face of connector faces the driveshaft.



32538

Pull shift rod up and install cradle on yoke.

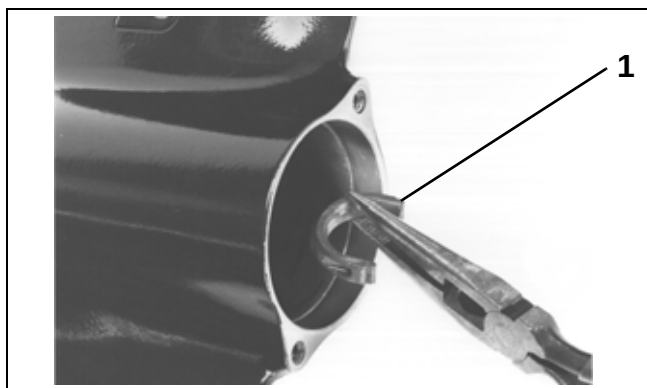

1. Cradle


32574

Apply *Needle Bearing* grease to the forward thrust washer and install in relief area of forward gear.



44122


Using long-nose pliers, place the clutch dog in the cradle. Groove on the clutch dog **must** face the forward gear.

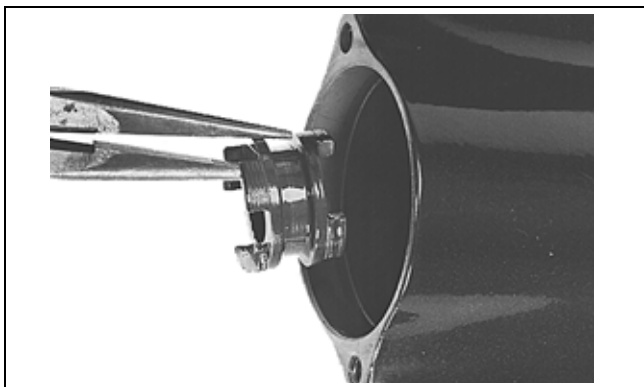

32541

Hold propeller shaft in place and move shift rod to NEUTRAL position.


Apply *Needle Bearing* grease to the thrust washer, propeller shaft spring, and two detent balls. Install thrust washer behind splines on propeller shaft. Install the spring and balls in the propeller shaft.

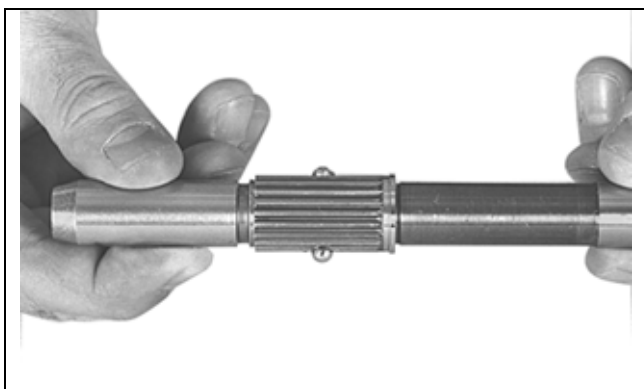

44123

Align the two detent balls with the two grooves in the internal splines of the clutch dog. Aid installation of loose detent ball with a flat blade screwdriver. Push the propeller shaft into the clutch dog, forward gear, and the forward bearing.

Slide the reverse gear onto the propeller shaft.

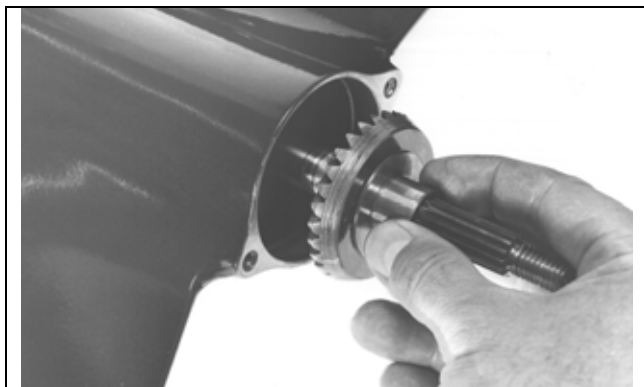


32573

Lightly apply *Gasket Sealing Compound* to the aft support flange of the propeller shaft bearing housing. Install the bearing housing into the gearcase.

Apply *Gasket Sealing Compound* to the threads of the bearing housing screws. Install the screws and tighten to a torque of 60 to 80 in. lbs. (7 to 9 N·m).

Install the driveshaft. Rotate the driveshaft to allow the splines in the pinion to engage the splines on the driveshaft.

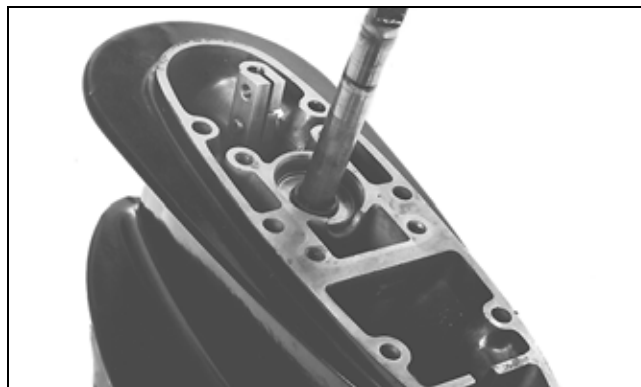

32572

IMPORTANT: Pressure and vacuum test gearcase before filling with *HPF XR* gearcase lubricant.

To complete gearcase servicing, refer to:

- **LEAK TEST** on p. 166
- **WATER PUMP** on p. 169
- **REMOVAL AND INSTALLATION** on p. 167
- **Propeller Hardware Installation** on p. 47

NOTES

Technician's Notes

[illegible]

Related Documents

[illegible]

MANUAL STARTER

TABLE OF CONTENTS

GENERAL 184

 STARTER ROPE LENGTH 184

 TORQUE CHART 184

REMOVAL 184

ROPE REPLACEMENT 185

DISASSEMBLY 186

CLEANING AND INSPECTION 187

ASSEMBLY 187

INSTALLATION 190

GENERAL

Starter Rope Length

Model	Rope Length
9.9/15	59 in. (150 cm)

Torque Chart

Model	Description	In. lbs.	Ft. lbs.	N·m
9.9/15	Starter Retaining Screw	60 - 84	5 - 7	7 - 9
9.9-15	Starter Spindle Screw and Nut	120 - 144	10 - 12	14 - 16

REMOVAL




WARNING



Avoid accidental starting of engine while servicing, twist and remove all spark plug leads.


IMPORTANT: Use of Starter Spring Installer Kit, P/N 342682, is required.

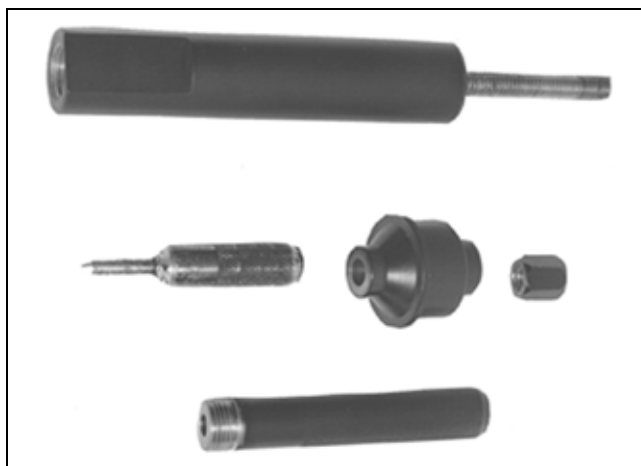

Starter Spring Installer Kit

50068

Loosen starter lockout cam screw several revolutions. Remove the three starter retaining screws.

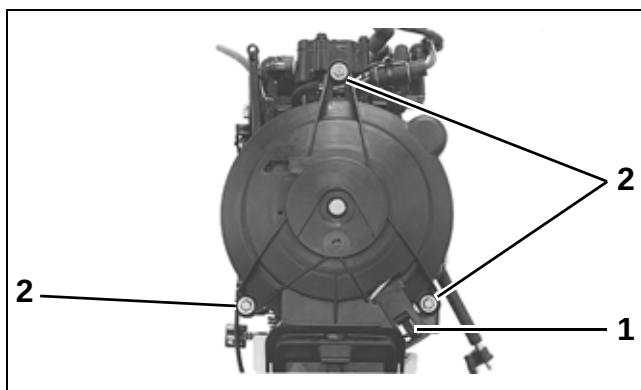

1. Cam screw
2. Starter screws


32312

Remove link from lockout cam. Lift starter from powerhead.



33746

To service lockout assembly, remove retaining pin.

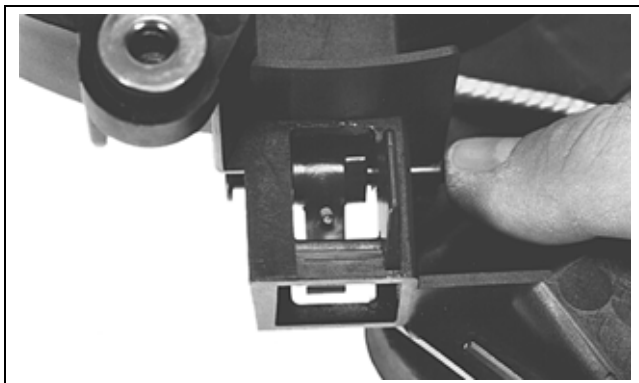

33745

Remove the plunger, spring, tappet, and cam from the housing, and the screw from the cam.



33744

ROPE REPLACEMENT




WARNING



Wear safety glasses to avoid personal injury.

Pull rope out completely and retain pulley in position with stop tool from Starter Spring Installer Kit, P/N 342682.

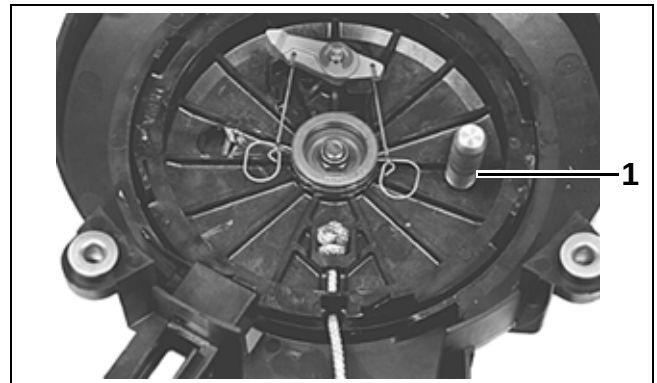


1. Stop tool

46714

Remove rope from pulley channel, untie knot, and remove rope from starter assembly.

Remove cap from handle, untie knot and remove rope from handle.

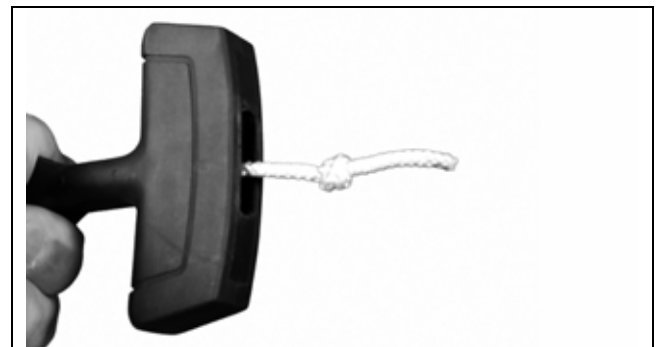

001016

Cut new rope 59 in. (150 cm) long. Fuse 1/2 in. (12 mm) of both ends. Route rope through housing into pulley. Tie knot in rope end and install in pulley channel.

Insert rope into handle, tie knot at end of rope, install handle cap. Hold rope taut and pull stop tool out. Allow rope to slowly wind into starter.

DISASSEMBLY



WARNING




Wear safety glasses while disassembling and assembling manual starters to avoid personal injury caused by rewind spring tension.

Pull rope out completely and retain pulley in position with stop tool from Starter Spring Installer Kit, P/N 342682.

Remove rope from pulley channel, untie knot, and remove rope from starter assembly.

Remove stop tool and slowly unwind pulley until tension is released.


Remove retaining ring, pawl, and linkage.

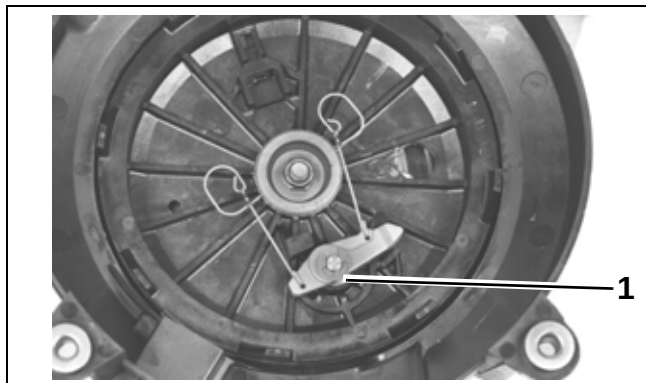

1. Retaining ring, pawl, and linkage

46716

Remove the starter spindle screw and locknut. Hold the pulley down in housing and lift out spindle. Carefully lift out pulley, leaving spring in housing.

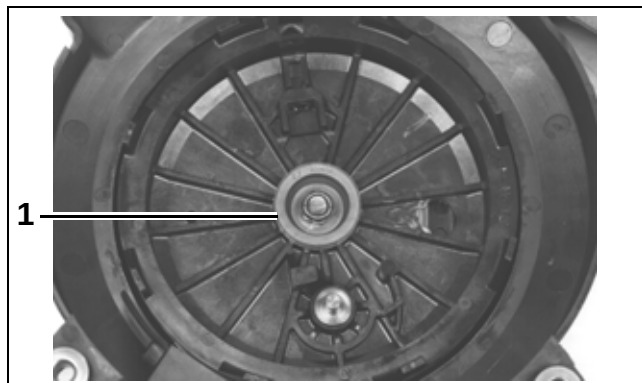

1. Screw and locknut

46717



WARNING



Do not remove spring with housing facing up. Do not lift spring out of housing by hand or with pliers. Spring is under tension and will cause injury if accidentally released. Keep fingers away from uncoiling spring.

Turn starter housing over and jar on bench to remove spring.

CLEANING AND INSPECTION

Wash metal components in solvent and dry with compressed air.

Inspect the rewind spring for broken end loops and weak tension.

Examine the pawl and links for wear.

Examine the pulley and the starter housing. Look for sharp edges and rough surfaces that could fray the starter rope. File and polish to remove.

ASSEMBLY




WARNING




Wear safety glasses while disassembling and assembling manual starters to avoid personal injury caused by rewind spring tension.

Install mandrel from Starter Spring Installer Kit, P/N 342682, in vice and place spring around mandrel as shown.

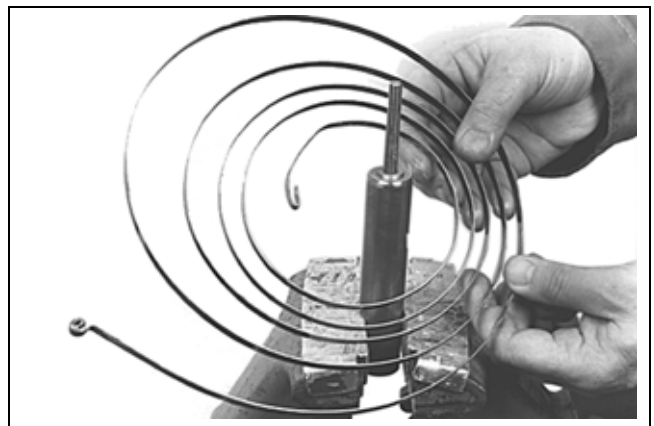

46684


Place housing, with shield, over mandrel and route hook end of spring through housing opening.

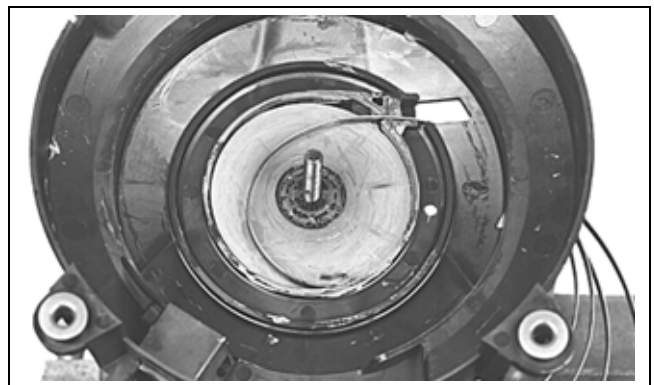

46718

MANUAL STARTER ASSEMBLY


Place pulley over mandrel and secure with pulley retainer (taper toward pulley) and left hand thread nut from Starter Spring Installer Kit, P/N 342682.

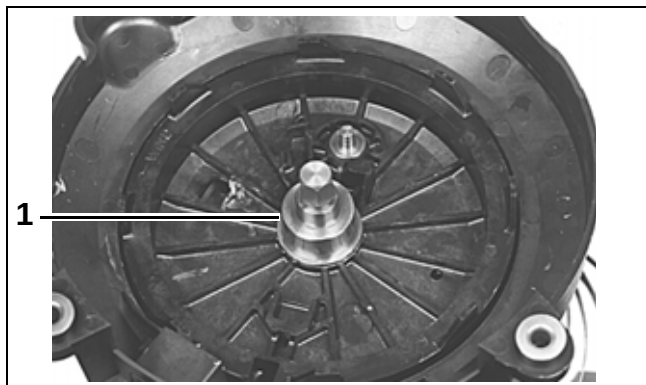

1. Pulley retainer

46719

Pull lightly on spring to eliminate slack and turn pulley counterclockwise with handle from Starter Spring Installer Kit, P/N 342682 until spring hook engages pulley hub slot.

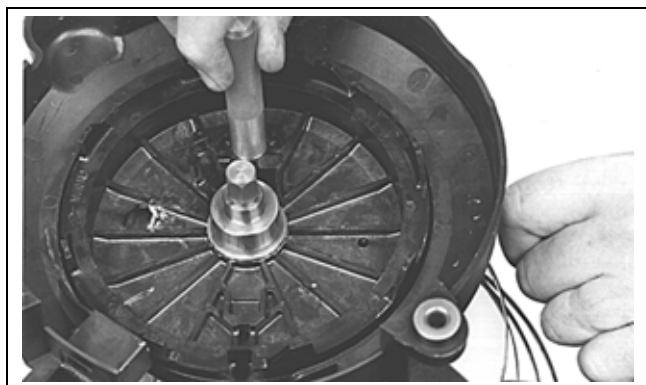


46720

Turn pulley counterclockwise to pull spring all the way into housing. Allow pulley to slowly unwind until tension is relieved.

Turn pulley counterclockwise approximately 3 1/2 turns until opening for rope in housing aligns with

rope channel in pulley. Secure pulley in place by installing stop tool into pulley and housing holes.

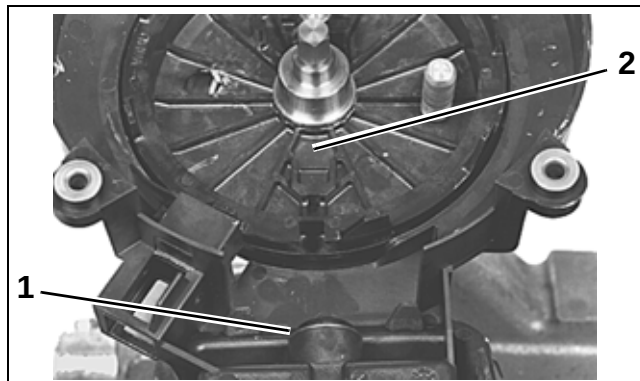

1. Housing rope opening
2. Rope channel on pulley

46721


Inspect starter rope. Replace rope if frayed. Cut new rope to 59 in. (150 cm) in length and fuse ends of rope.

Insert rope into starter handle, tie knot and seat knot in handle. Install starter handle cap.

Route rope through housing into pulley. Tie knot in rope end and install in pulley channel.

Insert rope into handle, tie knot at end of rope, install handle cap.


Hold rope taut and pull stop tool out. Allow rope to slowly wind into starter.

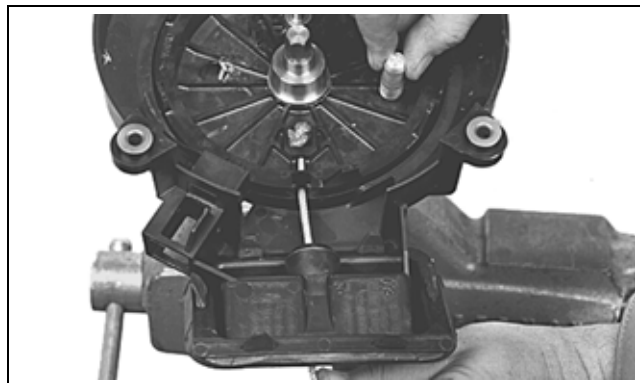

46722

Remove nut and pulley retainer from mandrel and remove starter assembly.


Install spindle, screw, and locknut. Tighten locknut 120 to 144 in. lbs. (14 to 16 N·m).

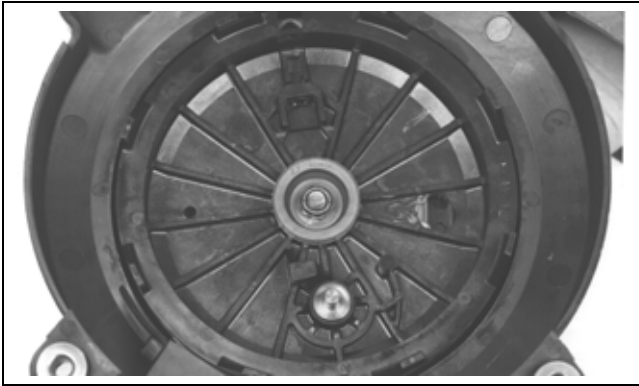

46717

Examine lockout parts. Replace any worn or damaged parts.


Install pawl, linkage, and retaining ring (sharp edge up).

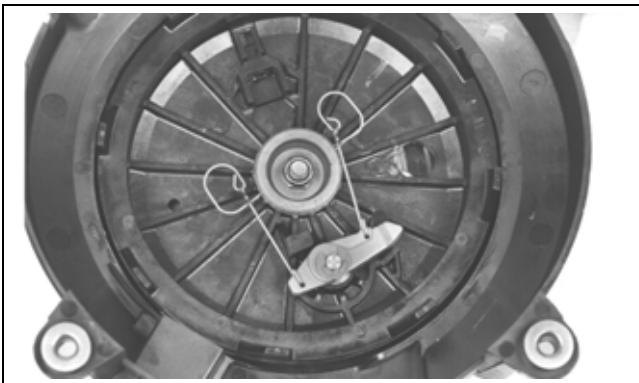

46716

Check the operation of the pawl. The pawl should extend when the starter rope is pulled and retract when the starter rope rewinds.

Install screw into cam. Install plunger, spring, tappet, and cam with retaining pin.

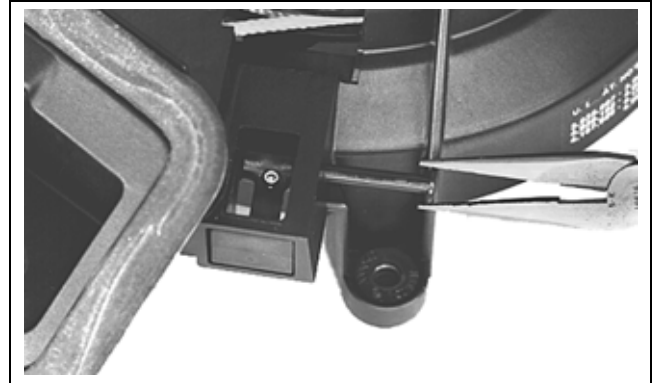


35054

MANUAL STARTER INSTALLATION

INSTALLATION


Position starter on engine. Connect starter lockout link to cam. Turn cam screw IN carefully until screw head contacts cam. Do not overtighten.

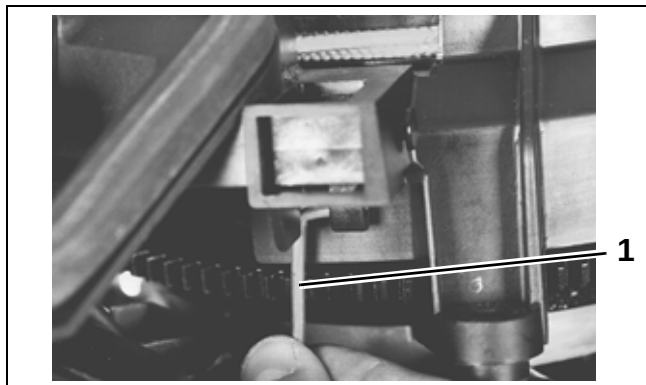

1. Lockout link

33746

Install starter screws. Tighten screws 60 to 84 in. lbs. (7 to 9 N·m).

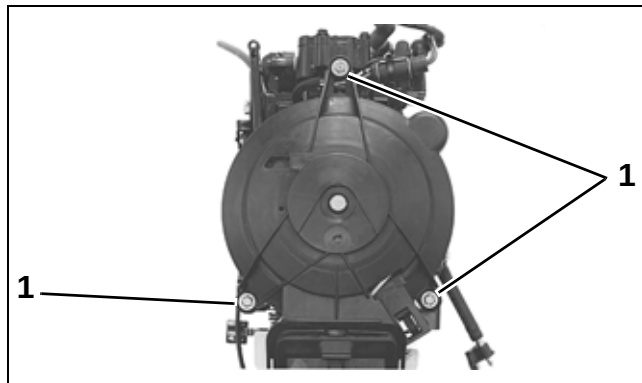

1. Starter screws

32312

Check operation of starter and starter lockout. Starter should crank outboard in NEUTRAL gear. **Starter MUST NOT crank outboard in FORWARD or REVERSE gear.**

SAFETY

TABLE OF CONTENTS

MARINE PRODUCTS AND THE SAFETY OF PEOPLE WHO USE THEM	S-3
OUTBOARD SHIFT SYSTEMS AND SAFETY	S-4
OUTBOARD SPEED CONTROL SYSTEM AND SAFETY	S-5
OUTBOARD STEERING CONTROL SYSTEM AND SAFETY	S-6
OUTBOARD FUEL, ELECTRICAL SYSTEM, AND SAFETY	S-8
OUTBOARD MOUNTING SYSTEM AND SAFETY	S-11
OUTBOARD HYDRAULIC TILT/TRIM SHOCK ABSORPTION SYSTEM AND SAFETY	S-13
OUTBOARD EMERGENCY STOP SYSTEM AND SAFETY	S-14
SUMMING UP	S-16
MARINE PRODUCTS AND THE SAFETY OF PEOPLE WHO FIX THEM	S-17
HANDLING OUTBOARDS	S-17
HANDLING LEAD/ACID BATTERIES	S-21
GASOLINE – HANDLE WITH CARE	S-22
HAZARDOUS PRODUCTS	S-23
SAFETY AWARENESS TEST	S-24

MARINE PRODUCTS AND THE SAFETY OF PEOPLE WHO USE THEM



WARNING



This Safety section contains information relevant to the safety of boaters and people that service boats. Please read this section carefully and share it with all shop technicians. Always follow common shop safety practices. If you have not had training related to common shop safety practices, you should do so not only to protect yourself, but also to protect the people around you.

It is impossible for this manual to cover every potentially hazardous situation you may encounter. However, your understanding and adherence to the recommendations contained in this manual and use of good judgment when servicing outboards will help promote safety. Always be alert and careful: a good foundation for safety.

Enjoyable boating is the goal of people who design and build marine products. To reach this goal, manufacturers are careful to make sure:

- Product user is informed; and
- Products are safe and reliable.

It is up to you, the people who...

- Rig boats;
- Fix machinery; and
- Maintain equipment

...to keep the products safe **and** reliable.

This section talks about safe boating and how you can help make it safe. Some of these safety issues you will know, others you may not.


First!

A word about parts... Plain parts; special parts; all parts!

DO NOT SUBSTITUTE PARTS

"They look the same, but are they the same?"

- Same size?
- Same strength?
- Same material?
- Same type?

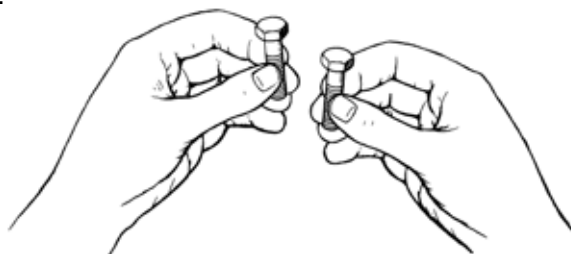


Don't substitute unless **you know** they are the **same** in **all** characteristics.


Second!

- Special locking bolts and nuts are often used to hold steering, shift, and throttle remote control cables to the outboard.
- When you take any outboard off a boat, keep track of special nuts and bolts. Do not mix with other parts. Store them on the outboard, then they are there when you need them.
- When the outboard is returned to the boat, use only the special nuts and bolts to hold remote steering, shift, and throttle cables to the outboard.



Outboard Shift Systems and Safety

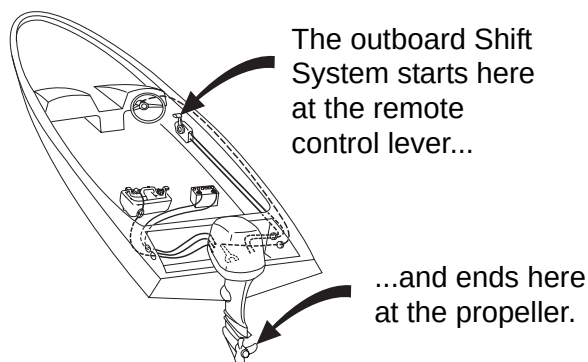

What is most important?

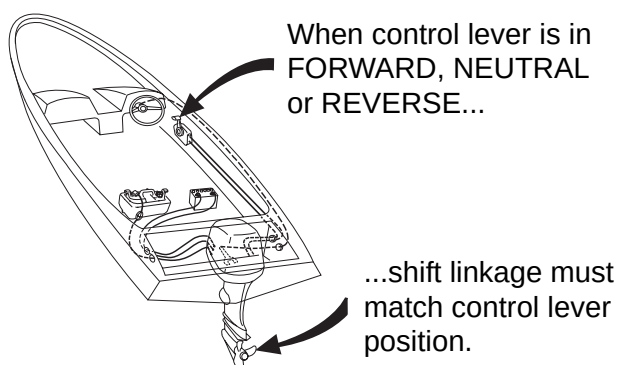

What could happen?

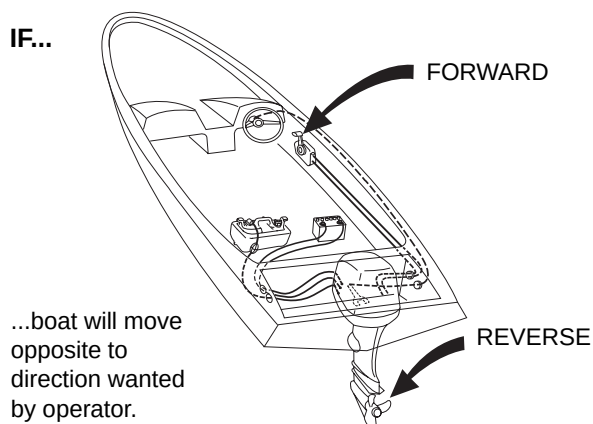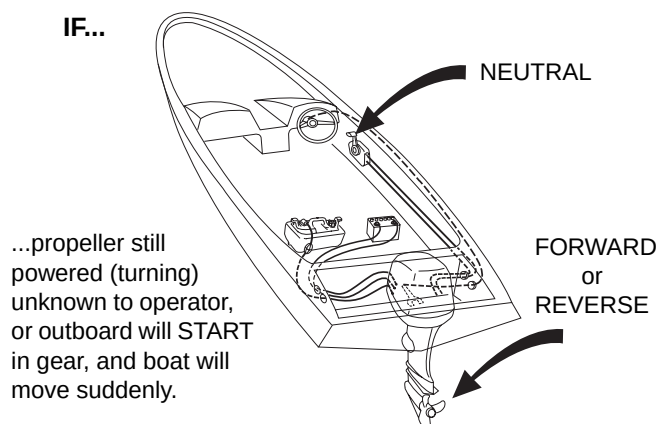


How can loss of shift control be minimized?

When rigging or after servicing


Read, understand, and follow manufacturer's instructions

- Follow warnings marked "⚠" closely.
- Assemble parts carefully.
- Make adjustments carefully.
- Test your work. Do not guess. Make sure propeller does just what the operator wants and nothing else.
- Do not shift gears on a stopped outboard. Adjustments can be lost and parts weakened.

Outboard Speed Control System and Safety

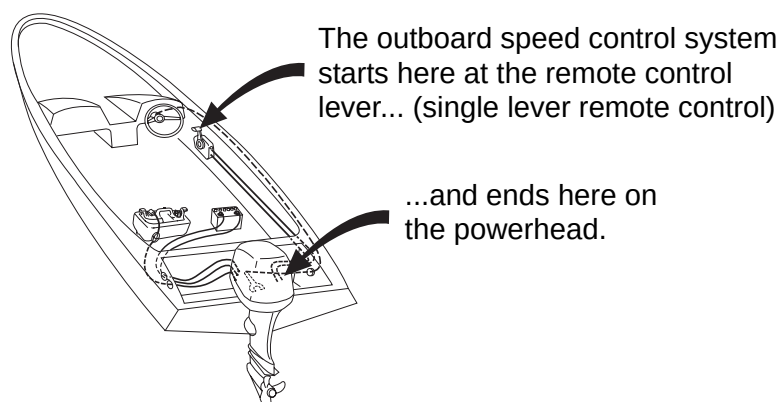

What is most important?

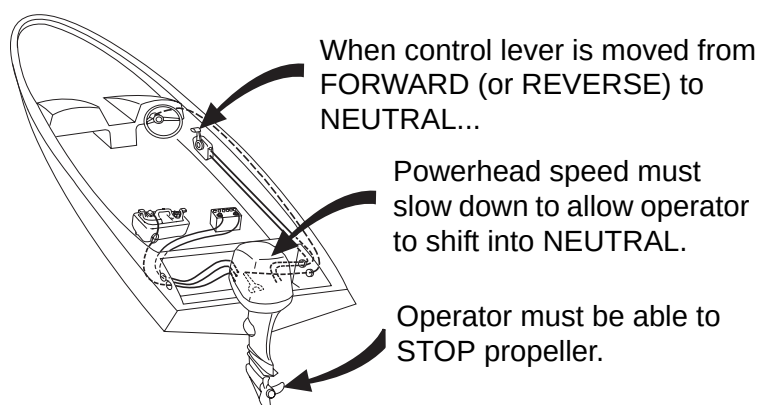

What could happen?

If Operator cannot slow down the outboard or shift into NEUTRAL gear (stop propeller), Operator could panic and lose control of boat.


How can loss of speed control be minimized?

When rigging or after servicing

Read, understand, and follow manufacturer's instructions

- Follow warnings marked "⚠" closely.
- Assemble parts carefully.
- Make adjustments carefully.
- Test your work. Do not guess. Make sure speed control system does just what the operator wants and nothing else.
- Make sure full throttle can be obtained so Operator will not overload parts.

Outboard Steering Control System and Safety

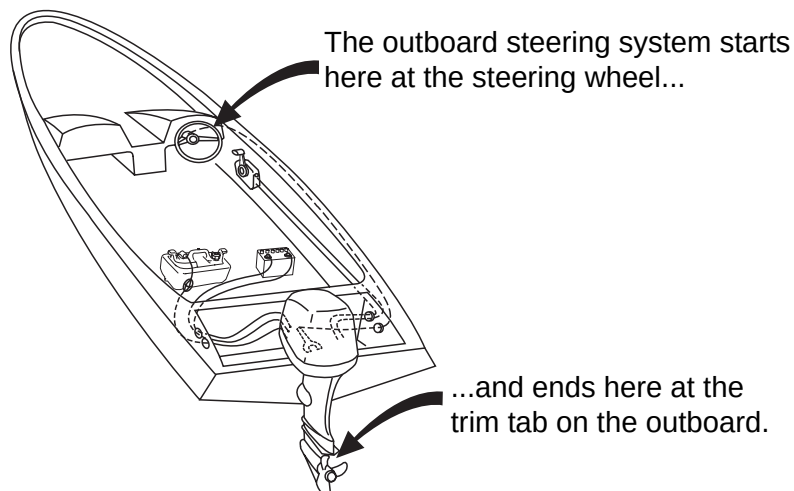

What is most important?


The steering system:

- Must not come apart;
- Must not jam; and
- Must not be sloppy or loose.

What could happen?

- If steering system comes apart, boat might turn suddenly and circle. Persons thrown into the water could be hit.

- If steering jams, operator may not be able to avoid obstacles. Operator could panic.
- If steering is loose, boat may weave while operator tries to steer a straight course. With some rigs (at high speed), loose steering could lead to loss of boat control.

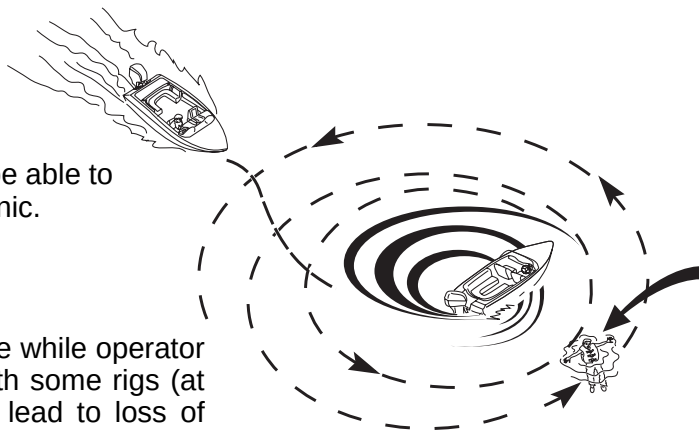


How can loss of steering control be minimized?

When rigging or after servicing

- Use a steering system recommended by the outboard manufacturer which meets Marine Industry Safety Standards (ABYC).
- **Read, understand, and follow** manufacturer's **instructions**
- Follow warnings marked "⚠" closely.
- Assemble parts carefully.
- Make adjustments carefully.
- Keep parts moving freely. Lubricate parts as shown in manual.
- Use the bolts, nuts and washers supplied with steering attachment kits—they are a special locking type that will not loosen, rust, or weaken.

Transom Mounted Steering Systems – Check to Uncover Possible Trouble!


Tilt outboard into boat, then turn it.

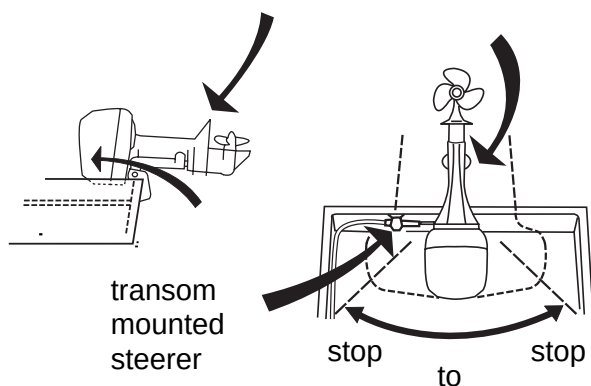

During this procedure, steering parts:


- Must not bind; and
- Must not touch other boat, outboard, or accessory parts in transom area.

Why? A hard blow to the outboard's gearcase can result in damage to steering parts.

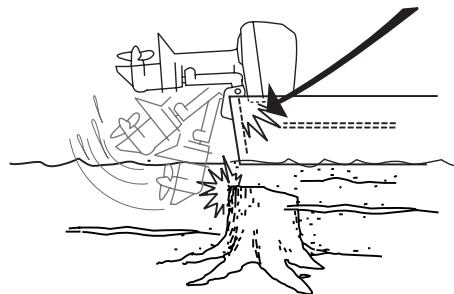


Be aware that raising or lowering outboard on transom can change a set-up which was OK earlier. If moved up or down even one-half inch, run test again to make sure steering parts are free and clear.

Check for damaged parts. Blows to the outboard like this

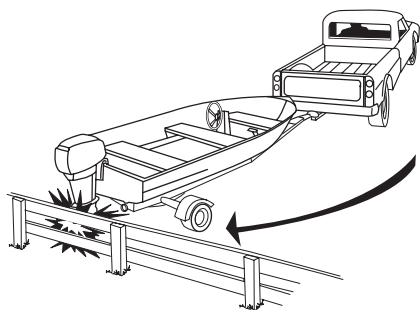


or this can put heavy loads on steering parts. Look for:

- Cracked parts, including steering parts, swivel brackets, and transom brackets;
- Bent parts; and
- Loose nuts and bolts.

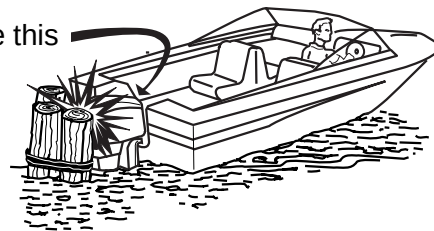

Replace damaged parts. If weakened, parts could fail later on the water when least expected.

Outboard Fuel, Electrical System, and Safety

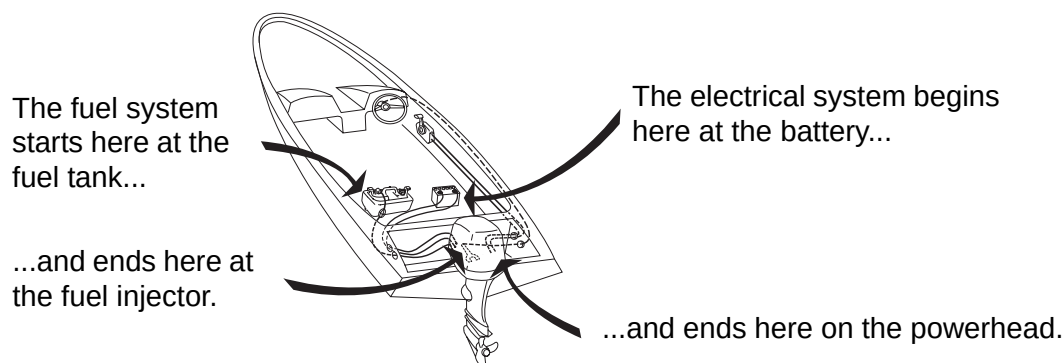

What is most important?

- Fuel leakage must be eliminated.
- Stray electric sparks must be avoided.


What could happen?

- **When not boating**, fuel leaking in car trunk or van, or place where portable tank is stored (basement or cottage), could be ignited by any open flame or spark (furnace pilot light, etc.).
- **When boating**, fuel leaking under the engine cover could be ignited by a damaged or deteriorated electrical part or loose wire connection making stray sparks.

How Can Fire and Explosion Be Minimized?

- **Read, understand, and follow** manufacturer's instructions
- Follow warnings marked "⚠" closely.
- **Do not** substitute fuel or electrical systems parts with other parts which may look the same. Some electrical parts, like starter motors, are of special design to prevent stray sparks outside their cases.
- Replace wires, sleeves, and boots which are cracked or torn or look in poor condition.


When mixing and refueling, always mix gas and oil outside...

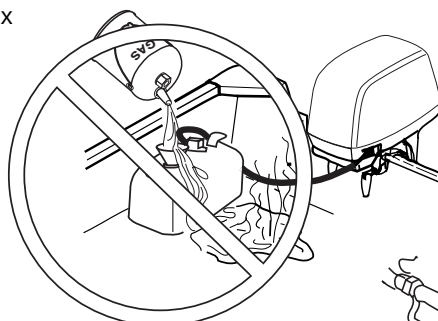

Always fill the tank outside the boat

Fumes are hard to control. They collect and hide in the bottom of the boat.


Remember:

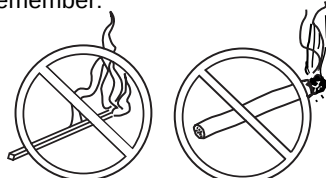

Do not use electrical devices such as cellular phones in the vicinity of a fuel leak or while fueling.



If you use a funnel, it has to be metal to ground the spout to the tank.

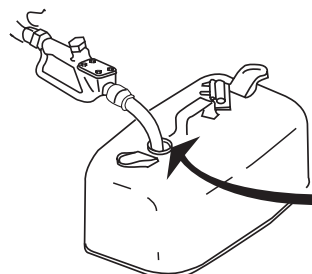

To avoid those static electric sparks, ground (touch) the spout against the tank.


If electrical parts are replaced or even removed from the outboard, check the following:

Wire and high voltage lead routing

- As shown in service manual
- Away from moving parts which could cut wires or wire insulation
- Away from engine cover latches which can catch and cut insulation from high voltage spark plug leads

Sleeves, boots, shields


- In position (to avoid shock hazard)
- Not torn or cracked

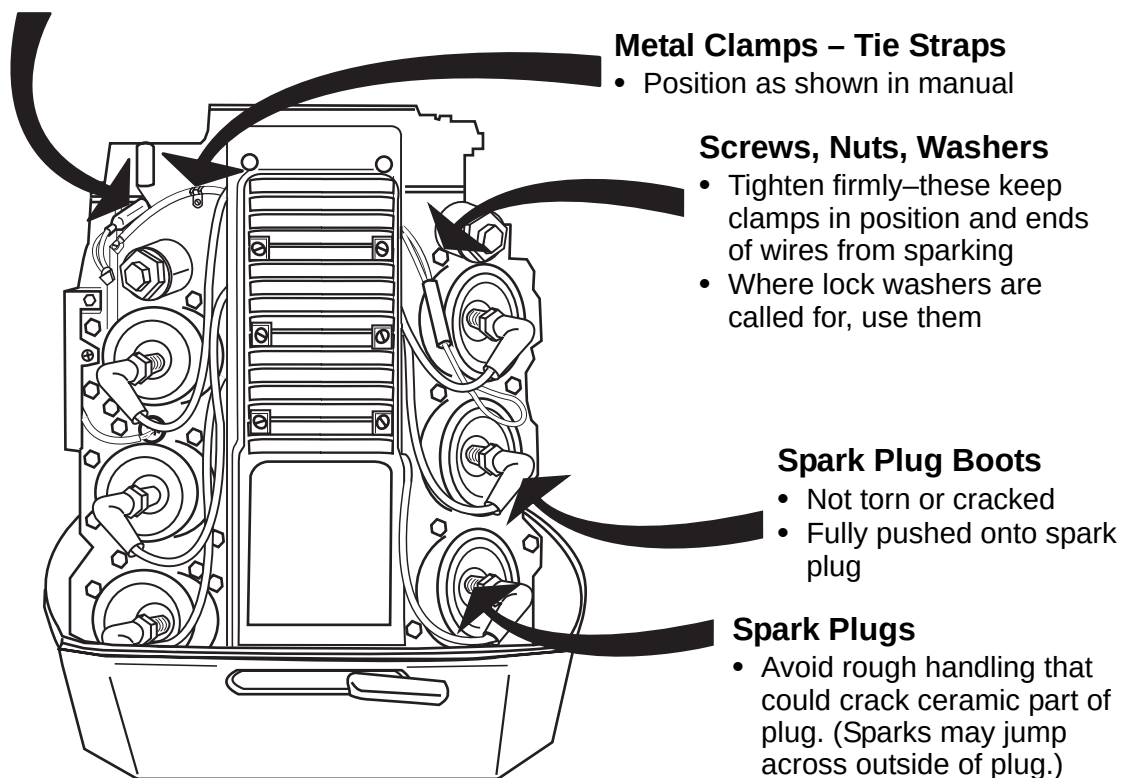

In transom area:

All Connections

- Clean
 - Tight
- (Prevents sparks)

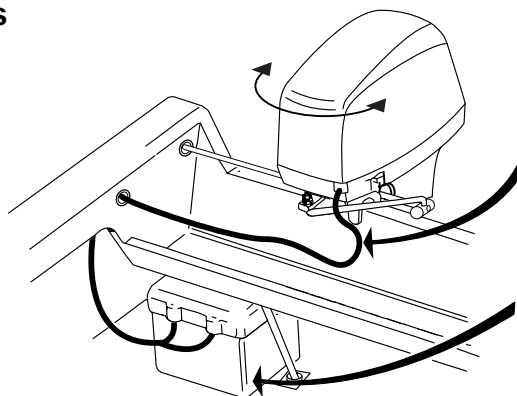

Electric Cable

- Not rubbing on sharp objects
- Enough slack to allow full turning without pull loads on cable (prevents sparks)


Batteries

- Secure in approved battery box or battery tray
- Battery terminals insulated
- No strain on cables

SAFETY


After repair on any part of the fuel system, pressure test engine portion of fuel system as shown:

When Storing:

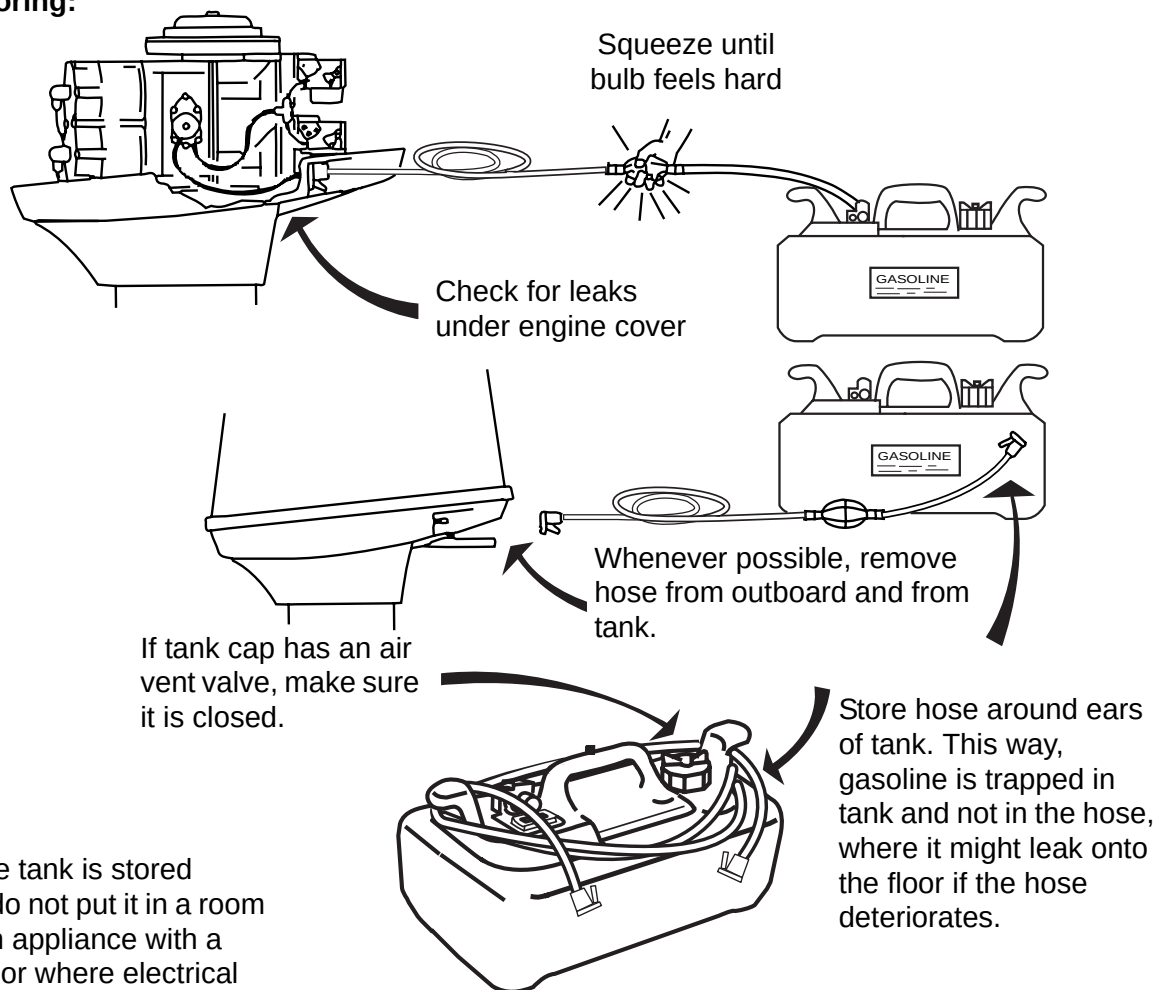

If gasoline tank is stored indoors, do not put it in a room having an appliance with a pilot light or where electrical appliances or switches (which may spark) will be used.


When Running:

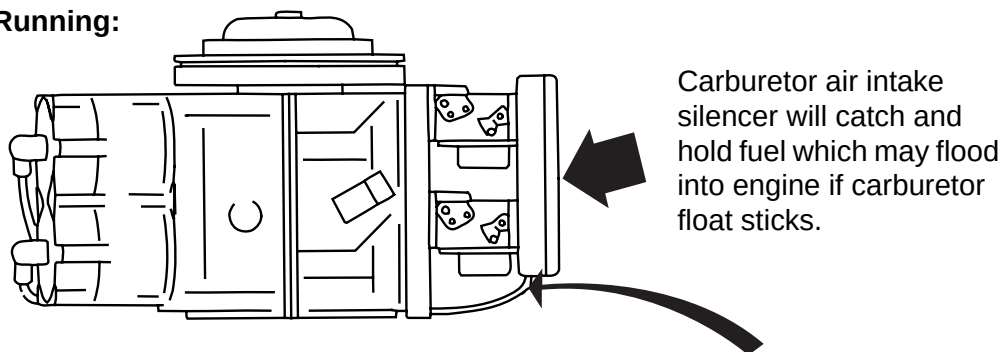

- Make sure silencer and its gaskets are on engine and drain hose is in place.
- Air silencer mounting screws are special lock screws. Use only the special screws.

Outboard Mounting System and Safety

The mounting system includes:


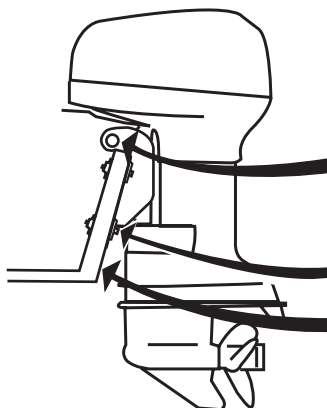


- outboard parts
- bolts, nuts, and washers
- boat's transom



What is most important?

- Outboard must **stay** in position on boat's transom.

What could happen?

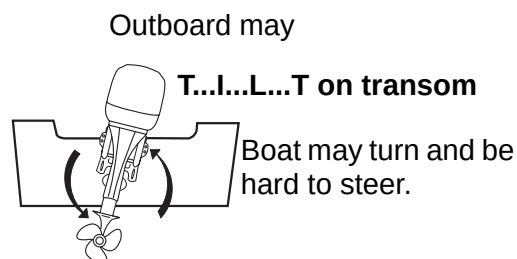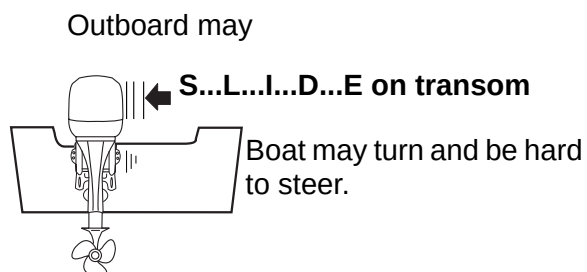


- If outboard hits something solid and does not stay on the transom, boat occupants may be injured from the outboard or its parts entering the boat.

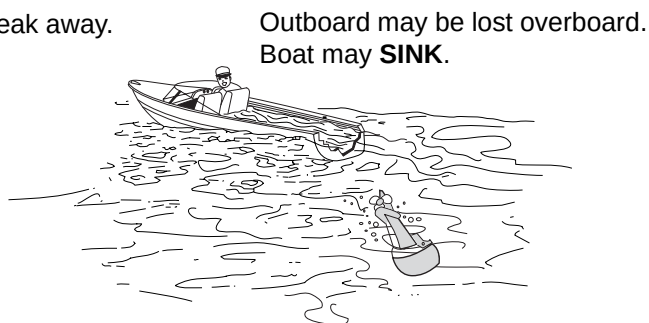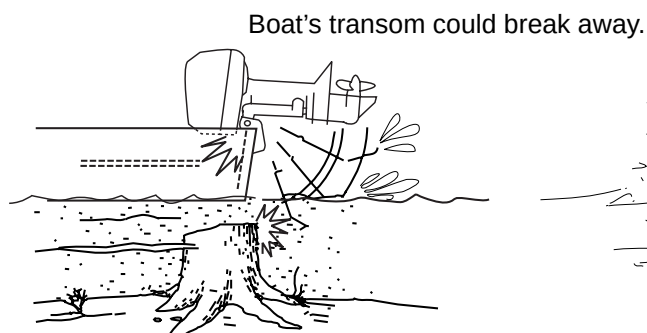

How Can Loss of Mounting Be Minimized?

- **Read, understand, and follow** manufacturer's **instructions**.
- Follow warnings marked "⚠" closely.

If weakened, parts could fail later on the water, when not expected

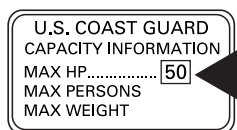


If boat plate shows...


Use only
or smaller




When rigging or fixing any boat, if transom looks weak, tell the owner.

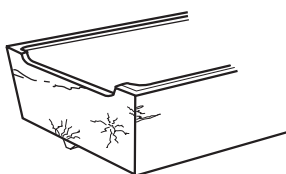

If transom is curved, outboard may come loose.

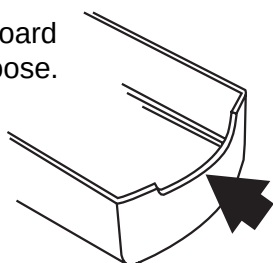


Mount on flat surface only.
Use shims to make surface flat.

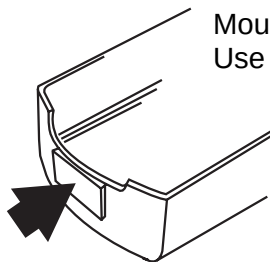

Use bolts, nuts, and washers supplied with outboard. They are usually special, and will not rust or weaken.




If owner tells you "I hit something really hard..."

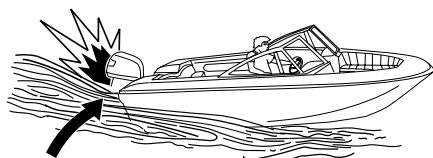

Check for a high speed blow to the lower unit.

OR...

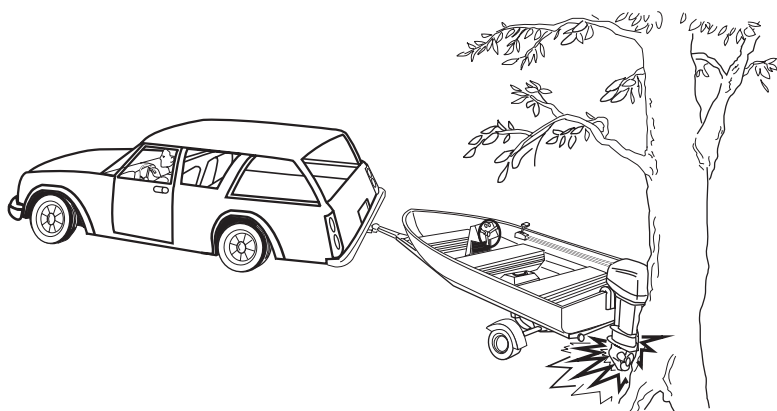

"I was backing up and I think the outboard may have hit a tree or something."

 
Check for a slow, heavy squash to the outboard.

- Look for damaged parts and loosened nuts and bolts in both the steering and mounting systems. Replace damaged parts.

Outboard Hydraulic Tilt/Trim Shock Absorption System and Safety


What is most important?

- Shock absorption system must always be ready to absorb some blows to the lower parts of the outboard.
- Outboard must not trim in too far suddenly.



What can happen?


Without shock protection, a blow like this could cause serious damage to the outboard and injury to boat occupants from the outboard or its parts entering the boat. Transom could break away and outboard may be lost overboard.

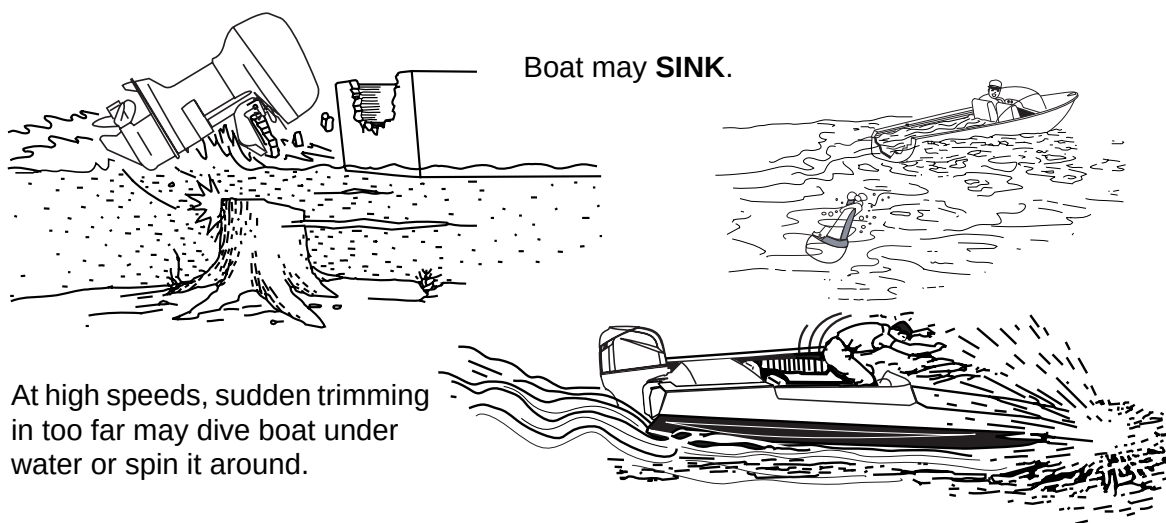

At high speeds, sudden trimming in too far may dive boat under water or spin it around.

How can possible conditions be minimized?

- **Read, understand, and follow** manufacturer's **instructions**.
- Follow warnings marked "⚠" closely.
- Test your work whenever possible.
- If oil leaks are seen in service areas, determine source. Keep reservoir filled.
- If outboard is hydraulic tilt/trim model, always return rod to hole position determined by boat operator and make sure angle adjusting rod retain is in locked position.

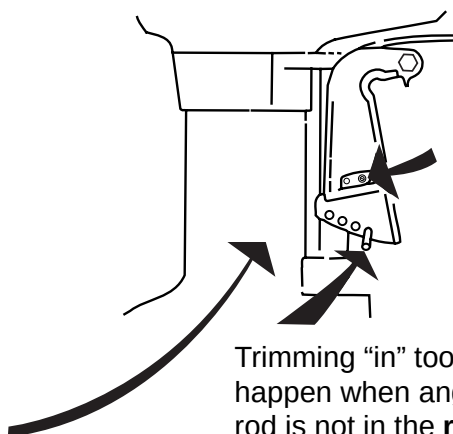


Make sure manual release valve is closed tight. Torque to 45 to 55 in. lbs. (5.1 to 6.2 N·m).

If left open, outboard has no shock protection.

Trimming "in" too far can happen when angle adjusting rod is not in the **right** hole or is not in **any** hole (lost).


Outboard Emergency Stop System and Safety

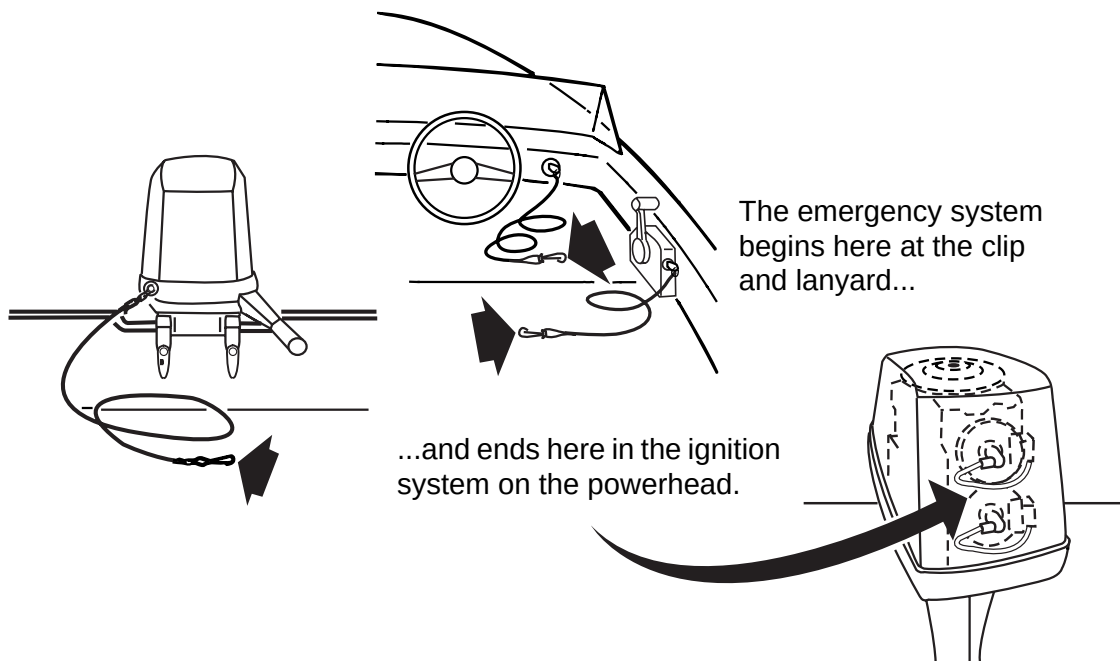

What is most important?


- The emergency stop system must **STOP** the engine when the clip is removed or the lanyard pulled from the emergency stop / key switch.

What could happen?

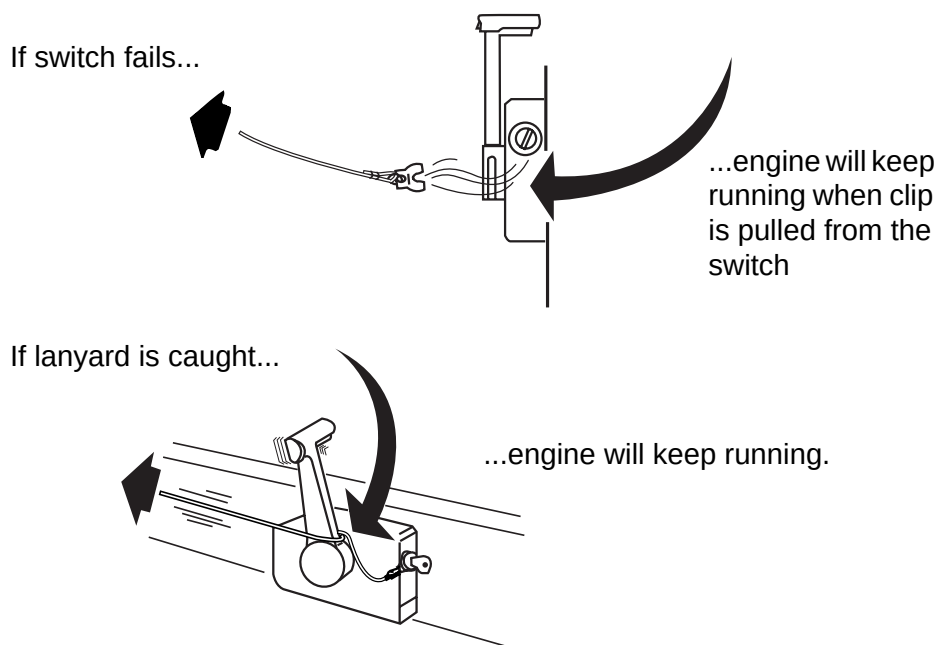


What could happen?


If lanyard is cut or frayed...

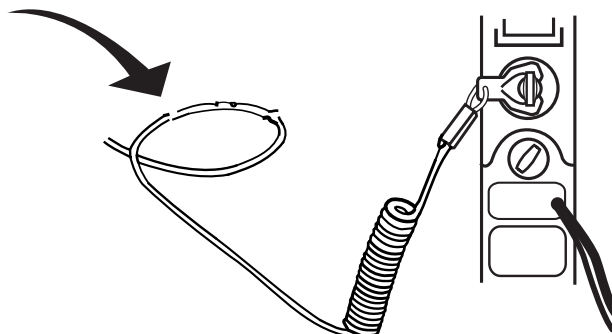

...lanyard or clip may break when pulled...

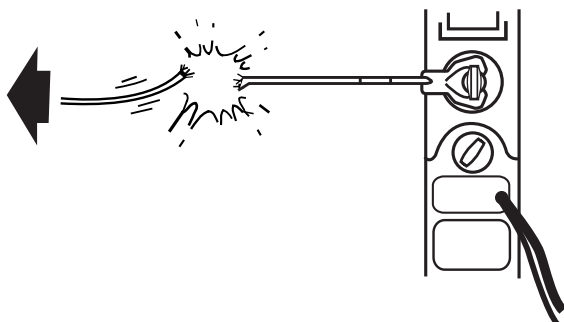

If engine does **NOT** stop when lanyard is pulled, an operator thrown from the boat could be hit as boat circles area. Or, boat may not turn but leave area as a runaway. Operator may drown and boat **WILL** run into something.

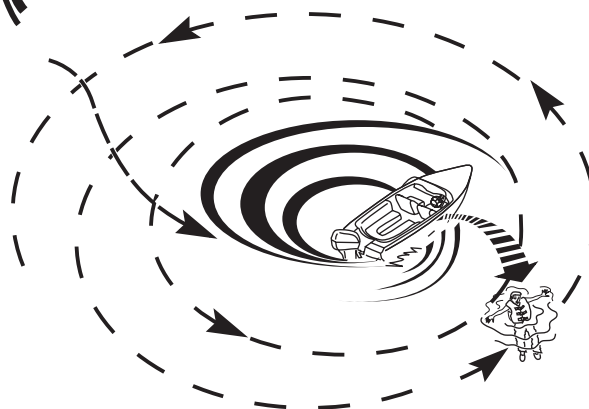

How can failure of the emergency stop system be minimized?

**When
rigging
or after
servicing**

- Read, understand, and follow manufacturer's instructions
- Follow warnings marked "⚠" closely.
- Assemble parts carefully.
- Inspect lanyard for cuts or fraying; clip for wear. Replace with original parts. Do not substitute.
- Locate control box and other items in area to keep lanyard from being caught.
- **ALWAYS TEST EMERGENCY STOP SYSTEM. PULL LANYARD. ENGINE MUST STOP. IF IT DOES NOT, REPAIR BEFORE NEXT USE.**

Summing up

Now you know some things that can take the joy out of boating.

No doubt about it—proper safety takes time!

- Reading and understanding instructions
- Re-reading warnings marked “⚠”
- Putting parts together correctly
- Making correct adjustments
- Testing your work

And making sure

- Worn or damaged parts are replaced
- Replaced parts are like originals in every way
- Customer is told of things which need attention

But, do you really want the alternative?

MARINE PRODUCTS AND THE SAFETY OF PEOPLE WHO FIX THEM


The first part of this Safety section talked about safe boating and how you, the technician, can help keep it safe for the boater. But what about you? Technicians can be hurt while:

- Rigging boats
- Troubleshooting problems
- Fixing components
- Testing their work

Some of these safety issues you will know, others you may not.

Handling Outboards

When lifting outboards

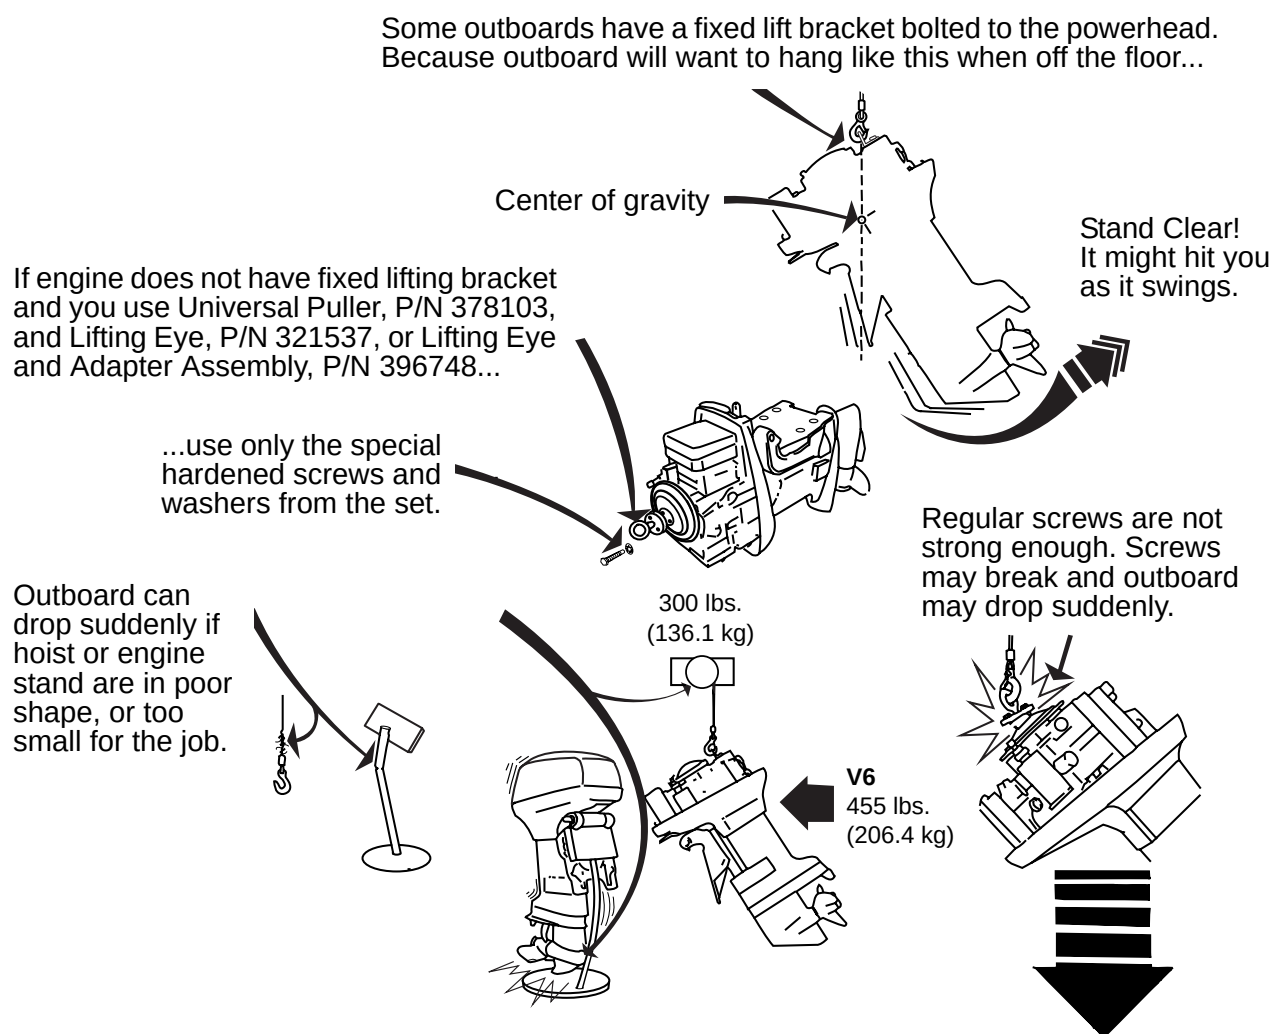


- Make sure shop aids have extra capacity, and keep them in good repair.

SAFETY

Running outboard with engine cover removed

Engine cover is a guard. When you remove cover/guard to work on the outboard, remember: loose clothing (open shirt sleeves, neckties), hair, jewelry (rings, watches, bracelets), hands and arms can be caught by the spinning flywheel.

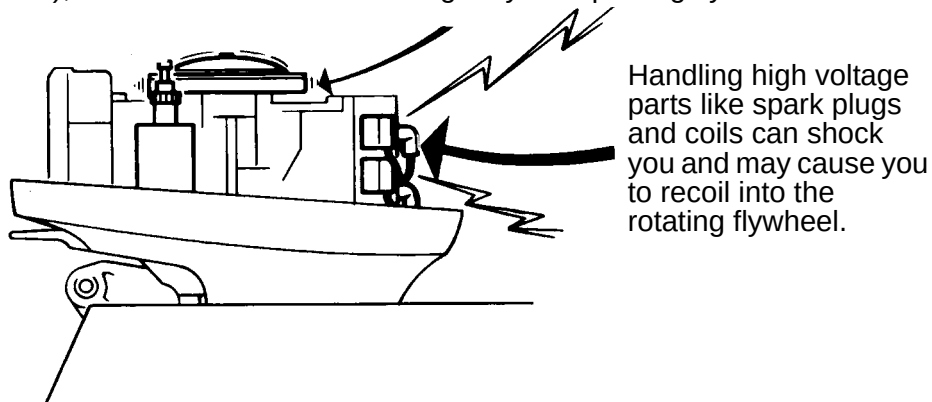

- Two people working together on a live outboard must look out for each other. Never, ever, use the key to start the outboard before signaling your partner. He may be leaning over the outboard with hands on the flywheel, handling a “hot” electrical part, or near the propeller.

Outboard starting at the wrong time


When you do things that turn the flywheel like:

- Off-season storage fogging (oiling) of outboard;
- Removing propeller with a powered tool;
- Electrical system checks;
- Servicing the flywheel; or
- Any other actions **ALWAYS...**

1) Turn key switch OFF

2) Twist and remove ALL spark plug leads

3) Shift to NEUTRAL

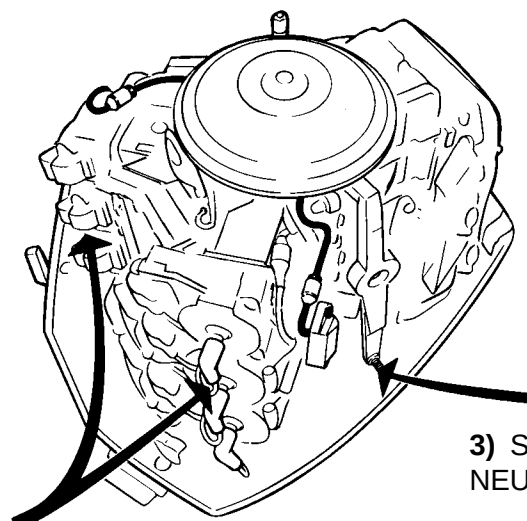

Check prop shaft. Is outboard really in NEUTRAL?

NO SPARK



NO START



NO SURPRISES


Running outboard too fast (Overspeeding)

- “Too fast” means running faster than outboard normally runs on boat.

Running too fast can happen when:


1) Using a flushing device...

Turn on water before starting outboard.
Keep engine speed below 2000 RPM.
With no load, outboard will run too fast very easily. Wear eye protectors.

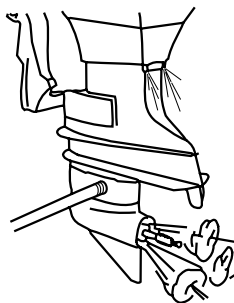

2) Running with the wrong test wheel...

This may happen if outboard runs too fast.

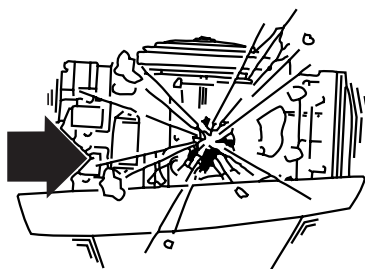

Use the right test wheel.

Running outboards: Exhaust fumes



DANGER



DO NOT run the engine indoors or without adequate ventilation or permit exhaust fumes to accumulate in confined areas. Engine exhaust contains carbon monoxide which, if inhaled, can cause serious brain damage or death.

- Whenever running the engine, assure there is proper ventilation to avoid the accumulation of carbon monoxide (CO), which is odorless, colorless, and tasteless, and can lead to unconsciousness, brain damage, or death if inhaled in sufficient concentrations. CO accumulation can occur while docked, anchored, or underway, and in many confined areas such as the boat cabin, cockpit, swim platform, and heads. It can be worsened or caused by weather, mooring and operating conditions, and other boats. Avoid exhaust fumes from the engine or other boats, provide proper ventilation, shut off the engine when not needed, and be aware of the risk of backdrafting and conditions that create CO accumulation. In high concentrations, CO can be fatal within minutes. Lower concentrations are just as lethal over long periods of time.

Running outboards: Propellers





DANGER




Contact with a rotating propeller is likely to result in serious injury or death. Assure the engine and prop area is clear of people and objects before starting engine or operating boat. Do not allow anyone near a propeller, even when the engine is off. Blades can be sharp and the propeller can continue to turn even after the engine is off. Always shut off the engine when near people in the water.

Eye protection

Eyes need protection when:

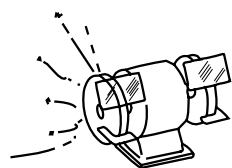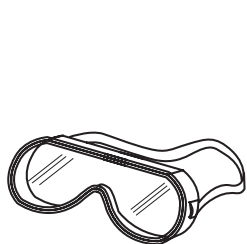



- Grinding

 

- Spraying cleaners and paints

- Chiseling

Tip: When steel on steel, use plastic- or brass-type hammers. They don't chip off as easily as steel hammers.

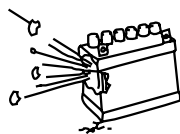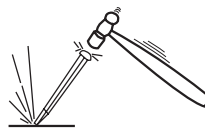

Protect eyes from:

- Acid




- Ends of cables

**Wear
Safety
Glasses**




Handling Lead/Acid Batteries

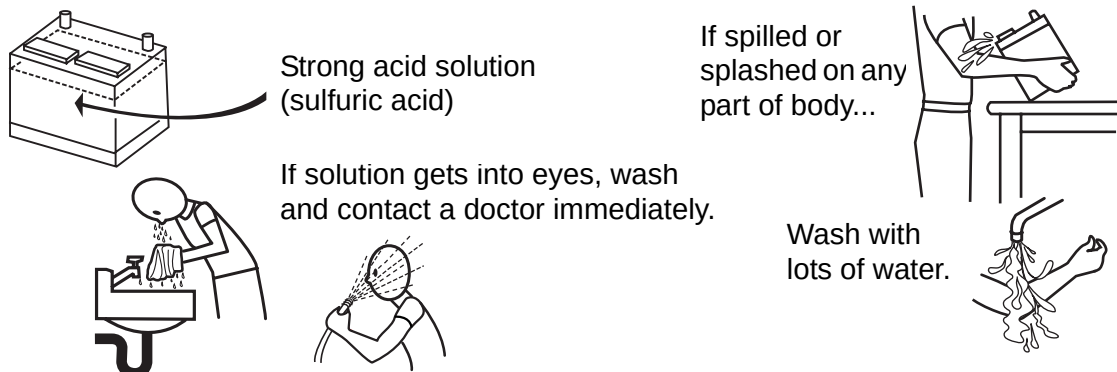

Charging lead acid batteries

- 1) Attach and remove these cables with charger **UNPLUGGED** from 110 V wall socket. (This prevents shocks if charger is defective.)
- 2) Observe correct polarity when connecting these larger leads.
- 3) Always charge in a well ventilated area. Charging causes acid solution to give off hydrogen gas through the vents in the caps. **Make sure vents are open.** If clogged, pressure inside may build. Battery may **EXPLODE**.

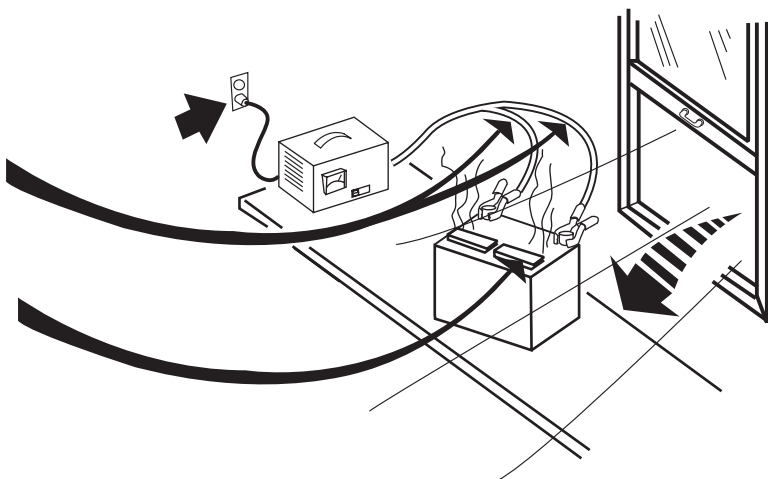


Battery gas is explosive!

While charging or discharging, remember:

- No smoking
- No flames
- No sparks



Never remove charger cables from battery posts. It is a sure way to make a lot of sparks in an area surrounded by battery gas.

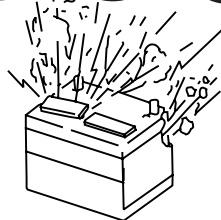

DO NOT check battery charge by placing metal objects across posts. You will make sparks and serious burns are possible.



After charging:


- Shut off charger
- Pull charger plug out of 110 V outlet
- Take charger cables off battery posts

Gasoline – Handle With Care!

Gasoline vapor and air mixtures explode easily and violently when mixed as shown...

When you smell ANY odor of gasoline, explosion is possible.

Gasoline fumes are heavy and will sink to the lowest point in the boat or room and will STAY there, WAITING...

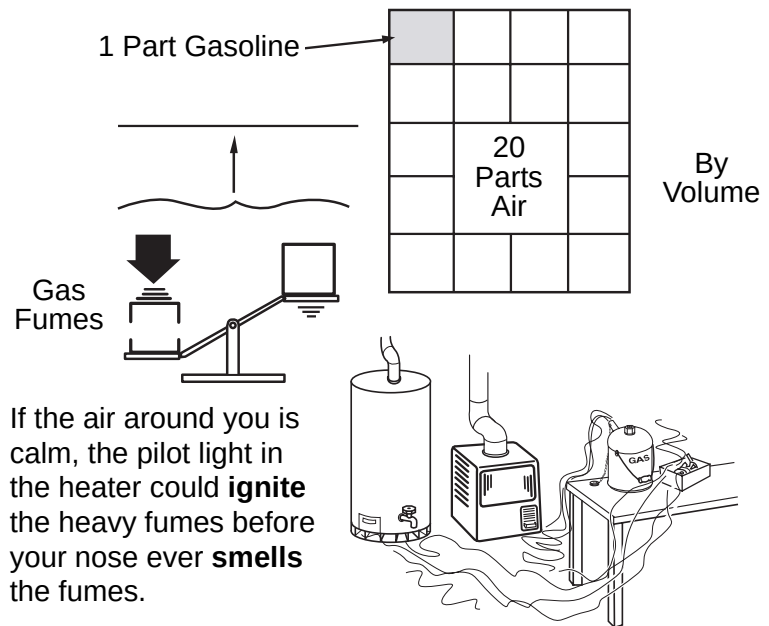

What can you do?



Store gasoline in sturdy, approved, sealed gas can and keep outside.


- Always store gasoline outside in a safe can (flame arrester and pressure relief valve in pour spout).
- Fill portable tanks outside of boat. Spillage will collect in bottom of boat.
- Use fuel as fuel **ONLY**, **not** for a cleaner or degreaser.
- If fumes are smelled in shop, basement, or garage, **immediately**:
 - Put out open flames, cigarettes, sparking devices;
 - Wipe up spill or leak;
 - Get towels and rags outside fast;
 - Open doors and windows; and
 - Check **lowest** area for fumes.

Be aware of items in and around repair area which can ignite fumes. Control them if fumes are smelled.

- Matches, cigarettes, blow torches, welders
- Electric motors (with unsealed cases)
- Electric generators (with unsealed cases)
- Light switches
- Appliance pilot lights or electric ignitors (furnace, dryer, water heaters)
- Loose wires on running outboards
- Other variables which may ignite fumes

How many of these are in your repair area?

Hazardous Products

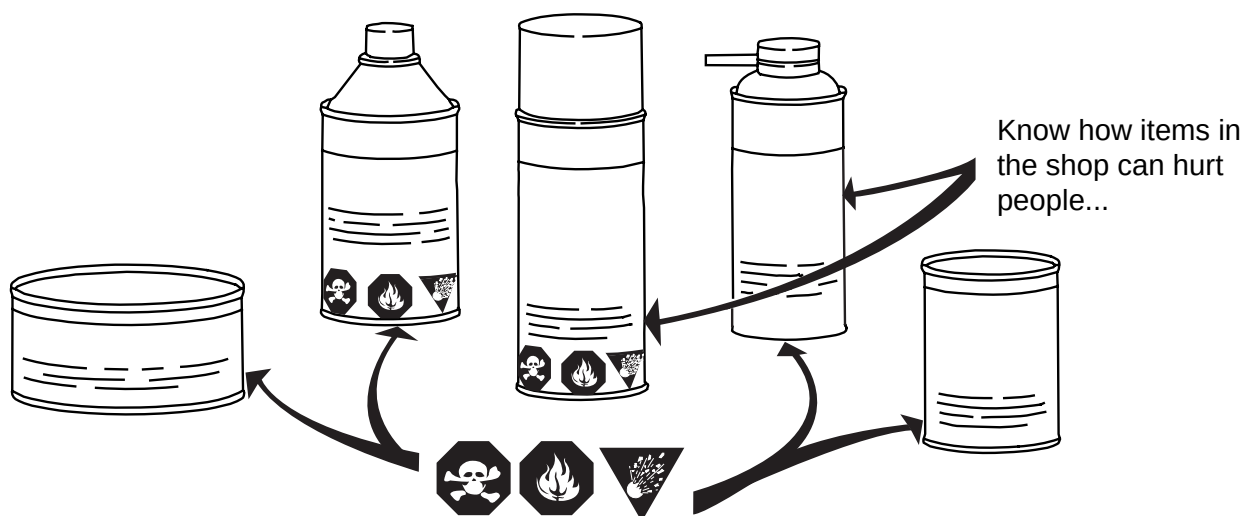


READ

- "How and where to use"
- "How to give First Aid." Have recommended First Aid materials on hand should an emergency arise
- "How to dispose of can"

It's all on the **back of the can or bottle label**.

And remember: Little children are very curious and will try to taste everything so **keep containers away from children!**

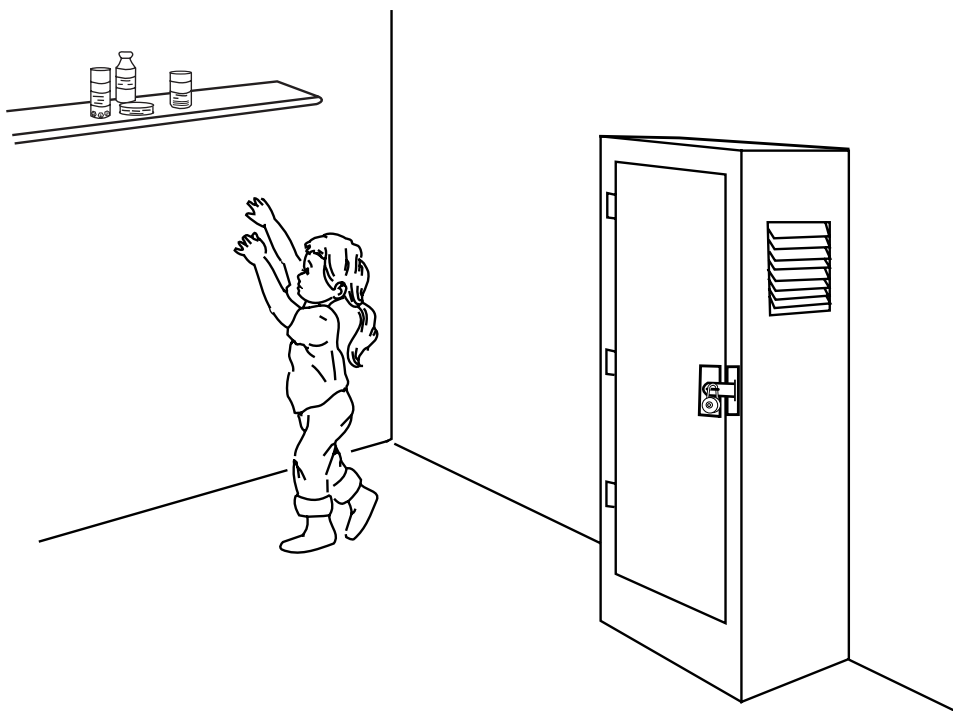

Safety Awareness Test

The Technician's Safety Awareness Test....

- 1)** Did you read this Safety section from page S–1 to page S–24?
- 2)** Are you ready to take responsibility for the safe maintenance practices and procedures of your repair shop, co-workers, and technicians?
- 3)** Do you understand all the safety precautions and instructions contained in this entire service manual?
- 4)** Will you follow all safety warnings, precautions, instructions and recommendations outlined in this service manual?
- 5)** Do you understand that the service manual as a whole and this Safety section, in particular, contain essential information to help prevent personal injury and damage to equipment and your customers?
- 6)** Have you received training related to common shop safety practices to protect yourself and others around you?
- 7)** When replacement parts are required, will you use *Evinrude®/Johnson® Genuine Parts* or parts with equivalent characteristics, including type, strength and material?
- 8)** Are you ready to follow the recommendations in this service manual before you service any boat or outboard?
- 9)** Do you understand that safety-related accidents can be caused by carelessness, fatigue, overload, preoccupation, unfamiliarity of operator with the product, drugs and alcohol, just to name a few?

INDEX

A

Abbreviations 12

Accessories

- Electrical Bracket 81
- Installation 82
- Primer 81
- Rectifier 81
- Removal 81
- Solenoid 81

Adjustments

- Control Cable 41
- Idle Speed 162
- Linkages 59
- Steering Friction 162
- Throttle Friction 162
- Tilt Friction 162

Air Silencer 58

Amphenol Connector Servicing 82

Anodes

- Anti-Corrosion 52
- Continuity Check 52
- Inspection 62

B

Batteries

- Cable Installation 42
- Cables 33
- Charging System Tests 69
- Connections 33, 57
- Installation 33
- Maintenance 57
- Pre-Season Service 64
- Requirements 19, 33
- Storage 63

Bearing

- Driveshaft 172
- Forward 173
- Pinion 173
- Propeller Shaft Bearing Housing 174

Break-In

- Oiling 44
- Procedure 46

C

Cable, Hose, and Wire Routing 42

Cables

- Battery Cables 42

Cam Follower Pickup Point

- 9.9/15 60

Carburetor 107

- Assembly 111
- Cleaning and Inspection 109
- Description 105
- Disassembly 108
- Emissions Information 107
- Float Drop Setting
 - 9.9/15 18, 112
- Float Valve Assembly 109
- Fuel Mixture Enrichment 105
- Installation 113
- Linkage Lubrication 55
- Mixture Adjustment 114
- Needle Valves 110
- Removal 107

Charge Coil

- Description 86
- Installation 101
- Removal 100
- Test 91

Charging System

- Check Chart 69
- Components 68
- Running Alternator Output Test 69

Connecting Rod

- Assembly – 9.9/15 137
- Disassembly – 9.9/15 132
- Removal – 9.9/15 132

Control Cable

- Adjustments 41
- Routing 32

INDEX

Cooling

- Engine Temperature Check 122
- Flushing 53
- Maintenance 53
- Thermostat 19
- Type 19
- Water Intake Screens 54

Cooling System

- Operating Temperatures 46
- Turbulence 36

Corrosion

- Anodes 52
- Battery Terminals 57
- Cylinder Walls 134
- Exterior Finishes 52
- Metallic Components 52
- Steering Cable 54
- Winter Storage 63

Crankcase

- Assembly – 9.9/15 140
- Cleaning 134
- Disassembly – 9.9/15 129
- Installation – 9.9/15 143
- Upper Crankcase Seal 123

Crankshaft

- Assembly – 9.9/15 138
- Disassembly – 9.9/15 131

Cylinder Head

- Cleaning 133
- Inspection 134
- Removal – 9.9/15 130

D

Driveshaft Bearing

- Installation 178
- Removal 172

Driveshaft Seals

- Installation 178
- Removal 172

E

Electric Starter

- Adjustment 127
- Assembly 79
- Cleaning and Inspection 78

- Disassembly 77

- Installation 80

- Lubrication 57

- No Load Current Draw Test 77

- Removal 77

- Test 127

Electrical Cables

- Battery 42

- Remote Electrical Harness 42

Electrical Connectors

- Amphenol Connector Servicing 82

Emergency Stop Switch

- Installation 32

- Key Switch 87

- Operation Check 45

- Stop Button 87

- Test 89

Emissions Information 13, 107

Exhaust Housing

- Installation – 9.9/15 143

- Removal – 9.9/15 129

Exterior Finish Protection 52

F

Flushing, Cooling System 53

Flywheel

- Description 68, 86

- General 86, 97

- Indexing 88

- Installation 98

- Removal 97

Forward Bearing

- Installation 177

- Removal 173

Fuel Filter

- General 106

- Maintenance 58

- Requirements 35

Fuel Pump

- Assembly 107

- Cleaning 106

- Description 105

- Disassembly 106

- Pressure Test 106

- Servicing 106

Fuel System

- Additives 18, 43
- Carburetor Servicing 107
- Components 105
- Filter 35
- Fuel Filter 58
- Fuel Requirements 43
- Minimum Octane 43
- Pre-Season Checks 64
- Priming 44
- Requirements 34
- Storage Recommendations 63
- Trouble Check Chart 104

G

Gearcase

- Assembly – 9.9/15 179
- Bearings
 - Installation 176
 - Removal 172
- Cleaning 175
- Disassembly – 9.9/15 171
- Inspection 175
- Installation 168
- Leak Test Procedure 166
- Lubricant 56
- Lubricant Replacement 165
- Removal 167
- Seal
 - Installation 176
 - Removal 172

H

Hoses

- Fuel System 34
- Grommet 42
- Maintenance 58

I

Idle Speed Adjustment

- 9.9/15 61

Ignition

- Charge Coil Test 91
- Components 86
- Ignition Coil 19
- Ignition Coil Tests 95
- Maximum Spark Advance – 9.9/15 61
- Power Pack Cranking Output Test 94
- Power Pack Running Output Test 94
- RPM Limit 19
- Sensor Coil Test 92
- Stop Circuit Test 89
- Total Output Test 89
- Troubleshooting 88

Ignition Coil

- Analyzer Tests 96
- Description 87
- Installation 102
- Power Test 96
- Removal 102
- Resistance Test 95
- Specifications 95
- Surface Leakage Test 96
- Tests 95

Ignition Plate

- Installation 99
- Removal 99

Inspection Schedule 50
Intake Manifold

- Assembly 116
- Description 105
- Disassembly 116
- Inspection 115
- Installation 117
- Removal 115

K

Key Switch 87

- Operation Check 45

L

Linkage Adjustments

- 9.9/15 59

INDEX

Lubrication 18, 54

- Electric Starter 57
- Engine Oil 44
- Gearcase 56
- Midsection – 9.9/15 55
- Propeller Shaft 56
- Schedule 50
- Shift Linkage 55
- Starter Shaft 57
- Steering 54
- Throttle Linkage 55

M

Maintenance Schedule 50

Manual Starter

- Cleaning and Inspection 187
- Rope Length 184
- Rope Replacement 185
- Torque Chart 184

Model Designation 7

Models Covered 6

Mounting the Engine 39

- Hull Preparation 36

N

Neutral Start Protection

- Electric Starter 127
- Manual Starter Lockout 127

O

Oiling Ratio 18

Oiling System

- Engine Lubricant 44
- New Engine Set-Up 44

Oversize Cylinder Bore

- 9.9/15 135

P

Pinion Bearing

- Installation 177
- Removal 173

Piston

- Assembly – 9.9/15 136
- Cleaning 134
- Inspection – 9.9/15 135
- Removal – 9.9/15 132

Power Pack 86

- Cranking Output Test 94
- Description 86
- Running Output Test 94

Powerhead

- Assembly – 25/30 143
- Assembly – 9.9/15 136
- Cleaning 133
- Disassembly – 9.9/15 129
- Inspection – All Models 134
- Installation – 9.9/15 143
- Removal – 9.9/15 128
- Serial Numbers 6

Predelivery Checks 45

Pre-Season Service 64

Priming

- Fuel System 44

Propeller

- Inspection 165
- Installation 47
- Selection 47
- Test Propeller 18

Propeller Shaft Bearing Housing

- Bearing Installation 176
- Bearing Removal 174
- Removal 171
- Seal Installation 176
- Seal Removal 174

R

Rectifier 68

- Description 68
- Resistance Tests 70

Remote Controls

- Cable Adjustment 41
- Cable Adjustments 40
- Installation 32
- Selection 32

Rigging

- Boat 32
- Cable, Hose, and Wire Routing 42
- Control Cable Adjustments 40
- Outboard 40

Rope Replacement 185

S

Safety S-1
Sensor Coil 86
 Description 86
 Installation 101
 Removal 100
 Test 92
Serial Number Location 6
Shift Lever Detent – 9.9/15 62
Shift Linkage
 Installation 125
 Removal 124
Shift Rod Bushing
 Installation 176
 Removal 173
Shift Rod O-ring
 Installation 176
 Removal 173
Shop Aids 27
Spark Plugs
 Maintenance 58, 97
 Recommended Type 19, 58
 Replacement Schedule 51
Special Tools 21
Start Circuit Test
 Start Switch 72
 Starter Solenoid 76
Start Switch
 Installation 126
 Removal 126
 Test 72
Starter
 Circuit Voltage Test 72
 Solenoid Test 76
 Voltage Drop Test 75
Start-In-Gear Protection 46
Stator
 Description 68
 Resistance Tests 70
Steering
 Friction Adjustment 162
Steering Handle
 Assembly 151
 Disassembly 150
 Inspection 151

Steering System

 Lubrication 54
 Requirements 38
Stern Bracket 159
Stop Button 87
Stop Circuit Test 89
Storing the Engine 63
Submerged Engines 64
Swivel Bracket
 Components 160
Synchronization and Linkage Adjustments
 9.9/15 59

T

Tachometer
 Circuit Test 71
 Pulse Setting 19, 46
Temperature
 Operating 46
 Operation below freezing 44
Ten Hour Inspection 62
Thermostat
 Removal 130
Throttle
 Friction Adjustment 162
 Wide Open Throttle Adjustment – 9.9/15
 61
Tilt Friction Adjustment 162
Timing Pointer 88
Tools 21
 Ball Hex Screwdriver, P/N 327622 60
 Bearing Cup Installer, P/N 319929 177
 Bearing Installer, P/N 319931 – 9.9/15 178
 Bearing Installer, P/N 339751 – 9.9/15 176
 Bearing Puller, P/N 432130 173, 175
 Bearing Remover, P/N 319880 – 9.9/15
 173, 174
 Coil Locating Ring, P/N 334994 102
 Crankcase Head Seal Installer, P/N
 433391 141
 Crimping Pliers, P/N 322696 82
 Cylinder Bore Gauge, P/N 771310 135
 Drive Handle, P/N 311880 177
 Float Gauge, P/N 324891 111
 Flywheel Holder, P/N 771311 97
 Flywheel Holding Tool 97

INDEX

Gearcase Bearing Housing Puller, P/N 386631 171
Lifting Eye, P/N 321537 S-17
Pack Load Adapter, P/N 507983 94
Pin Insert Tool, P/N 322697 82, 153
Pin Remover, P/N 322698 82
Puller Bridge, P/N 432127 172, 174, 175
Retaining Ring Pliers 121, 133
Ring Compressor, P/N 339754 138
Ring Compressor, P/N 339755 (oversize) 138
Seal Installer, P/N 326271 123, 141
Seal Installer, P/N 326554 – 9.9/15 178
Seal Installer, P/N 342663 – 9.9/15 176
Seal Remover/Installer Kit, P/N 391060 123
Shift Rod Bushing Installer, P/N 304515 176
Shift Rod Bushing Remover, P/N 327693 173
Slide Hammer, P/N 391008 173
Slide Hammer, P/N 432128 173
Small Puller Jaws, P/N 432131 172, 174
Socket Removal Tool, P/N 322699 82, 149
Starter Spring Installer Kit, P/N 342682 184, 185, 186, 187, 188

Taper Pin Tool 121, 130
Temperature Gun, P/N 772018 122
Thermal Joint Compound, P/N 322170 122
Torx Screwdriver, P/N 351204 114
Twist-Grip Remover, P/N 390767 150
Universal Pinion Bearing Remover and Installer, P/N 391257 177
Universal Puller Set, P/N 378103 97, S-17
Wrench, P/N 334359 173
Wrist Pin Pressing Pin, P/N 392511 133, 136
Yoke Locator, P/N 319991 179

Torque Specifications, Standard 20

Troubleshooting

Charging System 69
Fuel System 104
Ignition 88

W

Water Intake Screens

Inspection 53, 54


Water Pump

Disassembly 169
Inspection 169



Winterizing 63

9.9 - 15 HP



MWS Instrument Wiring Harness

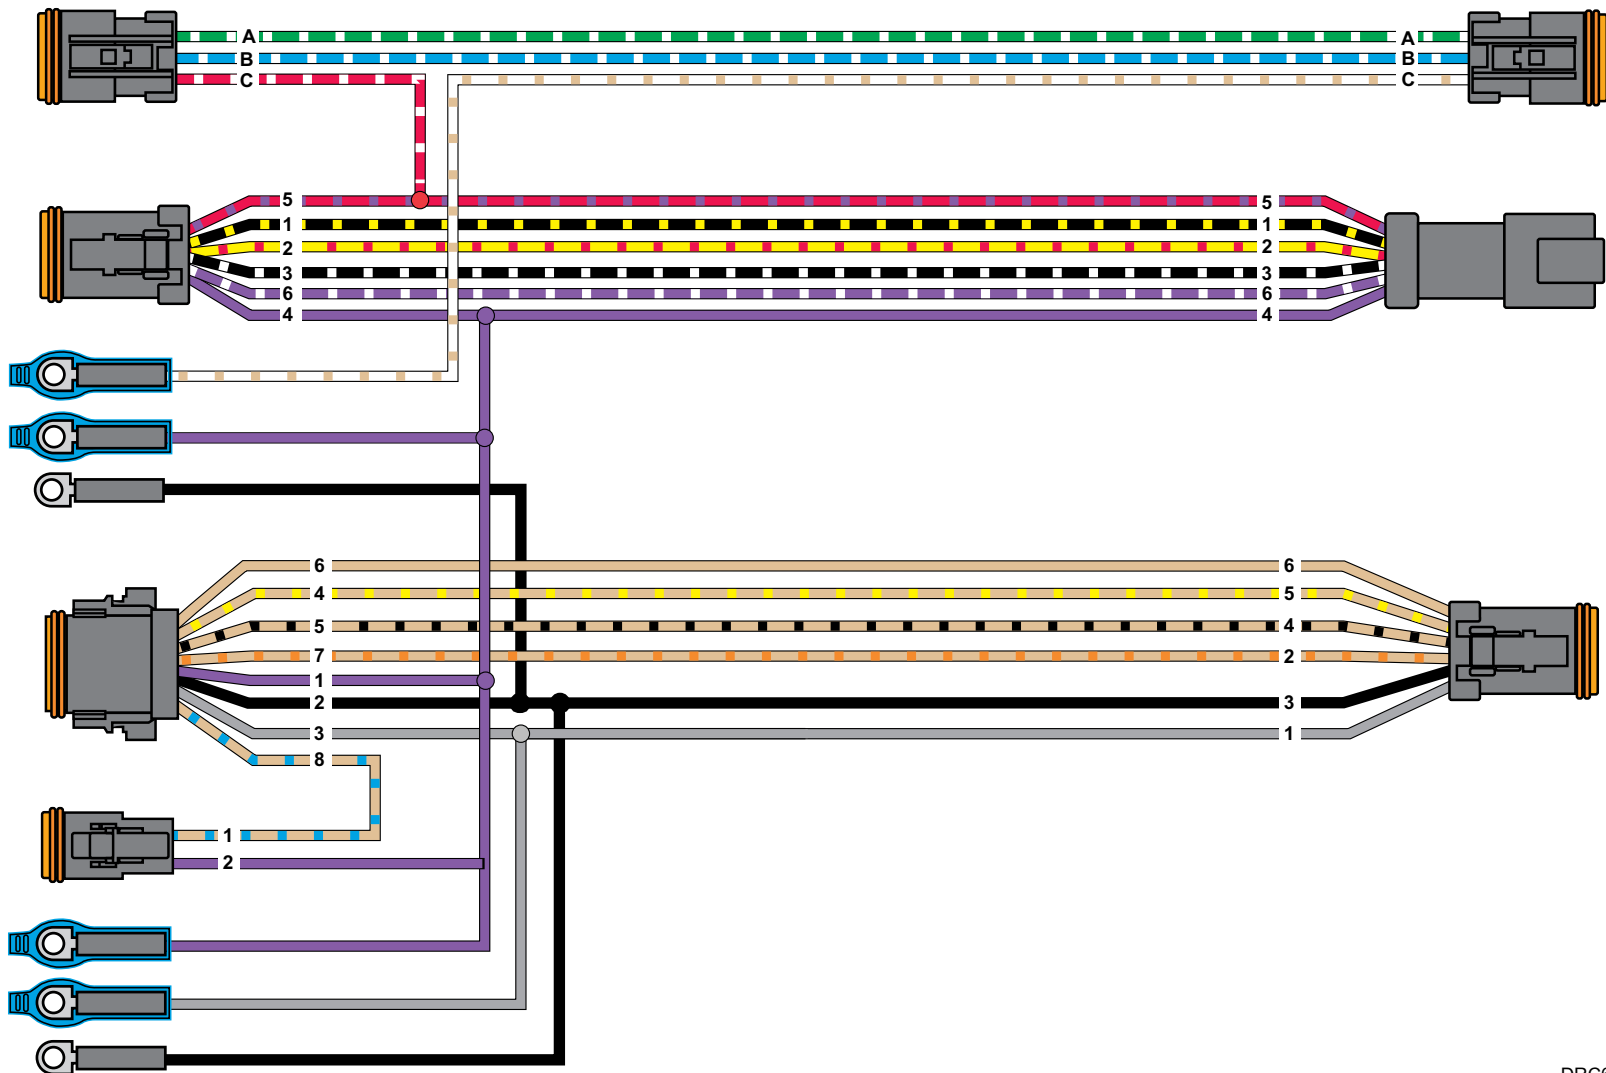


Lanyard Switch / Emergency Stop Circuits

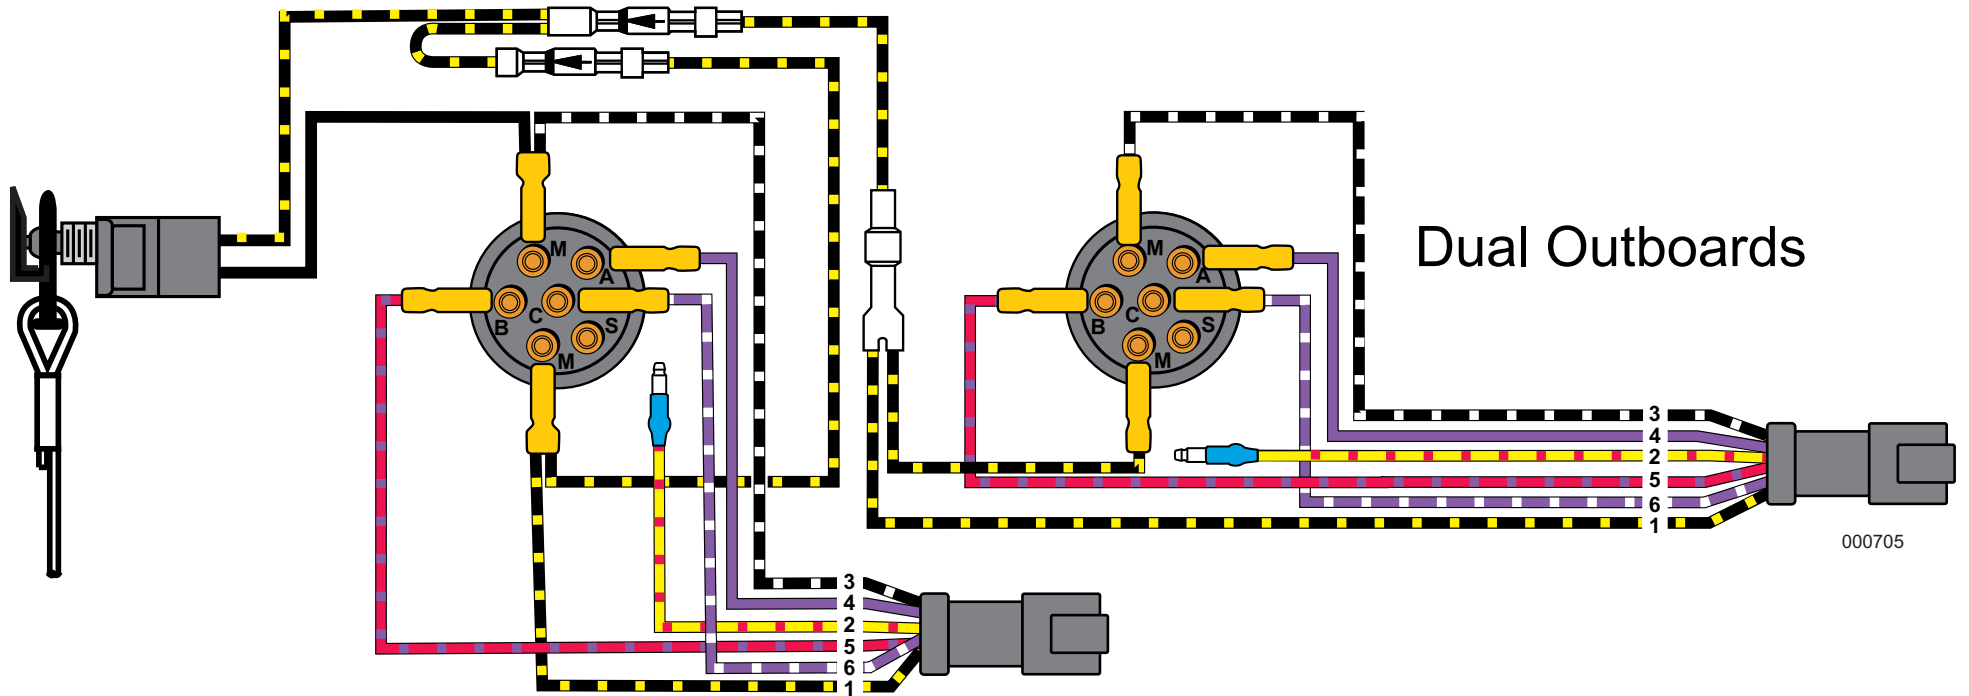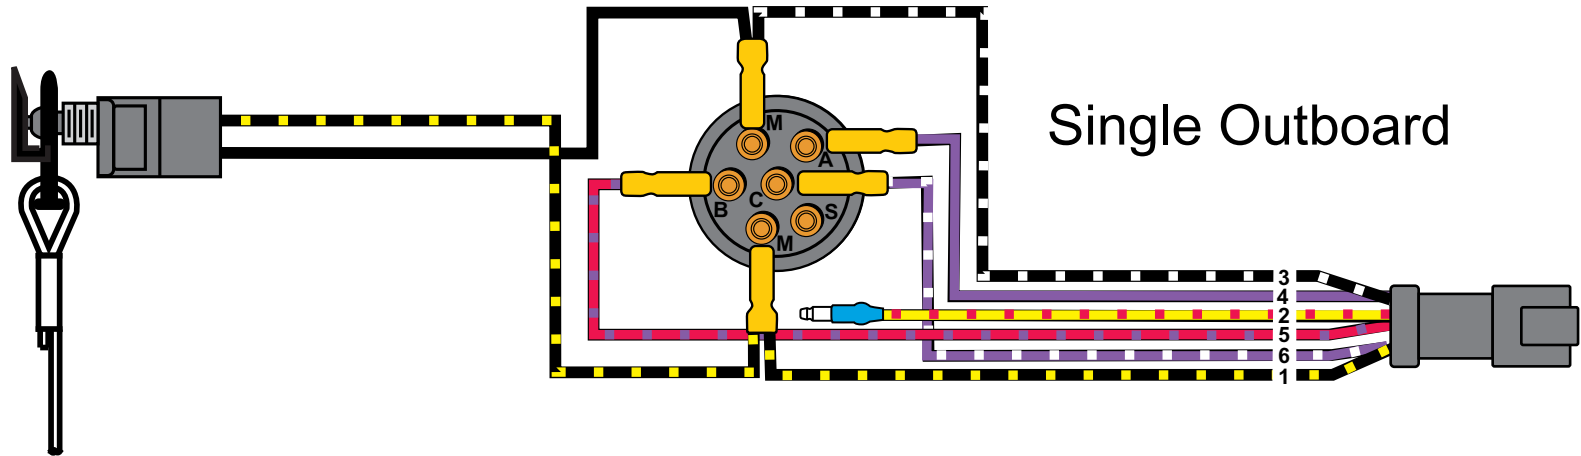


MWS Key Switch and Neutral Safety Switch

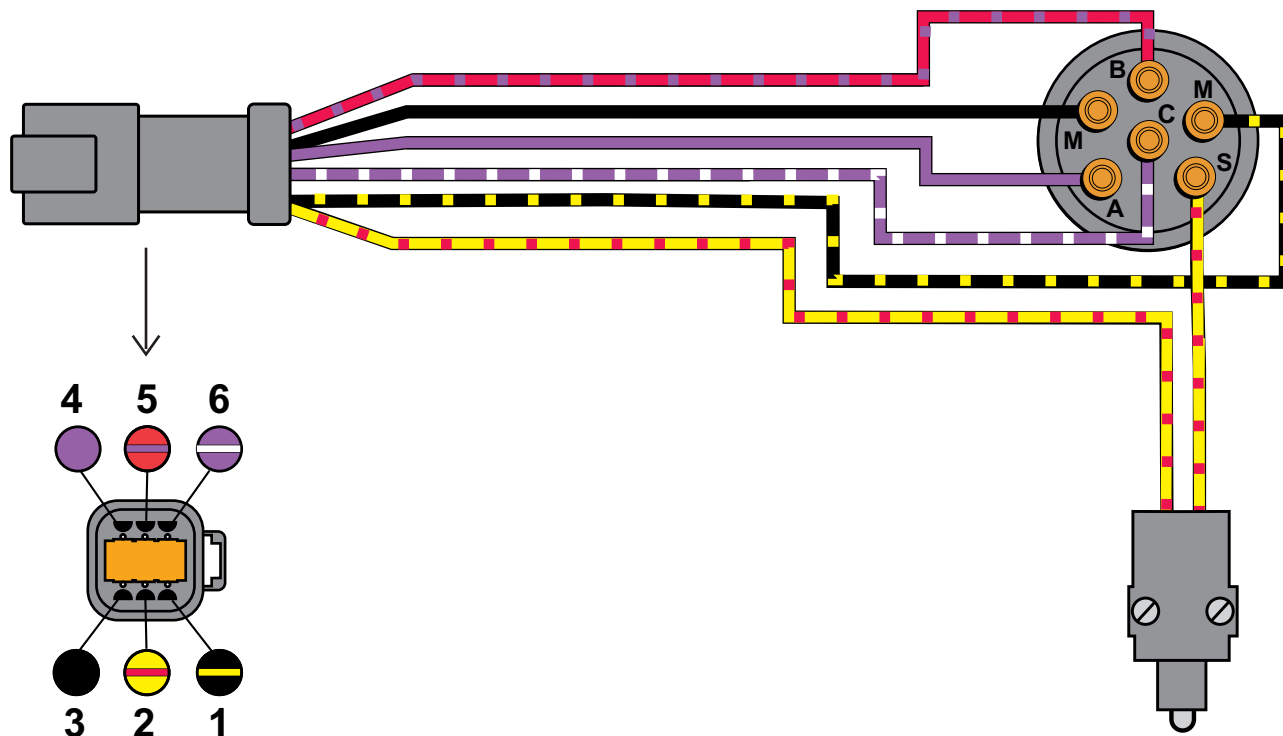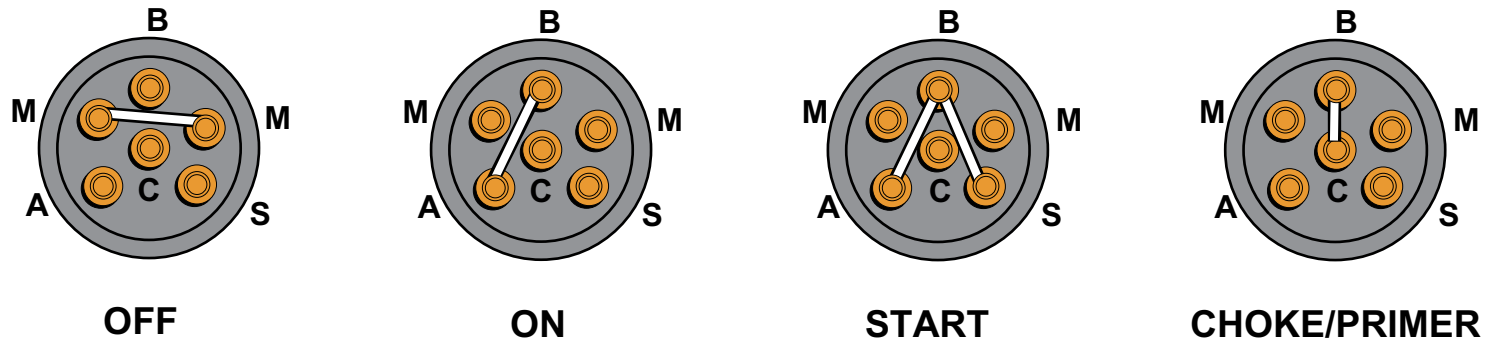

MWS DASHBOARD

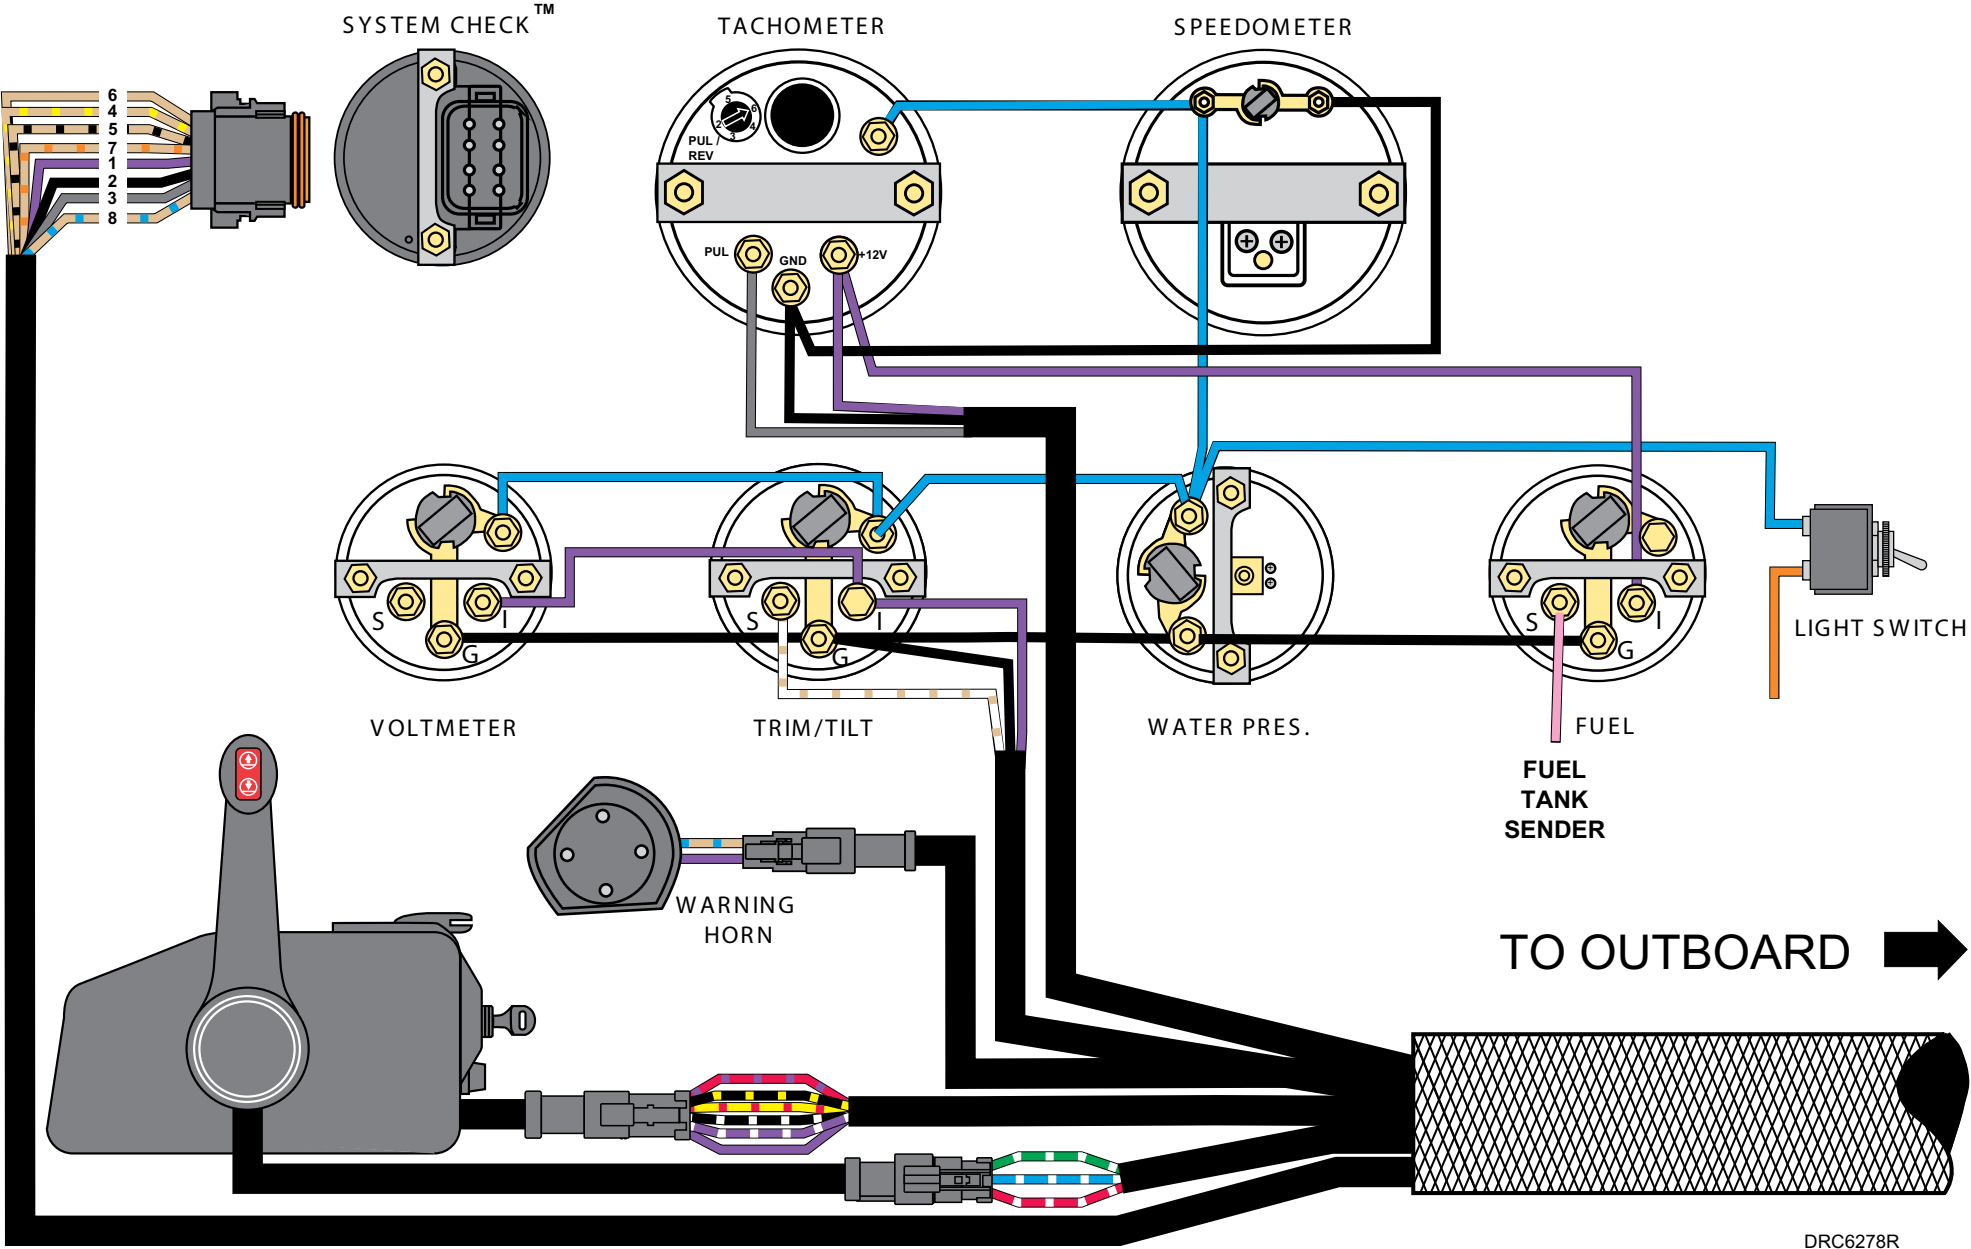

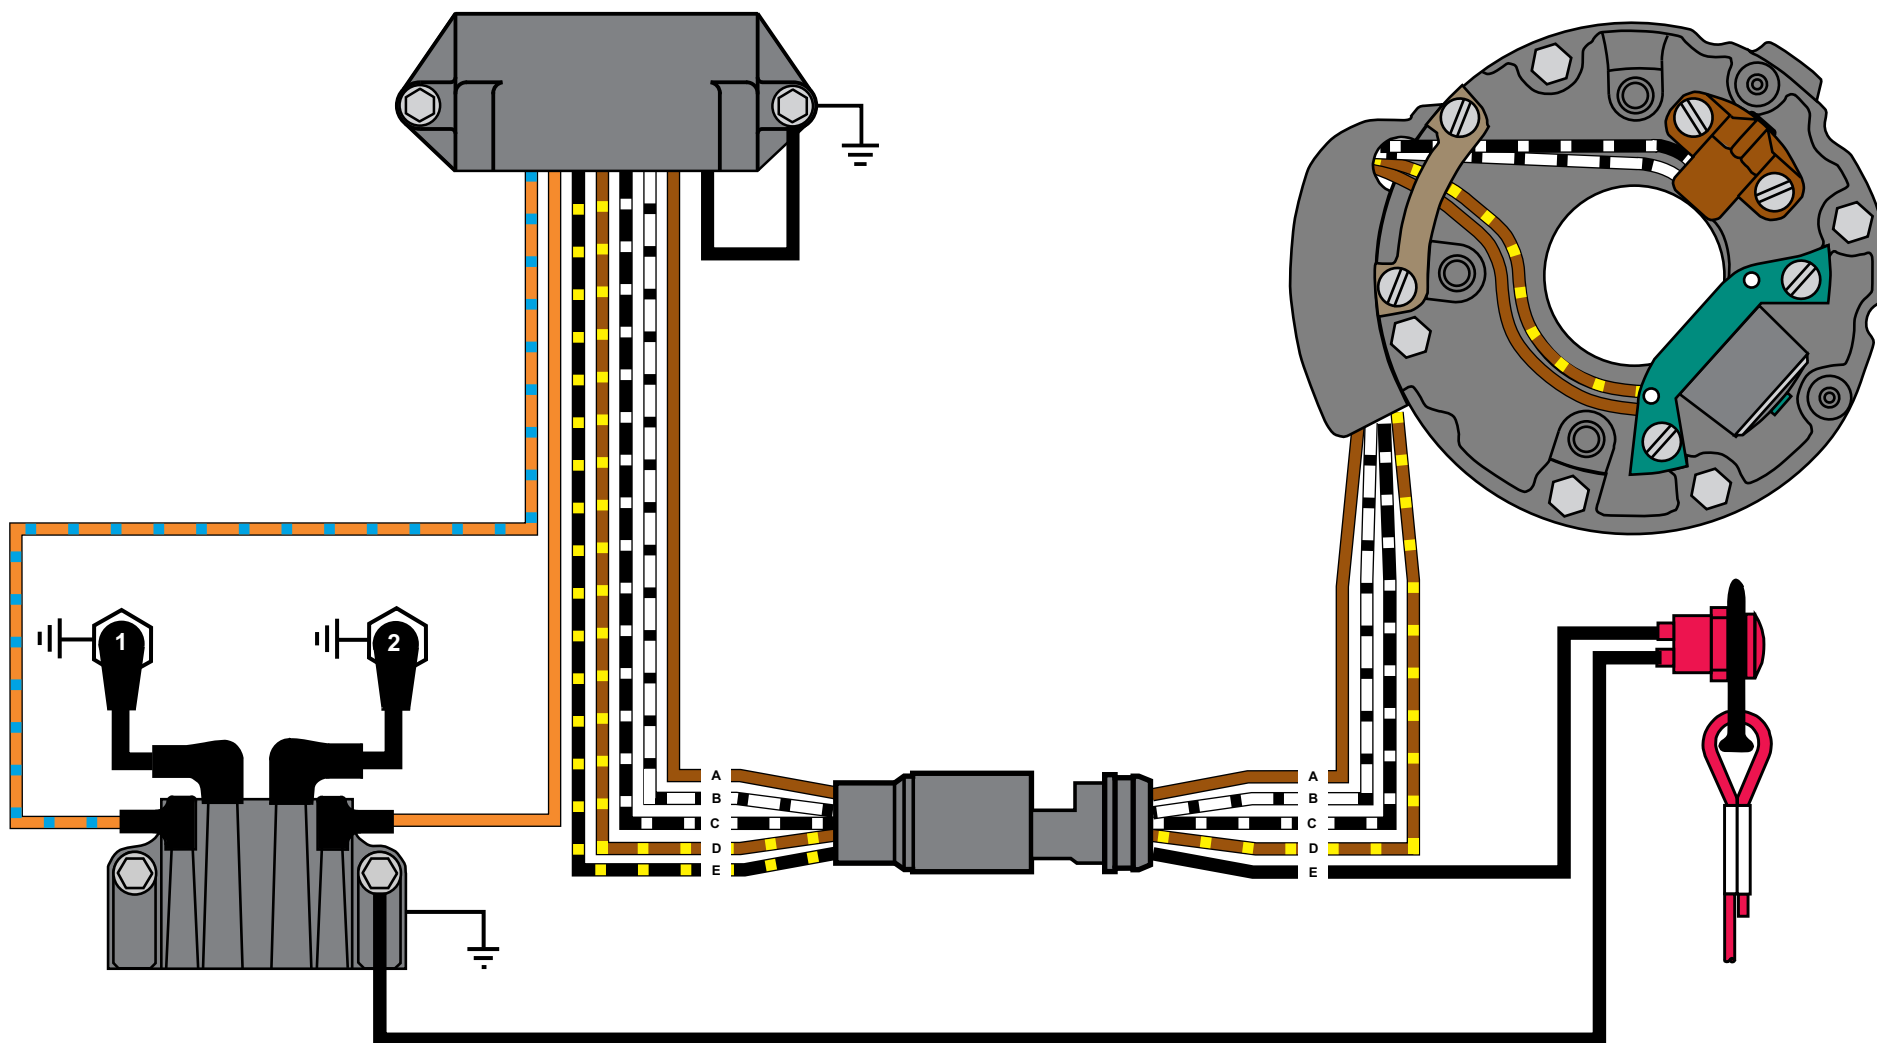

9.9/15HP

EVINRUDE®
Johnson®
GENUINE PARTS

